

Grant AERONA

Smart Heat Pump System Controller

Installation & Operation Instructions



IMPORTANT NOTE FOR INSTALLERS

These instructions are intended to guide installers on the installation and commissioning of the Grant Aerona Smart Controller intended for use with Grant Aerona air source heat pumps. After installing the unit, leave these instructions with the user.

SPECIAL TEXT FORMATS

The following special text formats are used in these instructions for the purposes listed below:

! WARNING !

Warning of possible human injury as a consequence of not following this instruction.

! CAUTION !

Caution concerning likely damage to equipment or tools as a consequence of not following this instruction.

! NOTE !

Used for emphasis or information not directly concerned with the surrounding text but of importance to the reader.

PRODUCT CODES AND SERIAL NUMBERS COVERED

The serial numbers used on Grant Aerona Smart Controller consist of a ten digit numerical code.

For example:

1006986828

This serial number can be found on a label attached to the wiring centre.

CUSTOMER SUPPORT CENTRE

Grant UK provides an online support centre for Heating Professionals and Homeowners to access post-installation care, advice and maintenance support for Grant products. Follow the QR codes below to access your relevant Customer Support Centre.



SUPPORT HUB

Homeowner



SUPPORT HUB

Professional



GRANT ENGINEERING (UK) LIMITED

Frankland Road, Blagrove Industrial Estate, Swindon, SN5 8YG

Tel: +44 (0)1380 736920 Fax: +44 (0)1380 736991

Email: info@grantuk.com www.grantuk.com

This manual is accurate at the date of printing but will be superseded and should be disregarded if specifications and/or appearances are changed in the interests of continued product improvement. However, no responsibility of any kind for any injury, death, loss, damage or delay however caused resulting from the use of this manual can be accepted by Grant Engineering (UK) Limited, the author or others involved in its publication.

All goods sold are subject to our official Conditions of Sale, a copy of which may be obtained on application.

© Grant Engineering (UK) Limited. No part of this manual may be reproduced by any means without prior written consent.

! CAUTION !

Electric device under voltage!

Before any action related to the power supply (cables connection, device installation etc.), check to ensure the controller is not connected to the mains power. Installation should be done by a person with appropriate electrical qualifications. Improper cable connection could result in controller damage. The controller must not be installed in steamy conditions or exposed to water, such as bath or shower room

SOFTWARE HISTORY

As with any software based solution, the Grant Aerona Smart Controller is subject to updates for its operation and functionality.

To view the software version of an installed Grant Aerona Smart Controller, refer to appendix H.1.2 - How to obtain the UID which also displays the current software/firmware versions.

Alternatively (if registered), visit your ecoNET24 account and select 'DEVICE SETTINGS' and refer to 'CONTROLLER SOFTWARE VERSIONS'

Refer to the table below for manual revisions and their related software versions.

Manual revisions & Software versions

Manual Revision	Wiring Centre	Touchscreen display
1.0	S002.04 h2.3.0	S.002.11 h1.0.0 C14.01.05
1.1	S002.04 h2.3.0	S.002.11 h1.0.0 C14.01.05

CONTENTS

1	INTRODUCTION	4	10	WI-FI HUB	40
1.1	General	4	10.1	General	40
1.2	Safety information	4	10.2	Connection to wiring centre	40
1.3	Information about documentation	4	10.3	Connection to Internet	41
1.4	Storage of documentation	4			
1.5	Conditions of storage and transport	4	11	SERVICING	42
1.6	Product contents	4	11.1	Component replacement	42
1.7	Additional components	4	11.2	Accessories & spare parts	42
2	TECHNICAL DATA	5	12	EC DECLARATIONS OF CONFORMITY	43
2.1	Wiring centre	5			
2.2	Touchscreen display	6	13	HEALTH AND SAFETY INFORMATION	44
3	INSTALLATION	7	14	DISPOSAL AND RECYCLING	44
3.1	General	7	15	GUARANTEE	45
3.2	Regulations and Standards	7			
3.3	Touchscreen display	7		APPENDIX A - WIRED THERMOSTAT	47
3.4	Wiring centre	8	A.1	General	47
3.5	Temperature sensors	8	A.2	Installation	47
3.6	Connecting pumps	9	A.3	Thermostat panel	47
3.7	Connecting 3-port mixing valves	9	A.4	Pairing	48
3.8	Connecting relays	9	A.5	Changing setpoint temperature	48
3.9	Smart flow sensor	9	A.6	Hotel mode	48
3.10	Room thermostat connection	9	A.7	User Menu	48
3.11	Connecting the Wi-fi Hub	9	A.8	Error codes	49
3.12	Connecting the Mod-Bus	9			
4	SYSTEM HYDRAULICS	10		APPENDIX B - WIRELESS THERMOSTAT AND RECEIVER	50
4.1	Hydraulic Connections	10	B.1	General	50
4.2	Installation Pack Summary	10	B.2	Installing wireless receiver	50
4.3	Hydraulic Controls	10	B.3	Wireless thermostat	50
4.4	Hydraulic connections - Pack P	12	B.4	Multiple thermostat support	51
4.5	Hydraulic connections - Pack Q	13	B.5	Thermostat Panel	51
4.6	Hydraulic connections - Pack R	14	B.7	Hotel Mode	52
4.7	Additional Drawings	15	B.8	Memory reset of the wireless receiver	52
5	ELECTRICAL CONNECTIONS	16	B.9	Alarms	52
5.1	Connecting the wiring centre	16			
5.2	Component connections	16		APPENDIX C - 3-PORT MIXER VALVE	53
5.3	Power supply failure	16	C.1	General	53
5.4	Wiring centre Layout	17	C.2	Clockwise rotation	53
5.5	Electrical connections - Pack P	18	C.3	Anti-clockwise rotation	54
5.6	Electrical connections - Pack Q	19			
5.7	Electrical connections - Pack R	20		APPENDIX D - ANTI-LEGIONELLA & SUPPLEMENTARY HEATING	55
5.8	Additional Drawings	21	D.1	General	55
6	SYSTEM CONFIGURATION WITH TOUCHSCREEN DISPLAY	22	D.2	Wiring	55
6.1	First switch-on	22	D.3	Legionella protection	55
6.2	System configuration creator	22	D.4	Supplementary heating	55
6.3	Weather compensation	24			
6.4	Circuit control settings	25		APPENDIX E - SMART FLOW SENSOR	56
6.5	Common Settings	25	E.1	General	56
7	TOUCHSCREEN DISPLAY OPERATION AND SETTINGS	26	E.2	Installation	56
7.1	Touchscreen display	26	E.3	Electrical	56
7.2	Smart Controller operation	27	E.4	Sensor configuration	56
7.3	Circuit settings	27			
7.4	Legionella protection	29		APPENDIX F - COMMISSIONING CHECKLIST	57
7.5	Time schedules	29			
7.6	Heat pump schematic	30		APPENDIX G - AERONA3 RETROFIT	59
7.7	System schematic	30	G.1	General	59
7.8	Circuit control	31	G.2	Serial Number	59
7.9	User settings menu	32	G.3	Existing Controls	59
7.10	Stored system settings	32	G.4	Underfloor Heating controls	59
8	SERVICE SETTINGS - INSTALLER	33		APPENDIX H - ECONET	60
9	HEAT PUMP PARAMETERS INSTALLER	38	H.1	Econet24	60
				ONLINE RESOURCES	62
				NOTES	63

1 INTRODUCTION

1.1 GENERAL

The Grant Aerona Smart Controller is intended for controlling a central heating and domestic hot water with a Grant Aerona heat pump. The controller may be used in domestic and light commercial applications.

1.2 SAFETY INFORMATION

Requirements concerning safety are listed in particular Sections of this instruction manual. Apart from these it is necessary to fulfil the following requirements:

- The controller should be installed by qualified installer only and in accordance with current Standards and Regulations.
- Before starting the installation, repairs or maintenance and during the execution of any connection works, it is necessary to switch off the mains power supply and make sure that no terminals and electrical wires are live.
- Even after turning off wiring centre terminals it can still be under a dangerous level of voltage.
- The controller can be utilised only in accordance with its intended use.
- Additional measures should be used in order to protect the central heating and DHW system against the results of controller failure or software errors. Particularly control measures which reduce DHW temperature in order to protect users against burns.
- Parameters should be set in accordance to the heating system design.
- The controller is not an intrinsically safe device. It means that in case of failure it can be a source of sparks or high temperature which can cause fire or explosion.
- Modification of the programmed parameters should be made only by the installer.
- Use only in central heating system made in accordance with currently valid regulations.
- Electrical system including the controller should be 3-wired and protected with fuse selected in accordance with used loads.
- The controller components cannot be used with damaged housing.
- Never make any modifications in controller components structure.
- The controller consists of two key elements: Touchscreen display and wiring centre. Any replaced components must be compatible.
- Keep children away from the controller.

1.3 INFORMATION ABOUT DOCUMENTATION

This manual contains important information significant for safety issues for both user and installer. The user should read both parts of the manual to familiarise themselves.

Grant UK are not responsible for any damages caused by failure to follow these instructions.

1.4 STORAGE OF DOCUMENTATION

This installation and operation manual, as well as any other applicable documentation, should be stored in a safe place for future reference.

1.5 CONDITIONS OF STORAGE AND TRANSPORT

The controller cannot be exposed to direct effects of weather, i.e., rain and sunlight. During transport, the device cannot be exposed to vibrations greater than typical for normal road transport.

1.6 PRODUCT CONTENTS

This Grant Aerona Smart Controller is supplied for assembly on installation and is carefully packed with packing materials.

Table 1-1: Product contents

Quantity	Item
1	Touchscreen display
1	Touchscreen display mounting plate
1	Touchscreen display cable (1m)
1	Controller wiring centre
1	Outdoor weather sensor
3	Water temperature sensors (3 x 4m)
1	ecoLINK Cable
1	Wi-Fi Hub Kit <ul style="list-style-type: none">- Wi-Fi Module- Power Supply & cable- 10/100 Base-T Ethernet Cable
1	Smart Flow sensor kit (including 1m cable)
1	Accessory & Fixing Pack <ul style="list-style-type: none">- 6 x Wall plugs and screws- 6 x Cable clamps- 12 x Cable clamp screws- 2 x 10 pin pluggable terminal blocks- 2 x 14 pin pluggable terminal blocks- 2 x 4 pin pluggable terminal blocks- 2 x 2 pin pluggable terminal blocks
1	Heat Pump connection kit* <ul style="list-style-type: none">- 2 x Flexible Hoses & 90° Elbow- 2 x Isolation Valves

* The Heat Pump connection kit will need to match the Heat pump model it is being installed with.

1.7 ADDITIONAL COMPONENTS

Grant UK offer a number of additional components compatible with the Aerona Smart Controller for consideration.

Table 1-2: Additional components

Part Code	Item
HPIDSMARTWRTR	Wireless thermostat (with receiver)
HPIDSMARTWRT	Wireless thermostat (no receiver)
HPIDSMARTRECEIVER	Wireless thermostat receiver
HPIDSMARTHRT	Wired thermostat
HPIDSMARTSEN2	Water temperature sensor with 2m cable
HPIDSMARTSEN4	Water temperature sensor with 4m cable
HPIDSMARTIMM	Immersion Heater Relay*

*supplied as part of Aerona Smart Controller installation packs

2 TECHNICAL DATA

2.1 WIRING CENTRE

Table 2-1: Technical Data

Grant Aeron Smart Controller - Wiring Centre

Power supply	230V AC, 50Hz
Controller current consumption	0.4 A ³
Maximum rate current	6 (6) A
Protection class	IP 20 ⁴
Ambient Temperature	0 to 50° C
Storage temperature	0 to 65° C
Relative humidity	5 to 85% without water vapour condensation
Outdoor Weather Sensor working range	-40 to 110° C
Measurement accuracy: Water & Outdoor Weather Sensors	±2° C
Wiring centre dimensions	234mm x 225mm x 64mm
Standards	EN 60730-2-9. EN 60730-1
Software class	A, according to EN 60730-1
Installation method	Wall mounted

³ Current consumed only by the controller. Overall current consumption depends on number of devices

⁴ After installing all cable clamps.

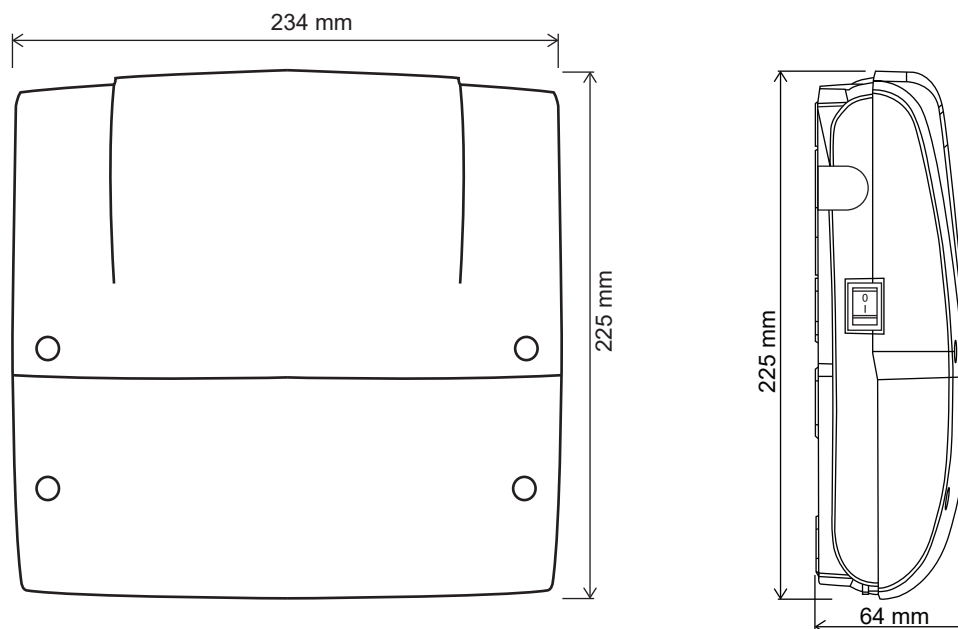


Figure 2-1: Wiring centre dimensions

2.2 TOUCHSCREEN DISPLAY

Table 2-2: Technical Data - Touchscreen Display	
Grant Aeron Smart Controller - Touchscreen Display	
Power supply	12V DC directly the Wiring centre
Touchscreen display current consumption	0.15A
Display	Touch screen, graphical 480px x 272px
Protection class	IP 20
Ambient temperature	0 to 50° C
Relative humidity	0 to 65° C
Touchscreen display dimensions	144mm x 97mm x 20mm
Standards	EN 60730-2-9, EN 60730-1
Software class	A, according to EN 60730-1
Installation method	Wall mounted

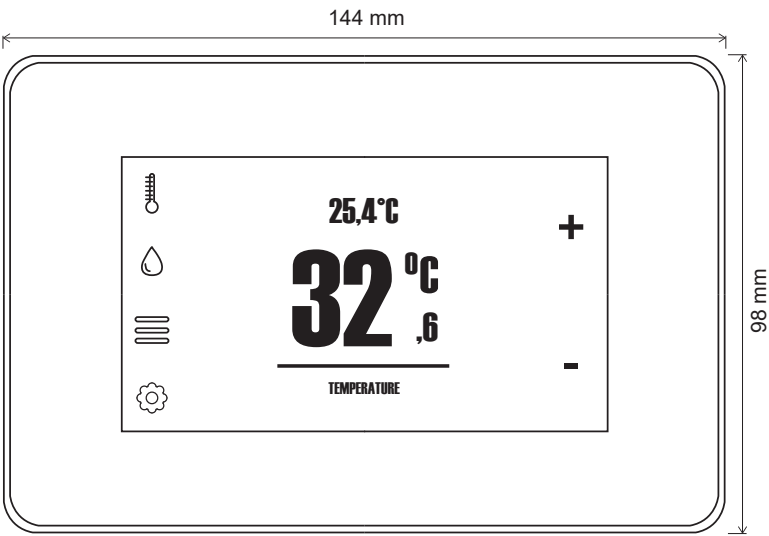


Figure 2-2: Touchscreen display dimensions

3 INSTALLATION

IMMEDIATE CONSIDERATION SHOULD BE GIVEN TO HYDRAULIC (REFER TO SECTION 4) AND ELECTRICAL (REFER TO SECTION 5) CONNECTIONS PRIOR TO INSTALLATION FOR WIRING CENTRE POSITIONING.

3.1 GENERAL

This Section gives details of the installation process for the Grant Aerona Smart controller.

These installation instructions must be read in conjunction with the Grant Aerona air source heat pump installation instructions (provided with the unit).

Before starting to install the Grant Aerona Smart controller please read the Health and Safety information given in Section 13 of these installation instructions.

Similarly, before starting any installation work on the Grant Aerona air source heat pump please read the Health and Safety information given in Section 14 of the Aerona³ installation instructions.

3.2 REGULATIONS AND STANDARDS

The installation of the Grant Aerona Smart controller and a Grant Aerona air source heat pump must be in accordance with the following recommendations, as applicable:

- Building Regulations for England and Wales, and Building Standards for Scotland
- Local Bylaws (check with the Local Authority for the area)
- Water Supply (Water Fittings) Regulations 1999
- MCS Installer Standards
- MIS3005-D The heat pump Standard (Design)
- MIS3005-I The heat pump Standard (Installation)
- MCS020 MCS Planning Standard

The installation should also be in accordance with the latest edition of the following standards and Codes of Practice:

- BS7671 and amendments
- BS EN 12831

3.3 TOUCHSCREEN DISPLAY

The touchscreen display is designed to be wall mounted. It must not be installed in steamy conditions such as a bath or shower room. The touchscreen display should be mounted at a height allowing comfortable operation, typically 1.5m above the floor. Refer to Figure 3.1.

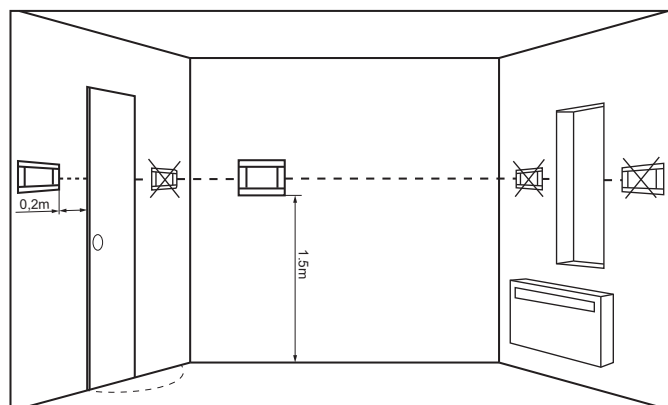


Figure 3-1: Touchscreen display positioning

To reduce measurement disturbances avoid locations exposed to strong sunlight, with poor air circulation, near heating equipment, and directly at the door and windows, typically 200mm from the edge of the door.

! NOTE !

When selecting the cable connecting the touchscreen display with the wiring centre, you must use a cable with single wire resistance lower than 8Ω. Total cable length must not exceed 100m.

3.3.1 FITTING THE TOUCHSCREEN DISPLAY

The touchscreen display installation should be done according to the following guidelines:

1. Detach the mounting plate from the back of the touchscreen display. The plate is attached to the touchscreen with latches. Use a flat screwdriver to detach the plate. (See Figure 3-2)
2. Using a sharp tool cut out holes in four places of the cover for the screw terminals. (See Figure 3-3)

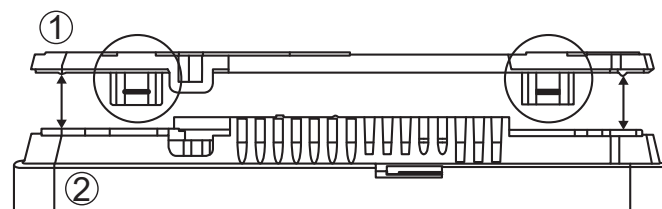


Figure 3-2: Touchscreen display & back plate

3. Connect the cable to the screw terminal as described on the plate. Refer to Figure 3-4. The cable can be recessed in the wall or it can run over its surface - In this case the cable should be additionally placed in the cable channel.

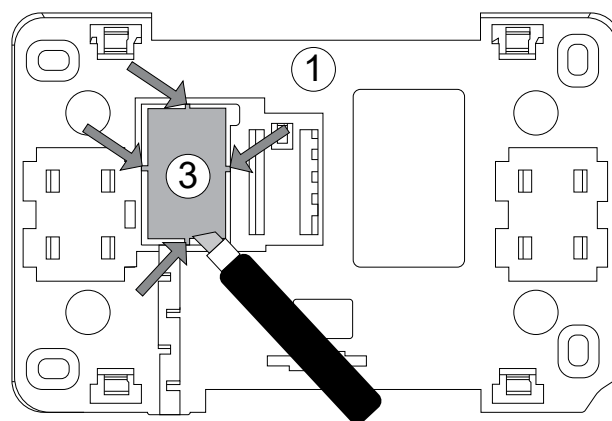


Figure 3-3: Mounting plate cutaway

4. Drill holes in the wall and use screws to fix the mounting plate in the chosen place of the wall, maintaining its proper position (Refer to Figure 3-4)
5. Attach the panel to the mounting plate using latches

! NOTE !

The touchscreen display connection cable can not be ducted with other electrical cables that are part of the building mains and should not be routed near devices that emit a strong Electromagnetic field

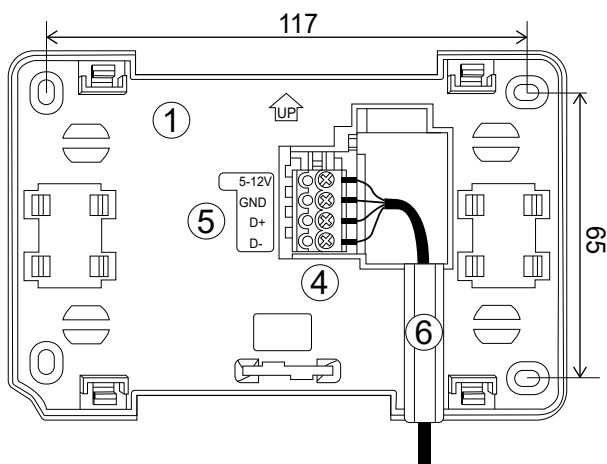


Figure 3-4: Mounting plate wiring

Table 3-1: Touchscreen display & mounting plate

No	Description
1	Touchscreen display mounting plate
2	Touchscreen display
3	Mounting plate cut-away
4	Screw terminal
5	Terminal connection guide
6	Cable Channel

3.4 WIRING CENTRE

The wiring centre should be located in a suitable and neutral position to avoid damage and tampering.

3.4.1 FITTING THE WIRING CENTRE

The wiring centre should be mounted on to a flat surface, e.g., wall.

1. Drill and fit 2 mounting points for the mounting holes provided on the upper Section of the back of the wiring centre. (Refer to Figure 3-5).
2. Slot the wiring centre in place ensuring it is fully down.
3. Remove wiring centre lower front cover (via 2 screws) and mark position of lower 2 holes. (Refer to Figure 3-5)
4. Remove wiring centre, drill and fit wall plugs.
5. Set wiring centre back in position and fix controller with lower holes to secure in final position.
6. Ensure the wiring centre is securely in place and replace lower controller case front.

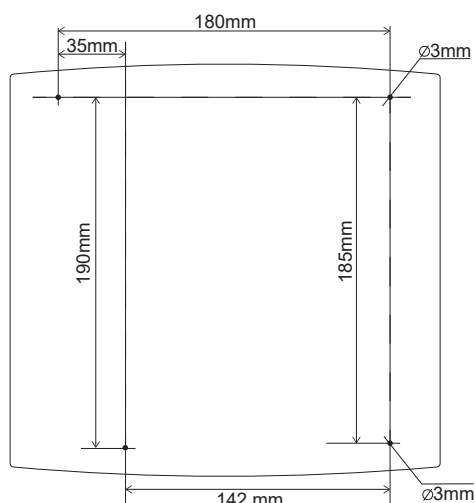


Figure 3-5: Wiring centre fixing centres

! NOTE !

Ensure to leave adequate access to the ON/OFF switch if the left side of the wiring centre is close to a side wall.

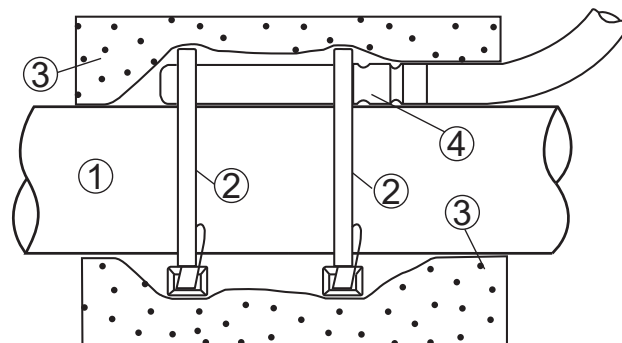


Figure 3-6: Circuit temperature sensor fitting

Table 3-2: Temperature Sensor installation

No	Description
1	Flow Pipe
2	Zip tie
3	Thermal insulation
4	Water Temperature sensor

3.5 TEMPERATURE SENSORS

The Smart Controller should be used only with the Grant supplied Outdoor and Water temperature sensors. At least one Water temperature sensor is necessary to activate the controller and will be required on any mixing circuits utilised.

3.5.1 WATER TEMPERATURE SENSORS

The water temperature sensors should be installed in an area of the system relevant to their function. For heating circuits the most suitable location would be after controlled valves on the circuit flow to give the most accurate reading for the circuit.

Insulate the sensors affixed to the external surface of the pipe using thermal insulation covering the sensor together with the pipe. (Refer to Figure 3-6)

3.5.1 OUTDOOR WEATHER SENSOR

The Outdoor weather sensor is the only external sensor to be used with the Grant Aeron Smart Controller. It should:

- Be fixed to the coldest wall in the building, usually a north wall under the roof.
- Not be exposed to direct solar radiation or rain.
- Be fixed on a minimum height of 2m above the ground and in a distance of at least 1.5m from windows, chimneys and other heat sources which could interrupt the temperature measurement.
- Use a connecting cable with a cross section of at least 0.5mm² and length of 25m. Polarity of wires is not important.

To fasten the external sensor to the wall.

1. Remove the front of the sensor housing. (Refer to Figure 3-7).
2. Position the rear part of the housing against the wall, mark and drill fixing holes.
3. Insert the supplied wall plugs, place the housing back into position and secure in place with the screws.

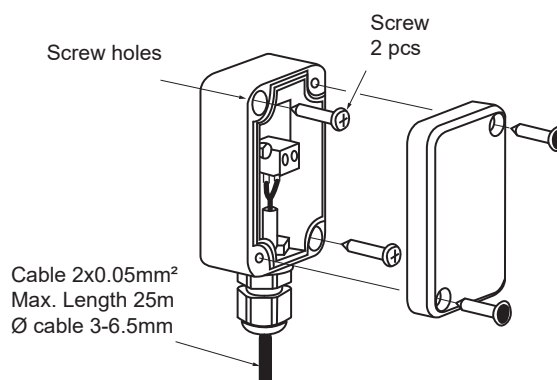


Figure 3-7: Outdoor weather sensor

3.5.3 TEMPERATURE SENSOR RESISTANCE

The accuracy of the temperature sensors can be checked by measuring their resistance at a given temperature. In case of significant differences between measured resistance value and values in Table below, the sensor should be replaced. (See Table 3-3)

Table 3-3: Temperature/Resistance chart

Water and Outdoor Weather sensors (10kΩ NTC)

Temp (°C)	Nom (Ω)
-30	175200
-20	96358
-10	55046
0	32554
10	19872
20	12488
30	8059
40	5330
50	3605
60	2490
70	1753
80	1256
90	915.4
100	677.3
110	508.30
120	386.60

3.6 CONNECTING PUMPS

Electrical connections from the circuit pumps to the controller should be according to the electrical schematics. See Section 4.

3.7 CONNECTING 3-PORT MIXING VALVES

The Grant Aeron Smart Controller should only be used with valve actuators equipped with limit switches and the 3-Port mixing valves can only be fitted as part of an adjustable circuit. Refer to Appendix C for further details on 3-Port mixing valves.

A water temperature sensor will also need to be installed after the mixing valve to measure the mixed water flow temperature for the circuit.

3.8 CONNECTING RELAYS

Relays for Anti-Legionella & supplementary heating from a buffer, volumiser, low loss header and a DHW cylinder can be used in conjunction with the Grant Aeron Smart controller.

They are to be connected via H1 (buffer, volumiser or low loss header) or H2 (DHW Cylinder) as these terminals are assigned to specific functions within the Smart Controller software.

Grant UK supply the Grant Smart Immersion relay as part of our installation packs. See Appendix D for further guidance on wiring specifics for Anti-Legionella & supplementary heating.

3.9 SMART FLOW SENSOR

The Grant smart flow sensor monitors the return flow rate to the heat pump. Refer to Appendix E for installation and configuration requirements.

3.10 ROOM THERMOSTAT CONNECTION

For optimum operation of the Grant Aeron Smart Controller each circuit within the system should have an individual thermostat assigned to it.

The room thermostats connect to the wiring centre and can utilise the weather compensation function to automatically adjust the flow temperature within the circuit to provide a consistent room temperature. The required temperature is set on the room thermostat of the circuit concerned.

It is possible to use the touchscreen as a room thermostat.

3.10.1 ROOM THERMOSTAT WIRING

The Grant Aeron Smart controller can support multiple wired room thermostats (including the touchscreen display). Ensure that the correct polarity of the connections are respected when wiring the room thermostats/touchscreen display in parallel to the wiring centre. (Refer to Figure 3-8).

With the connections made you will need to pair and assign the room thermostats with their own address.

See Appendix A for installation and operation guidance.

! CAUTION !

Maximum length of wires should not exceed 30m. This length may be longer if the wires used have cross-section exceeding 0.5 mm².

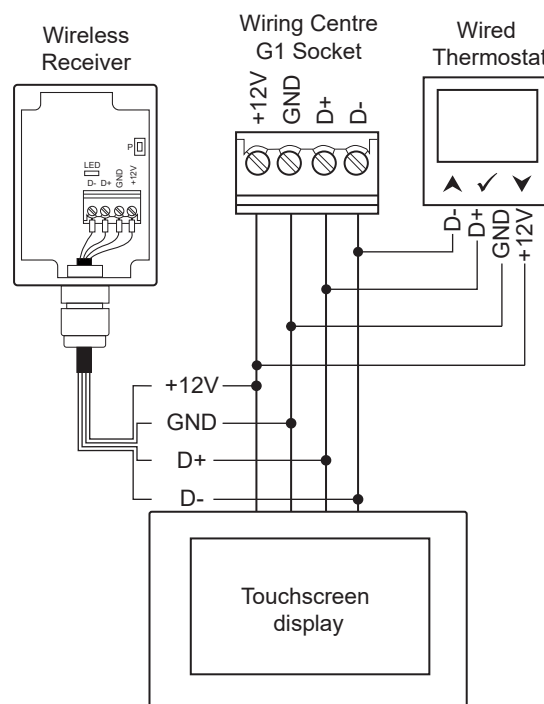


Figure 3-8: Wired and Wireless wiring schematic

3.10.2 WIRELESS ROOM THERMOSTAT

Connecting a wireless room thermostat requires a wireless receiver to be connected to the G1 socket, in the same fashion as the wired thermostat, and the thermostat(s) paired to the wireless receiver. The wireless receiver can support up to 3 wireless thermostats.

See Appendix B for Installation and operation guidance.

! NOTE !

Close attention must be paid to the 4 connections (+12V, GND, D+ and D-). Ensure they match to corresponding wires from touchscreen display. (+12V is also referenced as VCC).

3.11 CONNECTING THE WI-FI HUB

The Wi-Fi hub should be connected between the USB socket and the G3 socket of the wiring centre using the ecoLINK cable supplied. Refer to Section 10 for installation and user guidance.

3.12 CONNECTING THE MOD-BUS

The Grant Aeron Smart controller communicates with the Aeron heat pump via the 2 cable Mod-Bus connection, which is made between RS485 Terminals 15(+) & 16(-) of the heat pump and the G2 socket of the Grant Aeron Smart controller. Ensure polarity of connections is matched from the Aeron heat pump to the G2 socket. Refer to Section 5 for further details.

4 SYSTEM HYDRAULICS

4.1 HYDRAULIC CONNECTIONS

The Grant Aerona Smart controller can be utilised in a number of ways via the Smart controller configuration creator and settings configuration.

! NOTE !

All enclosed hydraulic schematics demonstrate concept installations using Grant Aerona heat pump installation packs. Refer to Online resources for a link to the Grant UK schematics library for further concept drawings.

Refer to the Grant Aerona Heat pump manual provided for further information regarding sealed system & DHW considerations.

Refer to Section 5.5, 5.6, 5.7 and 5.8 for corresponding electrical connection drawings.

4.2 INSTALLATION PACK SUMMARY

4.2.1 INSTALLATION PACK P

Installation Pack P - Direct S-Plan with non pre-plumbed cylinder.

Table 4-1: Installation Pack P

Order code: HPIDR32PACKP

FlexiFoot Kit

Mag One Filter

18L System Kit

32A Isolator

Grant Smart Immersion Relay

Refer to Section 4.4 for Hydraulic schematic.

4.2.2 INSTALLATION PACK Q

Installation Pack Q - Open Loop Direct using 3-Port Diverter and Mixing Valve with non pre-plumbed cylinder.

Table 4-2: Installation Pack Q

Order code: HPIDR32PACKQ

Flexi-Foot Kit

Mag One Filter

18L System Kit

32A Isolator

Grant Smart Immersion Relay

28mm 3 Port Diverter Valve

22mm 3 Port Mixing Valve

Refer to Section 4.5 for Hydraulic schematic.

4.2.3 INSTALLATION PACK R

Installation Pack R - Open Loop Direct using 3 Port Diverter Valve with non pre-plumbed cylinder.

Table 4-3: Installation Pack R

Order code: HPIDR32PACKR

Flexi-Foot Kit

Mag One Filter

18L System Kit

32A Isolator

Grant Smart Immersion relay

28mm 3 Port Diverter Valve

Refer to Section 4-6 for Hydraulic schematic.

4.3 HYDRAULIC CONTROLS

4.3.1 THERMOSTATIC PUMP BLOCKADE

Thermostatic pump blockade is a hydraulic control feature within the heating circuit setting that enables the Grant Aerona Smart controller to either switch a circuit pump/valve **OFF** (Thermostatic Pump blockade **ON**) or keep the circuit active (Thermostatic Pump blockade **OFF**) based on the status of an installed thermostat monitoring the circuit.

This function can be used to control both mixing and non-mixing circuits.

Refer to Section 7.8 for further details on how to activate and use this function.

Refer to Figure 4-1 and 4-2 for hydraulic control application for Circuit 1(non-Mixing) and Circuits 2 and 3 (Mixing) utilising 'Thermostatic pump blockade'.

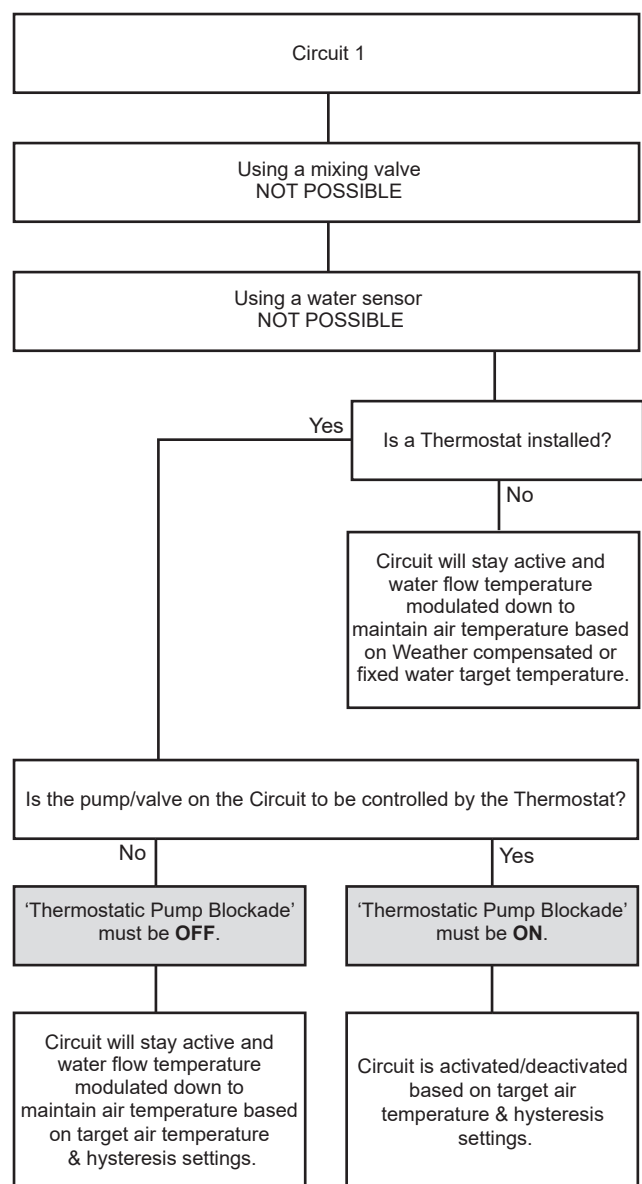


Figure 4-1: Circuit 1 Hydraulic controls

4.3.2.1 PUMP ONLY/MIXING

Circuits 2 and 3 can function as either a mixing or non-mixing space heating circuit. Using the System configuration creator (Refer to Section 6), you are prompted to confirm if the circuit is controlled with or without a mixer, which in turn will create the circuit and apply the required settings.

If a mixer is not specified, 'PUMP ONLY' will be automatically set to **ON** within the circuit control settings. This will also display the 'CIRCUIT STOP FROM PRESET TEMP' control within the circuit settings. Refer to Section 7.8 and Figure 7-13.

If a mixer is specified, 'PUMP ONLY' will be automatically set to **OFF** within the Circuit control settings. The menu will not display 'CIRCUIT STOP FROM PRESET TEMP', but will have the option for the mixing valve including the 'VALVE OPENING TIME' which will be used by the Smart Controller to open and close the mixing valve for the desired circuit.

4.3.2.2 CIRCUIT STOP FROM PRESET TEMP

'CIRCUIT STOP FROM PRESET TEMP' is a hydraulic control feature within a mixing heating circuit setting that enables the Grant Aeron Smart controller to either switch a circuit pump/valve **OFF** (Circuit stop on Preset temp **ON**) or keep the circuit active (Circuit stop on Preset temp **OFF**) based on the status of an installed water temperature sensor on the flow in the circuit.

This function can only be used on Circuits 2 and 3 when used as a non-mixing circuit.

Refer to Section 7.8 for further details on how to activate and use this function.

Refer to Figure 4-2 for hydraulic control application for Circuit Circuits 2 and 3 (Mixing) utilising 'PUMP ONLY', 'CIRCUIT STOP FROM PRESET TEMP' and 'THERMOSTATIC PUMP BLOCKADE'.



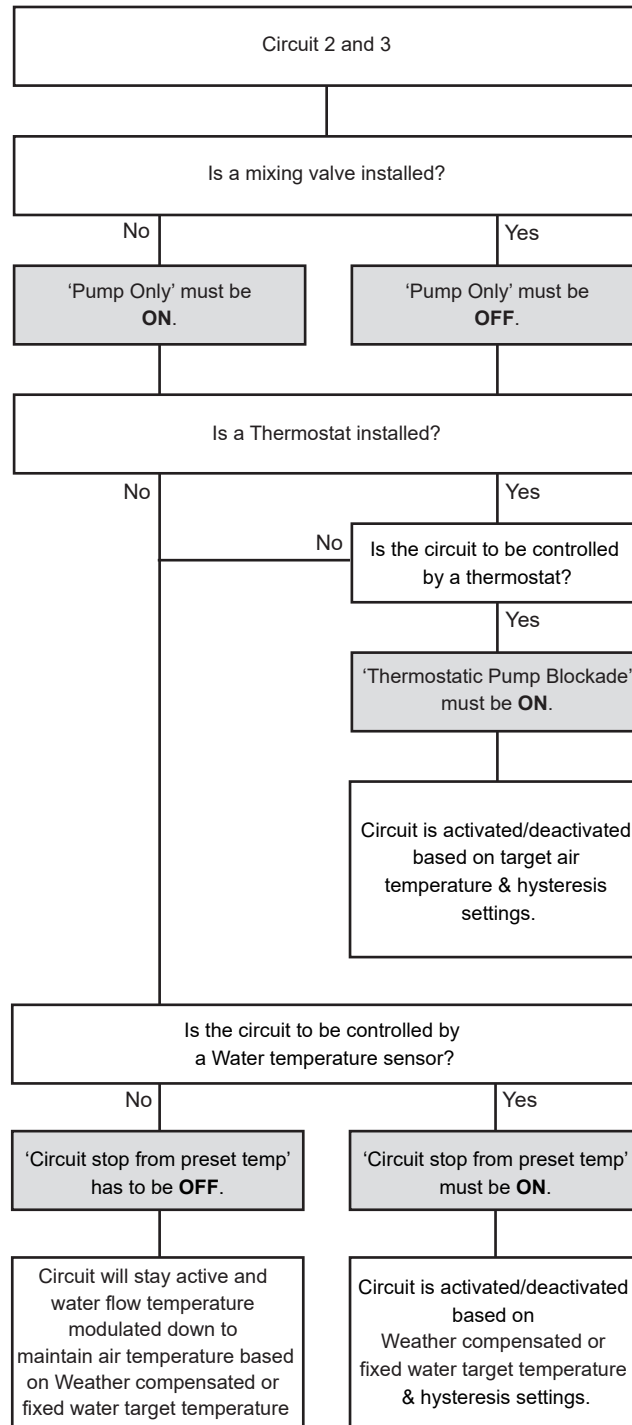


Figure 4-2: Circuit 2&3 Hydraulic controls

Item	Description
1	Aerona® ASHP
2	Flexible hoses & Isolation Valves¹
3	Isolation valve
4	Grant Volumiser or Low Loss Header*** (optional)
5	Anti-Vibration Mounts²
6	Flow sensor¹
7	Grant Mag One magnetic filter kit²
8	Wiring Centre¹
9	Touchscreen display¹
10	Room thermostat
11	Motorized 2-Port valve (DHW)
12	Automatic air vent
13	Cylinder immersion heater
14	DHW cylinder
15	Immersion heater relay²
16	Drain point²
17	Removable filling loop²
18	Double check valve²
19	Pressure gauge²
20	Expansion vessel²
21	Tundish²
22	Pressure relief valve²
23	Automatic bypass²
24	Thermostatic Radiator valve
25	Motorized 2-Port valve (Radiator circuit)
26	Motorized 2-Port valve (UFH circuit)
27	Thermostatic mixing valve
28	UFH mixing set pump
29	UFH manifold
30	Water temperature sensor¹
31	Outdoor weather sensor¹

¹ Supplied with the HPIDR32SMART* Smart Controller Kit
² Outputs available: 6, 10, 13 & 17 kW
³ Supplied with the HPIDR32PACKP

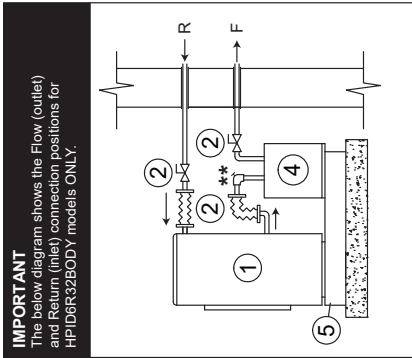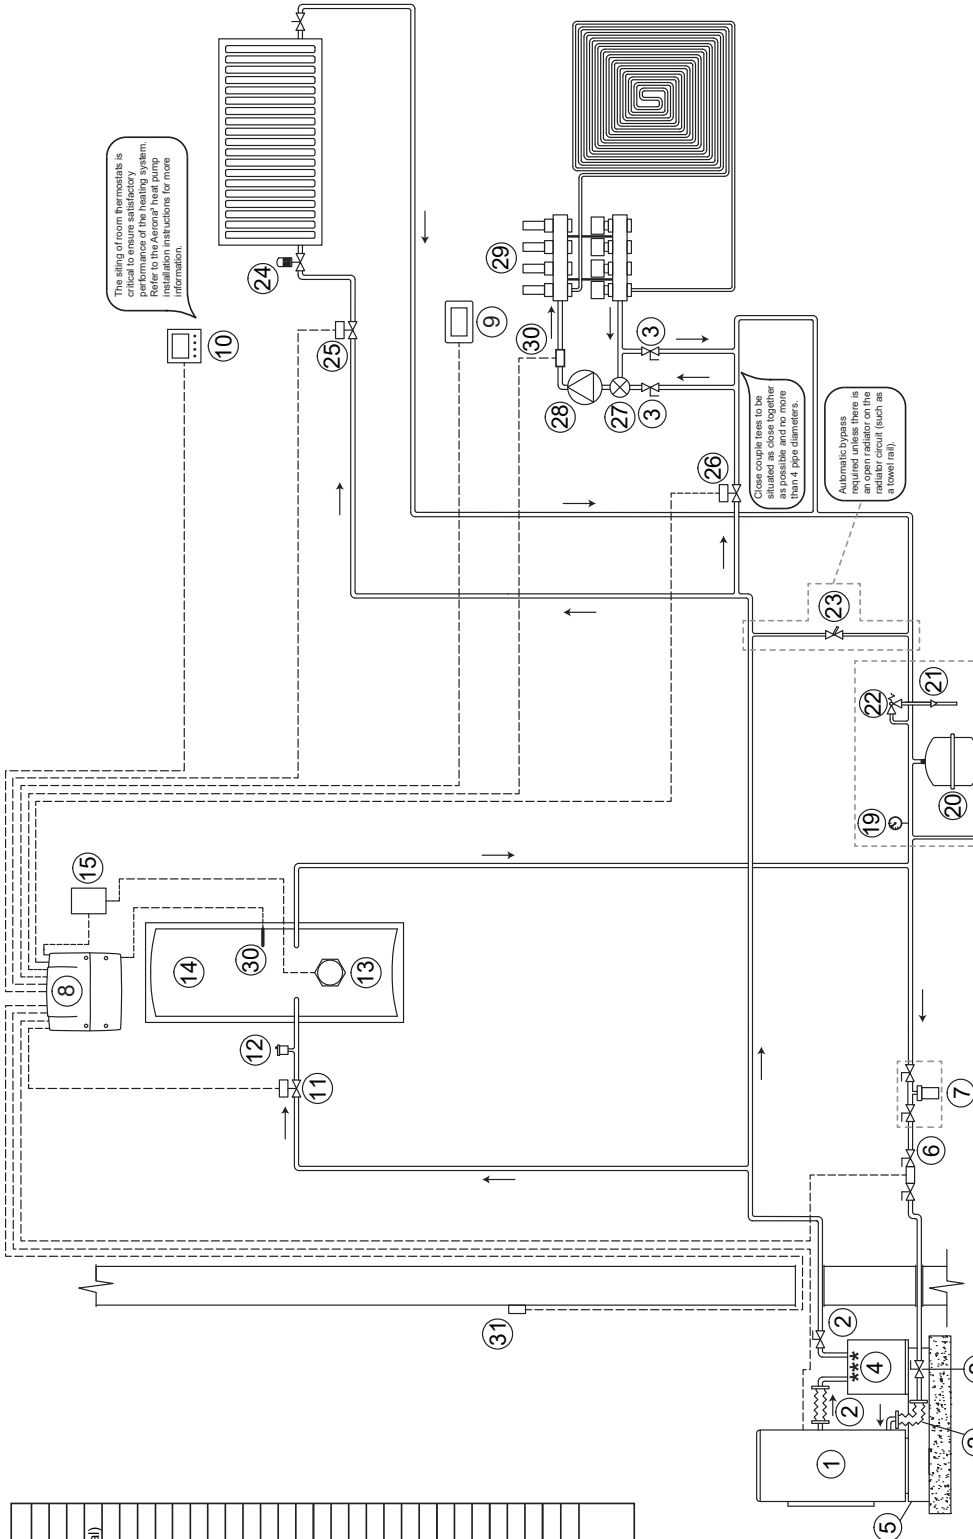

***Compression elbow c/w air vent (supplied with HPIDVOL30EXT16)

IMPORTANT
For positions of the Flow (outlet) and Return (inlet) connections on HPID10R32BODY, HPID13R32BODY and HPID17R32BODY models, see above.

! NOTE !

***30L external volumiser or low loss header are available as an optional component where there is insufficient system volume or where hydraulic separation is required (HPIDVOLEXT30HPIDSYLLHKT).

! NOTE !

Please refer to the Aerona® ASHP Installation instructions for details of the flow and return connections at the heat pump.

! NOTE !

For additional heater support from Grant External Volumiser, Refer to Grant Aerona Smart Controller installation manual and schematics HPSC-BUHS and HPCS-BUHE.

! NOTE !

This system schematic should be read in conjunction with the Grant Aerona Smart Controller installation instructions and wiring diagram HPCS-P001E.

Grant Sealed System Kit

Concept Drawing - P001 S-Plan

DHW Priority

DHW 2 port motorised valve (11) will open to allow flow to the DHW circuit on demand. The motor for the 2 Port motorised valves (25) & (26) will be stopped by the Smart Controller wiring centre closing the valves.

Circuit 1 - Radiators



Circuit demand controlled via thermostat (touchscreen or optional wired/wireless). Circuit 2 port motorised valve (25) operation is managed by the Smart controller using 'THERMOSTATIC PUMP BLOCKADE' function.

Circuit 2 - UFH

Circuit demand controlled via thermostat (touchscreen or optional wired/wireless). 2 port motorised valve (26) and circulating pump (28) operation is managed by the Smart controller using 'THERMOSTATIC PUMP BLOCKADE' function. Flow temperature into UFH manifold (29) is managed via thermostatic mixing valve (27) in case Circuit 1 flow temperature is too high for UFH. No actuators fitted on UFH manifold.

Item	Description
1	Aerona ASHP
2	Flexible hose & isolation valve ¹
3	Grant volumiser or Low loss header ^{***} (optional)
4	Anti-Vibration Mounts ²
5	Flow sensor
6	Grant Mag One magnetic filter kit ²
7	Wiring centre ¹
8	Touchscreen display ¹
9	Room thermostat
10	Automatic air vent
11	Cylinder immersion heater
12	DHW cylinder
13	Immersion heater relay ²
14	Drain point ²
15	Removable filling loop ²
16	Double check valve ²
17	Pressure gauge ²
18	Expansion vessel ²
19	Tundish ²
20	Pressure relief valve ²
21	Circulating pump
22	UFH manifold
23	3-Port diverter valve ²
24	3-Port mixing valve ²
25	Water temperature sensor ¹
26	Outdoor weather sensor ¹

¹Supplied with the HPIDR32SMART[™] Smart Controller Kit
²Outputs available: 6, 10, 13 & 17kW
^{***}Supplied with HPIDR32PACKQ

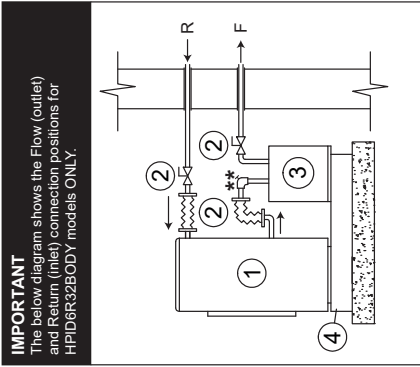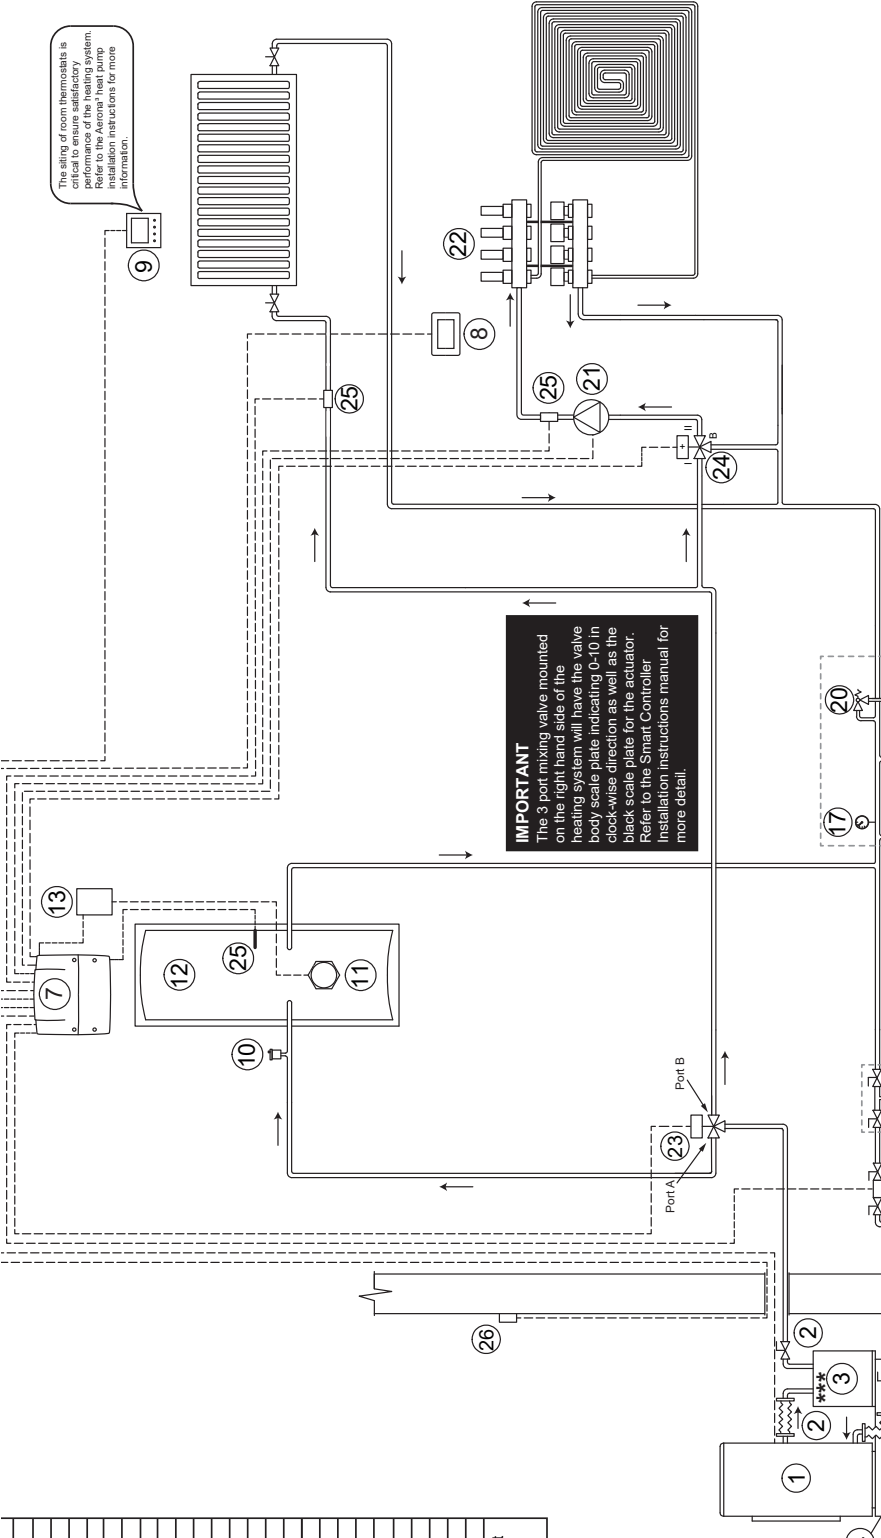

^{**}Compression elbow c/w air vent (supplied with HPIDVOL30EXT16)

Concept Drawing - Q001
DHW Priority
3-port diverter valve (23) will move from B to A to direct flow to the DHW cylinder on demand. The output for the UFH circulating pump (21) will be stopped and 3 port motorised mixing valve (24) will revert to 0% status.

Circuit 2 - Open loop radiators (No TRV)
Temperature control:
No Thermostat - Weather: Heat curve will control flow into the circuit based on ambient temperature.
No Thermostat - Fixed: Fixed water temperatures specified on controller.
via installed Thermostat: Circuit temperature configured via Touchscreen or additional thermostat. Circuit will receive Circuit 3 flow if only circuit 3 active.

Circuit 3 - UFH
Circuit demand controlled via thermostat
3 port motorised mixing valve (24) and circulating pump (21) operation is managed by the Smart Controller using 'THERMOSTATIC PUMP BLOCKADE' function. No actuators on UFH manifold (22) fitted
No Automatic Bypass required with Open Radiator circuit.



! NOTE !
For additional heater support from Grant External Volumiser, Refer to Grant Aerona Smart Controller installation manual and Schematics HPCS-BUHS and HPCS-BUHE.

! NOTE !
This system schematic should be read in conjunction with the Grant Aerona Smart Control installation instructions and wiring diagram HPCS-Q001E.

! NOTE !
^{***}30L external volumiser or low loss header are available as an optional component where there is insufficient system volume or where hydraulic separation is required (HPIDVOLT30/HPIDSYLLHKIT).

! NOTE !
Please refer to the Aerona ASHP installation instructions for details of the flow and return connections at the heat pump.

Item	Description
1	Aerona ASHP
2	Flexible hose & Isolation valve ¹
3	Isolation valve
4	Grant Volumiser or low loss header ^{***} (optional)
5	Anti-Vibration Mounts ²
6	Flow Sensor ¹
7	Grant Mag One magnetic filter ²
8	Wiring centre ¹
9	Touchscreen display ¹
10	Automatic air vent
11	Cylinder immersion heater
12	DHW cylinder
13	Immersion heater relay ²
14	Drain point ²
15	Removable filling loop ²
16	Double check valve ²
17	Pressure gauge ²
18	Expansion vessel ¹
19	Tundish ²
20	Pressure relief valve ²
21	3-Port diverter valve ²
22	Thermostatic Mixing Valve
23	UFH Pump
24	UFH Manifold
25	Water Temperature Sensor ¹
26	Outdoor Weather Sensor ¹
27	Room thermostat
* Supplied with the HPIDR32SMART [®] Smart Controller Kit	
¹ Outputs available: 6, 10, 13 & 17 kW	
² Supplied with HPIDR32PACKR	

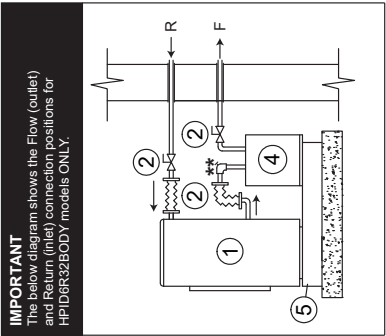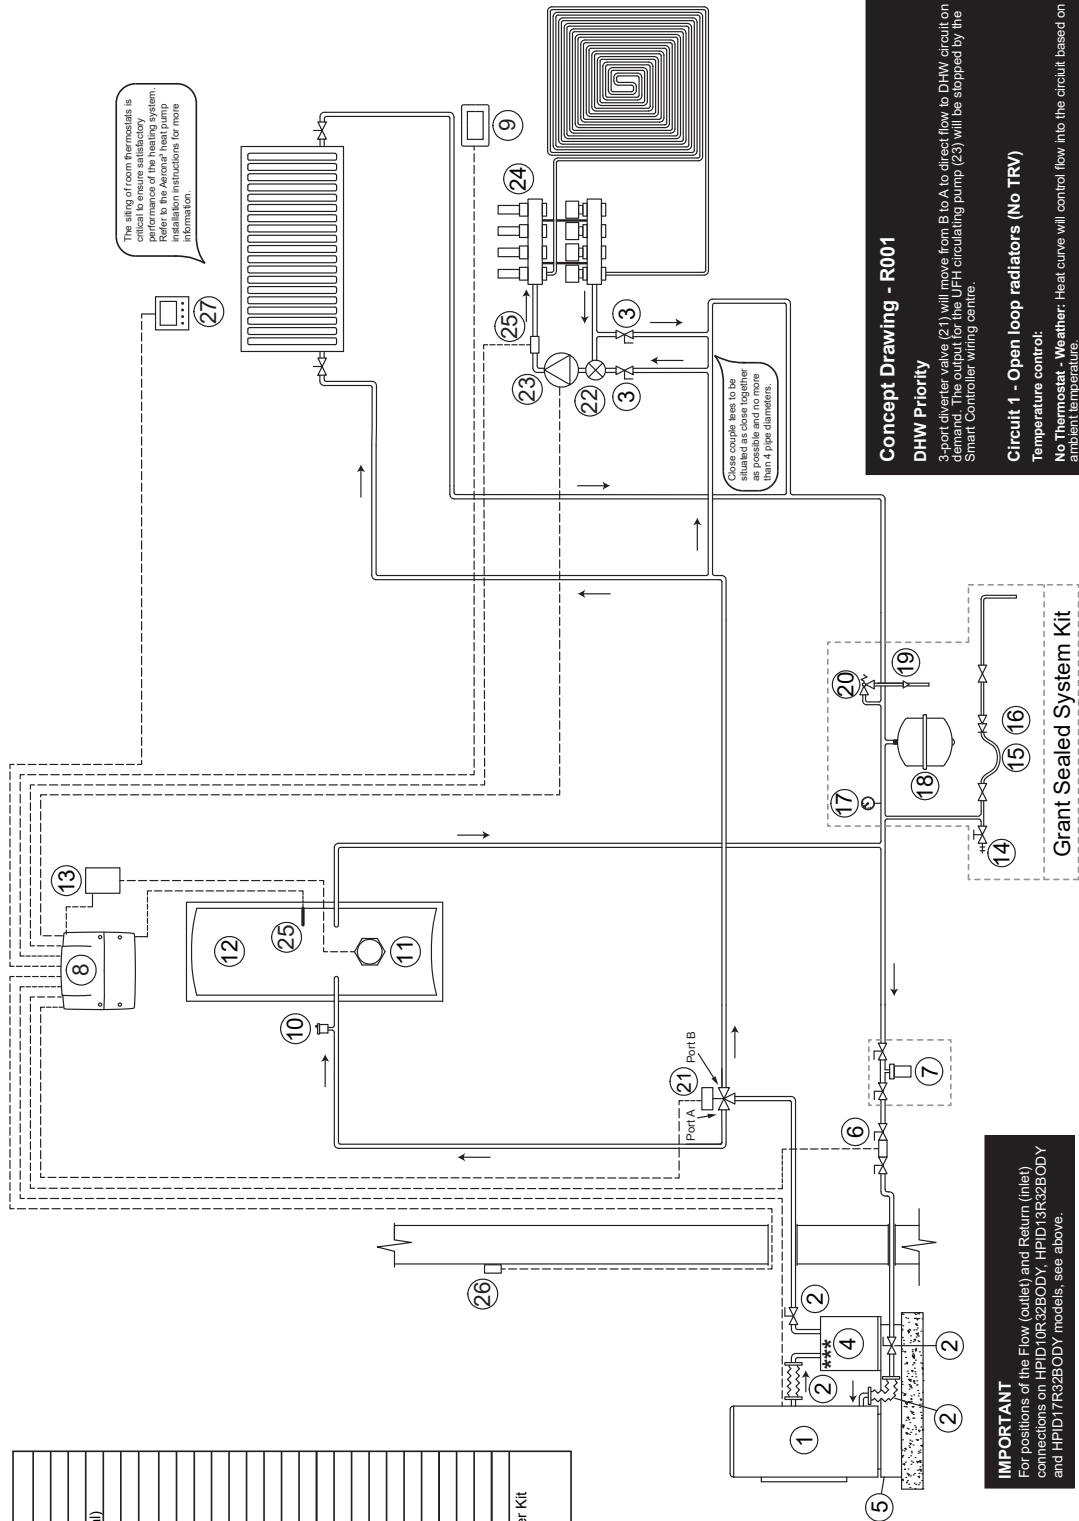

Concept Drawing - R001

DHW Priority
3-port diverter valve (21) will move from B to A to direct flow to DHW circuit on demand. The output for the UFH circulating pump (23) will be stopped by the Smart Controller wiring centre.

Circuit 1 - Open loop radiators (No TRV)
Temperature control:
No Thermostat - Weather: Heat curve will control flow into the circuit based on ambient temperature.
No Thermostat - Fixed: Fixed water temperatures specified on controller.
via Installed Thermostat: Circuit temperature configured via Touchscreen or additional thermostat. Circuit will receive Circuit 2 flow if only circuit 2 active.


Circuit 2 - UFH
Circuit demand controlled via thermostat.
UFH circulating pump (23) operation is managed by the Smart Controller wiring centre using THERMOSTATIC PUMP BLOCKADE function.
Flow temperature into UFH manifold (24) is managed via thermostatic mixing valve (22) in case Circuit 1 flow temperature is too high for UFH.
No Automatic Bypass required with Openloop Radiator circuit.

! NOTE !
For additional heater support from Grant External Volumiser. Refer to Grant Aerona Smart Controller Installation manual and Schematics HPCS-BUHS and HPCS-BUHE.

! NOTE !
This system schematic should be read in conjunction with the Grant Aerona Smart Control Installation instructions and wiring diagram HPCS-R001E.


! NOTE !
^{***}30L external volumiser or low loss header are available as an optional component where there is insufficient system volume or where hydraulic separation is required (HPIDVOLEXT30/HPIDSYSLHKKIT).

! NOTE !
Please refer to the Aerona ASHP installation instructions for details of the flow and return connections at the heat pump.

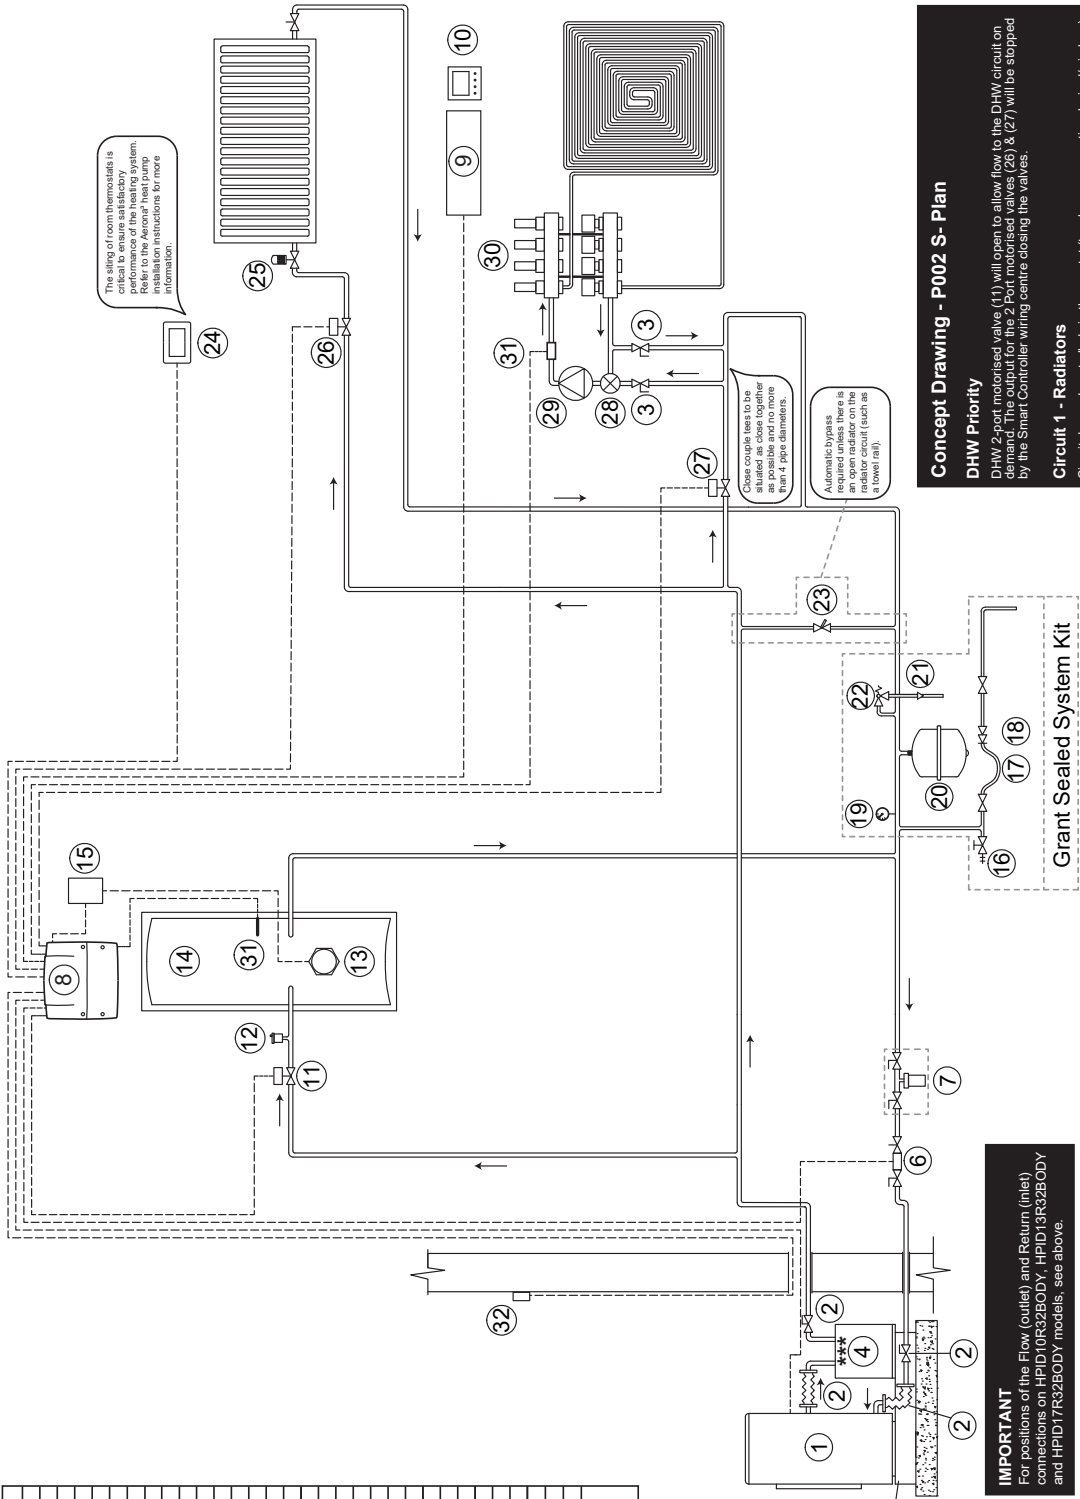

Item	Description
1	Aerona® ASHP
2	Flexible hose & Isolation valve¹
3	Isolation valve
4	Grant Volumiser or Low loss header** (optional)
5	Anti-Vibration Mounts²
6	Flow sensor¹
7	Grant Mag One magnetic filter kit²
8	Wiring Centre¹
9	Grant UH8 Wiring Centre
10	Room thermostat (Grant NeoStat or Edge)
11	Motorized 2-Port valve (DHW)
12	Automatic air vent
13	Cylinder immersion heater
14	DHW cylinder
15	Immersion heater relay²
16	Drain point²
17	Removable filling loop³
18	Double check valve²
19	Pressure gauge²
20	Expansion vessel²
21	Tundish²
22	Pressure relief valve²
23	Automatic bypass²
24	Touchscreen Display¹
25	Thermostatic Radiator valve
26	Motorized 2-Port valve (Radiator circuit)
27	Motorized 2-Port valve (UHF circuit)
28	Thermostatic mixing valve
29	UHF Circulating pump
30	UHF manifold
31	Water temperature sensor¹
32	Outdoor weather sensor¹

¹Supplied with the HPIDR32SMART² Smart Controller Kit
²Outputs available: 6, 10, 13 & 17 kW
³ Supplied with the HPIDR32PACKP

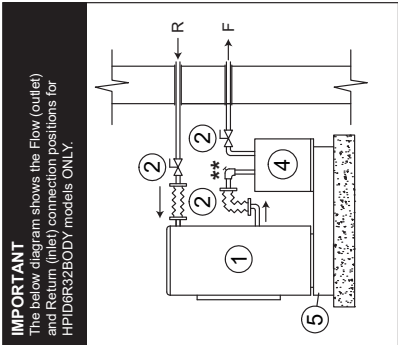

***Compression elbow c/w air vent (supplied with HPIDVOL30EXT16)

Concept Drawing - P002 S- Plan

DHW Priority

DHW 2-port motorised valve (11) will open to allow flow to the DHW circuit on demand. For the UHF circuit to operate, the 2-port motorised valve (26) & (27) will be stopped by the Smart Controller wiring centre closing the valves.

Circuit 1 - Radiators

Circuit demand controlled via thermostat (touchscreen or optional wired/wireless).

Circuit 2 - UHF with External Wiring Centre

Circuit demand controlled via thermostat connected to external wiring centre. External wiring centre will need to be connected to Terminals T2¹. Circuit thermostat should be set to 'CONTACT'.

2-port motorised valve (27) & UHF circulating pump (29) operation is managed by the Smart controller using 'THERMOSTAT PUMP BLOCKADE' function.

Flow temperature into UHF manifold (30) is managed via thermostatic mixing valve (28) in case Circuit 1 flow temperature is too high for UHF. Actuators on UHF manifold (30) are managed via the external wiring centre.

! NOTE !

For additional heater support from Grant External Volumiser. Refer to Grant Aerona Smart Controller installation manual and schematics HPSC-BUNS and HPCS-BUHE.

! NOTE !

This system schematic should be read in conjunction with the Grant Aerona Smart Control installation instructions and wiring diagram HPCS-P002E.

! NOTE !

***30L external volumiser or low loss header are available as an optional component where there is insufficient system volume or where hydraulic separation is required (HPIDVOLT30/HPIDSYSLHKIT).

! NOTE !

Please refer to the Aerona® ASHP installation instructions for details of the flow and return connections at the heat pump.

5 ELECTRICAL CONNECTIONS

5.1 CONNECTING THE WIRING CENTRE

The wiring centre is to be powered with 230V AC/50 Hz voltage. The electrical installation should be:

- Fused at 3A and earthed,
- Cable size to be 0.75mm² - 1mm².
- In accordance with current regulations, must be protected with a residual current protection device (RCD) with a rating In=30mA.

! WARNING !

All electrical scheme components should be connected only by qualified persons in accordance with applicable regulations. Follow safety precautions to prevent electrocution.

! WARNING !

After the wiring centre is turned off dangerous voltage on terminals may still be present. Before removing cover, disconnect the main power supply and use a Multimeter to check for voltage on terminals and leads.

For safety reasons, the wiring centre must be connected to a fused 230V AC power supply, with the sequence of connecting the live (L) and neutral (N) wires. Make sure that the L and N conductors are not crossed within the building's electrical system, e.g., in an electrical socket or junction box.

5.1.1 ELECTRICAL CONNECTIONS

All wiring connections should be made to the corresponding terminals on the pluggable terminal blocks supplied in the accessory and fixing pack.

1. Remove the terminal cover from the wiring centre housing. Refer to Figure 5-2.

! NOTE !

Isolate any incoming voltages on connections before removing the wiring centre cover beginning to connect to the wiring centre.

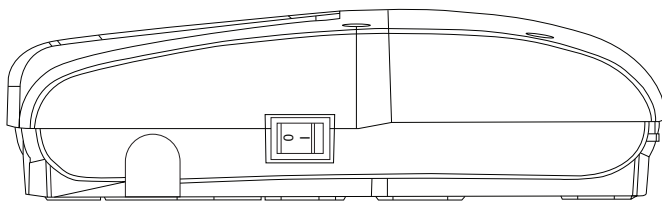


Figure 5-1: Power switch

2. Connect L & N wires of the supply to Terminals 1 & 2. Refer to Figure 5-3 for wiring centre terminal diagram.

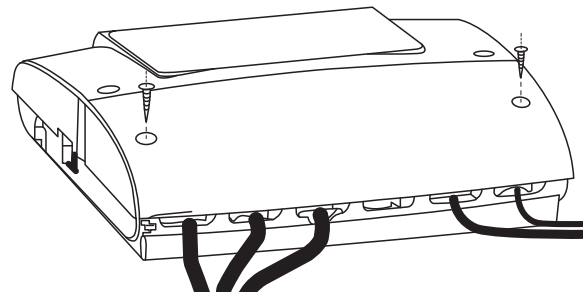


Figure 5-2: Wiring centre terminals cover

3. Connect the earth wire to the earth terminal strip inside the wiring centre housing.
4. Arrange the wires to prevent damaging the insulation by cutting it with cover edges or screws securing the cover.
5. Secure all cables using the cable clamps to prevent loosening due to any mechanical stress.

! WARNING !

The maximum length of the exposed wires extending from the outer cable sheath should not exceed 50mm. Connection cables should not be on contact with surfaces that exceed nominal operating temperature of 50°C.

! CAUTION !

All cable clamps must be fitted (even if not needed) to maintain IP20 ingress protection.

! NOTE !

The wiring centre cover should always be in place before connecting the electrical supply.

5.2 COMPONENT CONNECTIONS

Electrical components of the planned system are to be connected to the wiring centre of the Grant Aerona smart controller. Refer to Section 5.4 for wiring centre layout.

With the adjustable circuits, mixing needs a water temperature sensor connected to monitor the mixed water entering the circuit to adjust accordingly. Table 5-1 displays the relation between the individual heating circuit and its associated component terminals.

Table 5-1: Circuit component connections

Heating Circuit	Pump/Valve	Mixer	Water sensor
1	H1-P	None	None
2	H2-P	H2-M	H2-S
3	H3-P	H3-M	H3-S

Refer to 5.5, 5.6 & 5.7 for example pack wiring schematics. For any further guidance on device connections or schematic drawings, please contact Grant UK.

5.3 POWER SUPPLY FAILURE

In case of power supply failure, the controller returns to the work mode in which it was working previously when the power supply is restored.

5.4 WIRING CENTRE LAYOUT

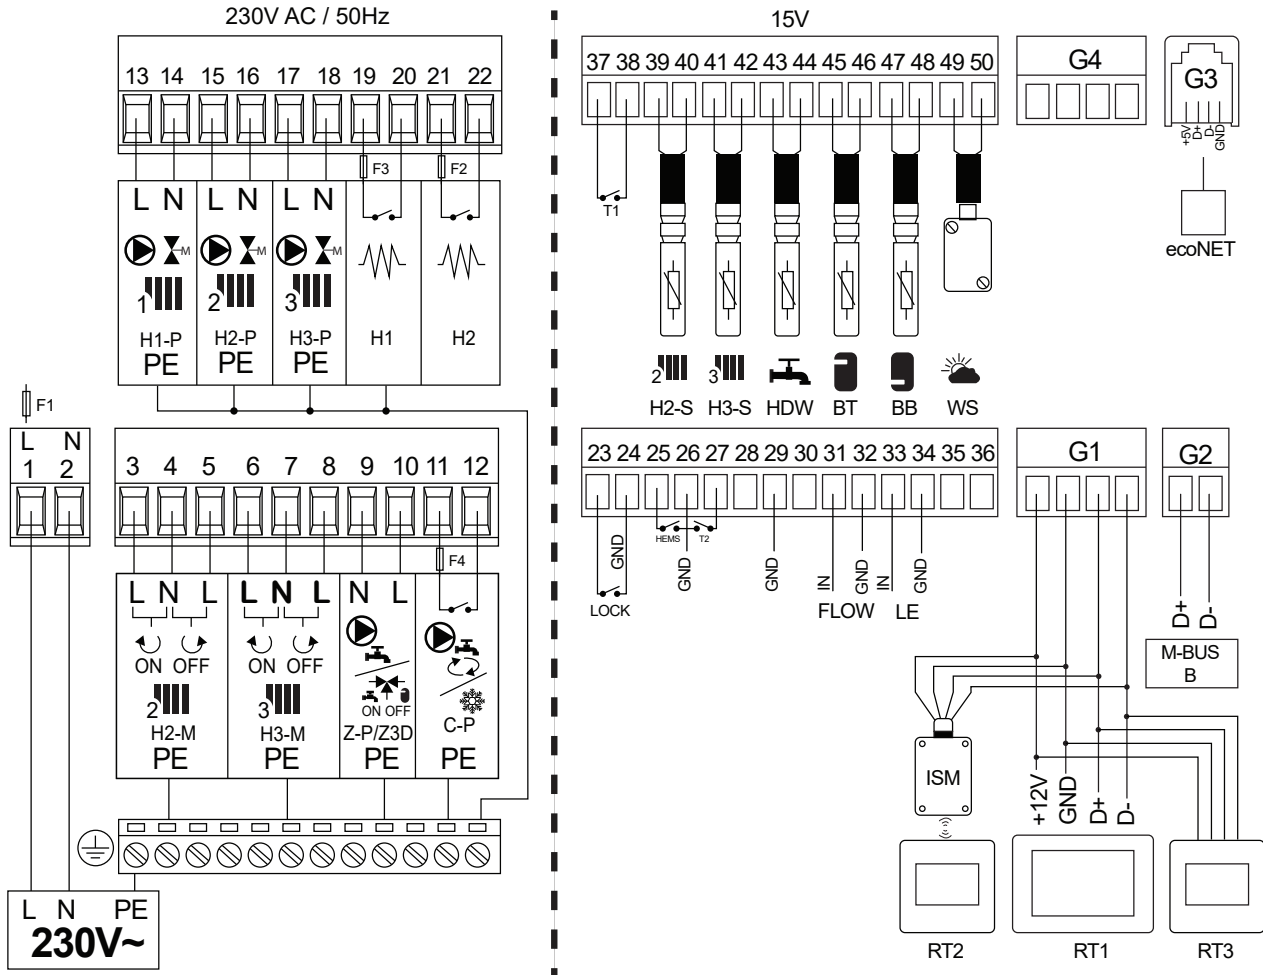


Figure 5-3: Wiring centre - Terminals


Table 5-2: Wiring Centre Terminals

Label	Terminal Numbers	Description
230V ~	1 & 2	Mains Live and Neutral
H2-M	3, 4 & 5	Circuit 2 Mixing valve - 2 x 230V Lives (ON and OFF) and Neutral
H3-M	6, 7 & 8	Circuit 3 Mixing Valve - 2 x 230V Lives (ON and OFF) and Neutral
Z-P/Z3D	9 & 10	DHW Pump/3-Port Diverter Valve
C-P	11 & 12	Secondary Circulation Pump
Flow	31 & 32	Flow sensor I/O & Ground
LE	33 & 34	Electricity Meter
G1	Terminal Set	Touchscreen & Thermostat connection terminals (RT1, RT2, RT3)
G2	M-BUS	Modbus connection to the Aeraon Heat pump.
G3	G3 Socket	Connection port for ecoNET cable
G4	Terminal Set	+12V, Ground, D+, D-
H1-P	13 & 14	Circuit 1 230V Switched Live and Neutral
H2-P	15 & 16	Circuit 2 230V Switched Live and Neutral
H3-P	17 & 18	Circuit 3 230V Switched Live and Neutral
H1	19 & 20	Switch for Immersion Relay (Buffer)
H2	21 & 22	Switch for Immersion Relay (DHW Cylinder)
H2-S	39 & 40	Circuit 2 Water temperature sensor
H3-S	41 & 42	Circuit 3 Water temperature sensor
HDW	43 & 44	DHW Cylinder Water temperature sensor
BT	45 & 46	Buffer Upper Water temperature sensor
BB	47 & 48	Buffer Lower/Low Loss Header temperature sensor
WS	49 & 50	Outdoor Weather sensor
T1	37 & 38	External Volt-free switch for Circuit 1
T2	26 & 27	External Volt-free switch for Circuit 2 or 3
LOCK	23 & 24	Not used
HEMS	25 & 26	Not used

5.5 ELECTRICAL CONNECTIONS - PACK P

Grant UK Drawing Number: HPCS-P001E

Notes: Some Neutral and Earth connections have been excluded for clarity. Grant Smart Immersion relay to house 2 live connections. Ensure both are isolated prior to opening housing.

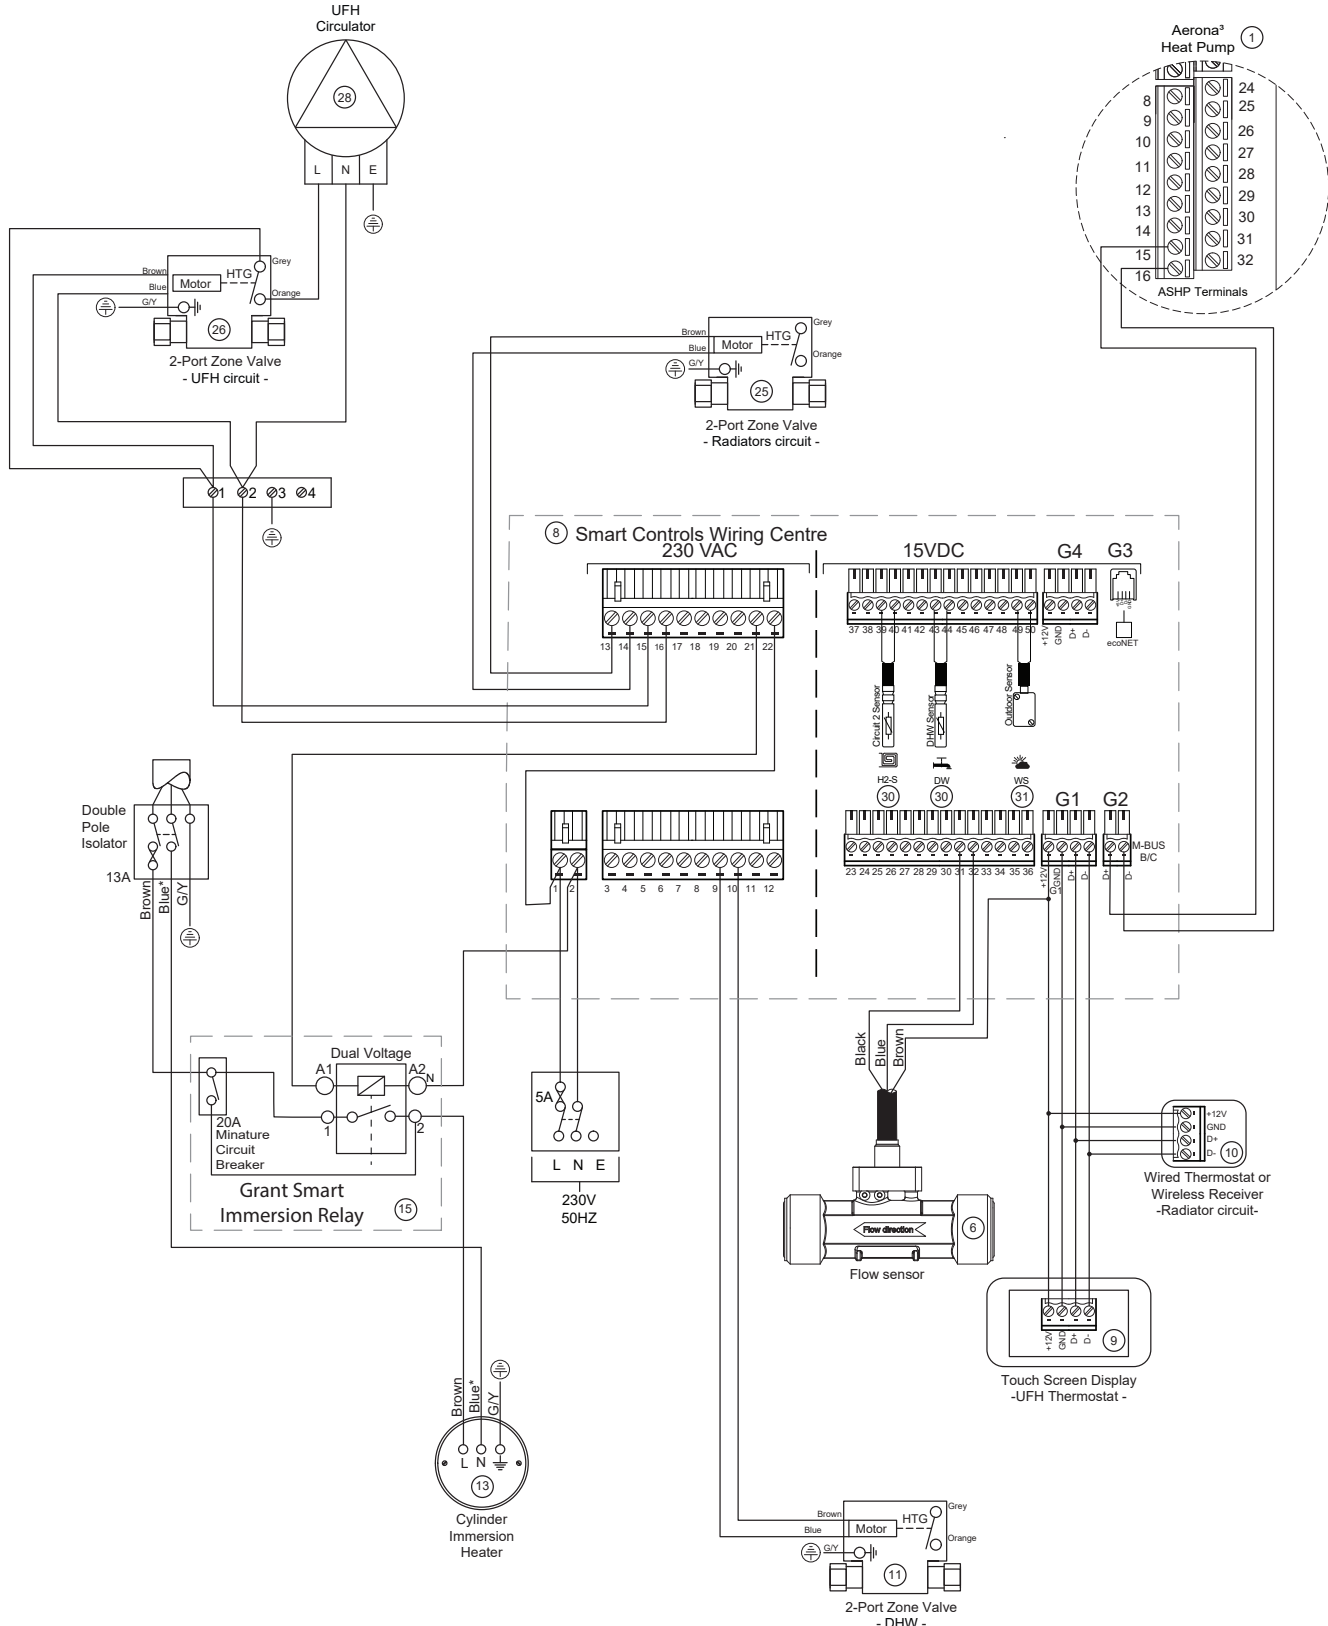

! NOTE !

*Please ensure that neutrals are derived from the same supply to prevent spurious MCB/RCD trips.

! NOTE !

This wiring diagram should be read in conjunction with the Grant Aera Smart Controls installation instructions and system schematic HPCS-P001S.


5.6 ELECTRICAL CONNECTIONS - PACK Q

Grant UK Drawing Number: HPCS-Q001E

Notes: Some Neutral and Earth connections have been excluded for clarity. Grant Smart Immersion relay to house 2 live connections. Ensure both are isolated prior to opening housing.

! NOTE !

**If the 3 port valve is mounted on the left side of the heating system, the actuator has to be mounted in reverse, hence the white wire will be connected to terminal 8, and the brown wire will be connected to terminal 6. Blue wire will remain in the same terminal.

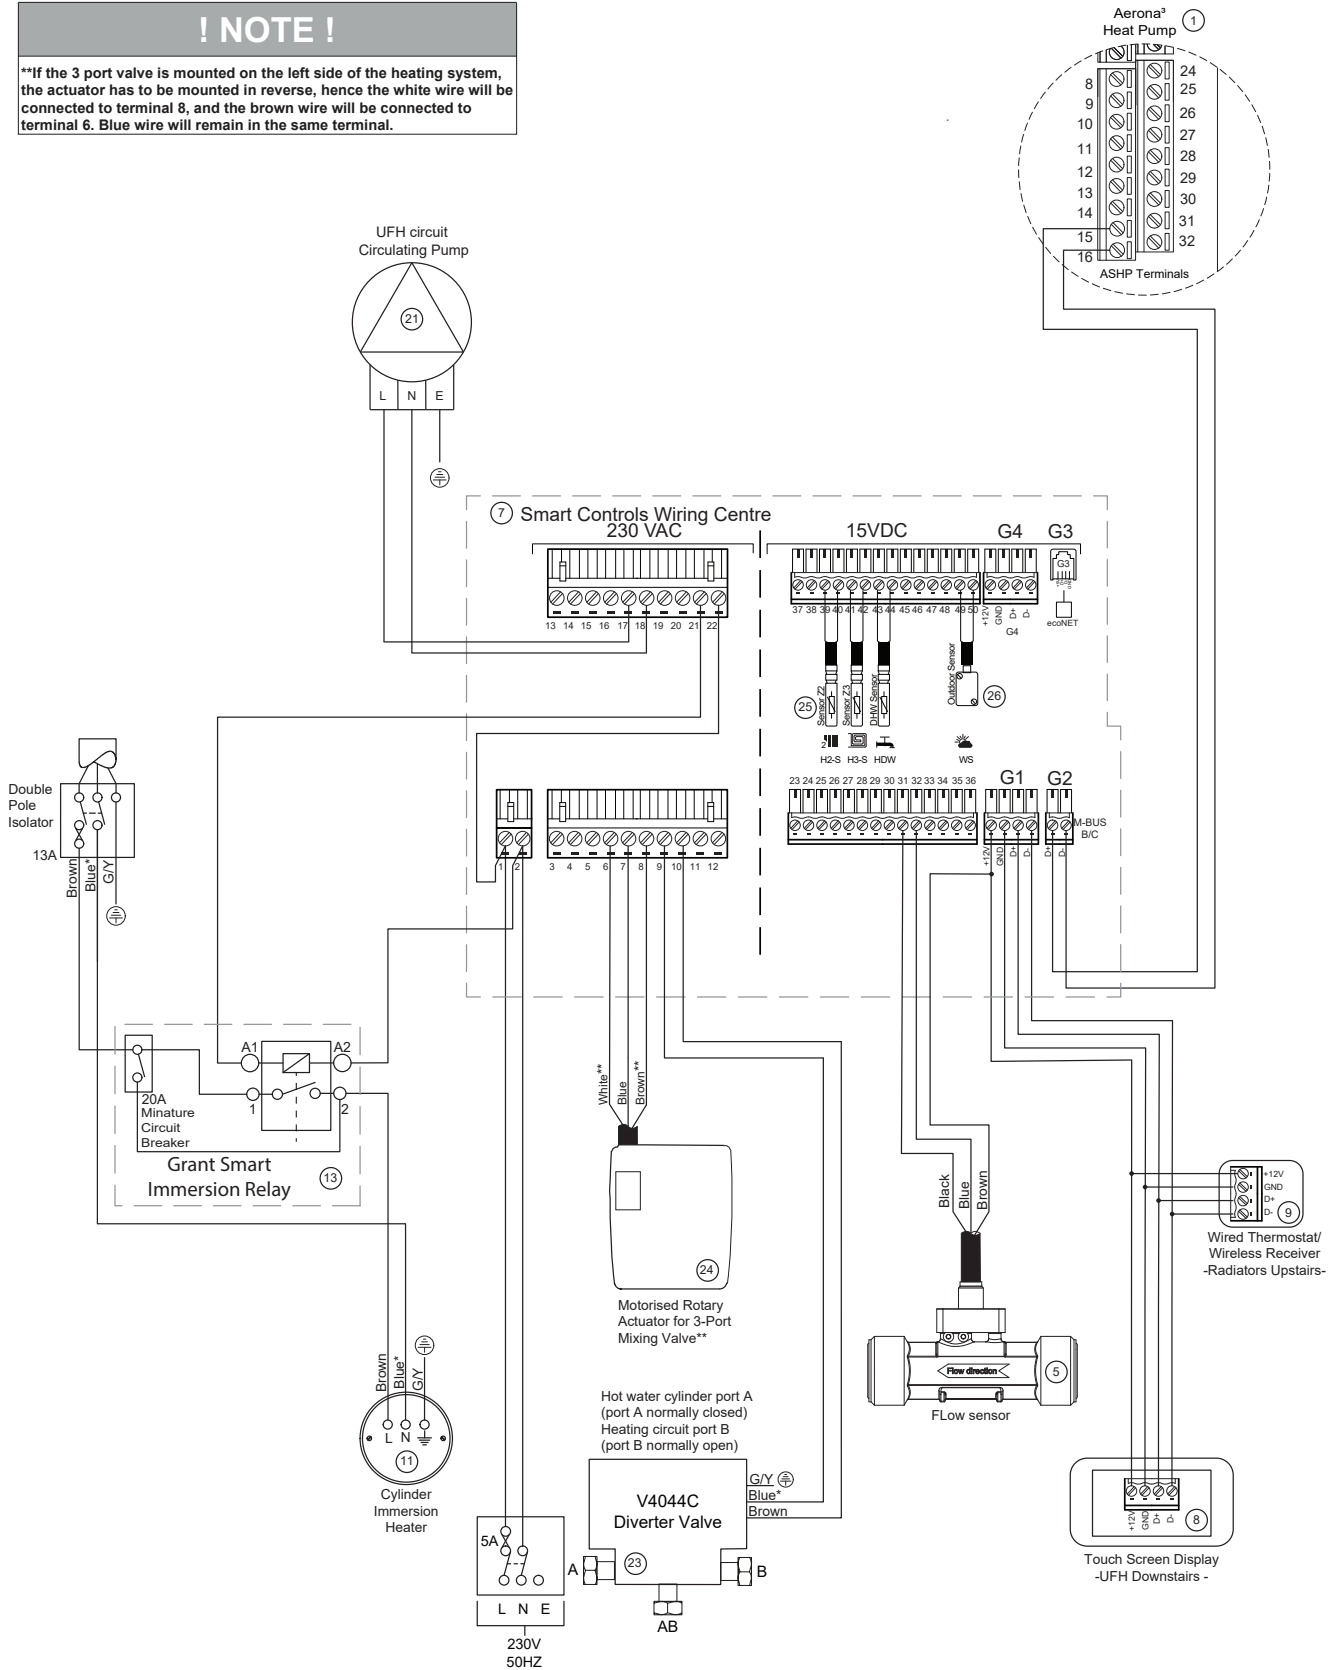

! NOTE !

*Please ensure that neutrals are derived from the same supply to prevent spurious MCB/RCD trips.


! NOTE !

This wiring diagram should be read in conjunction with the Grant Aerona Smart Controls installation instructions and system schematic HPCS-Q001S.

5.7 ELECTRICAL CONNECTIONS - PACK R

Grant UK Drawing Number: HPCS-R001E

Notes: Some Neutral and Earth connections have been excluded for clarity. Grant Smart Immersion relay to house 2 live connections. Ensure both are isolated prior to opening housing.

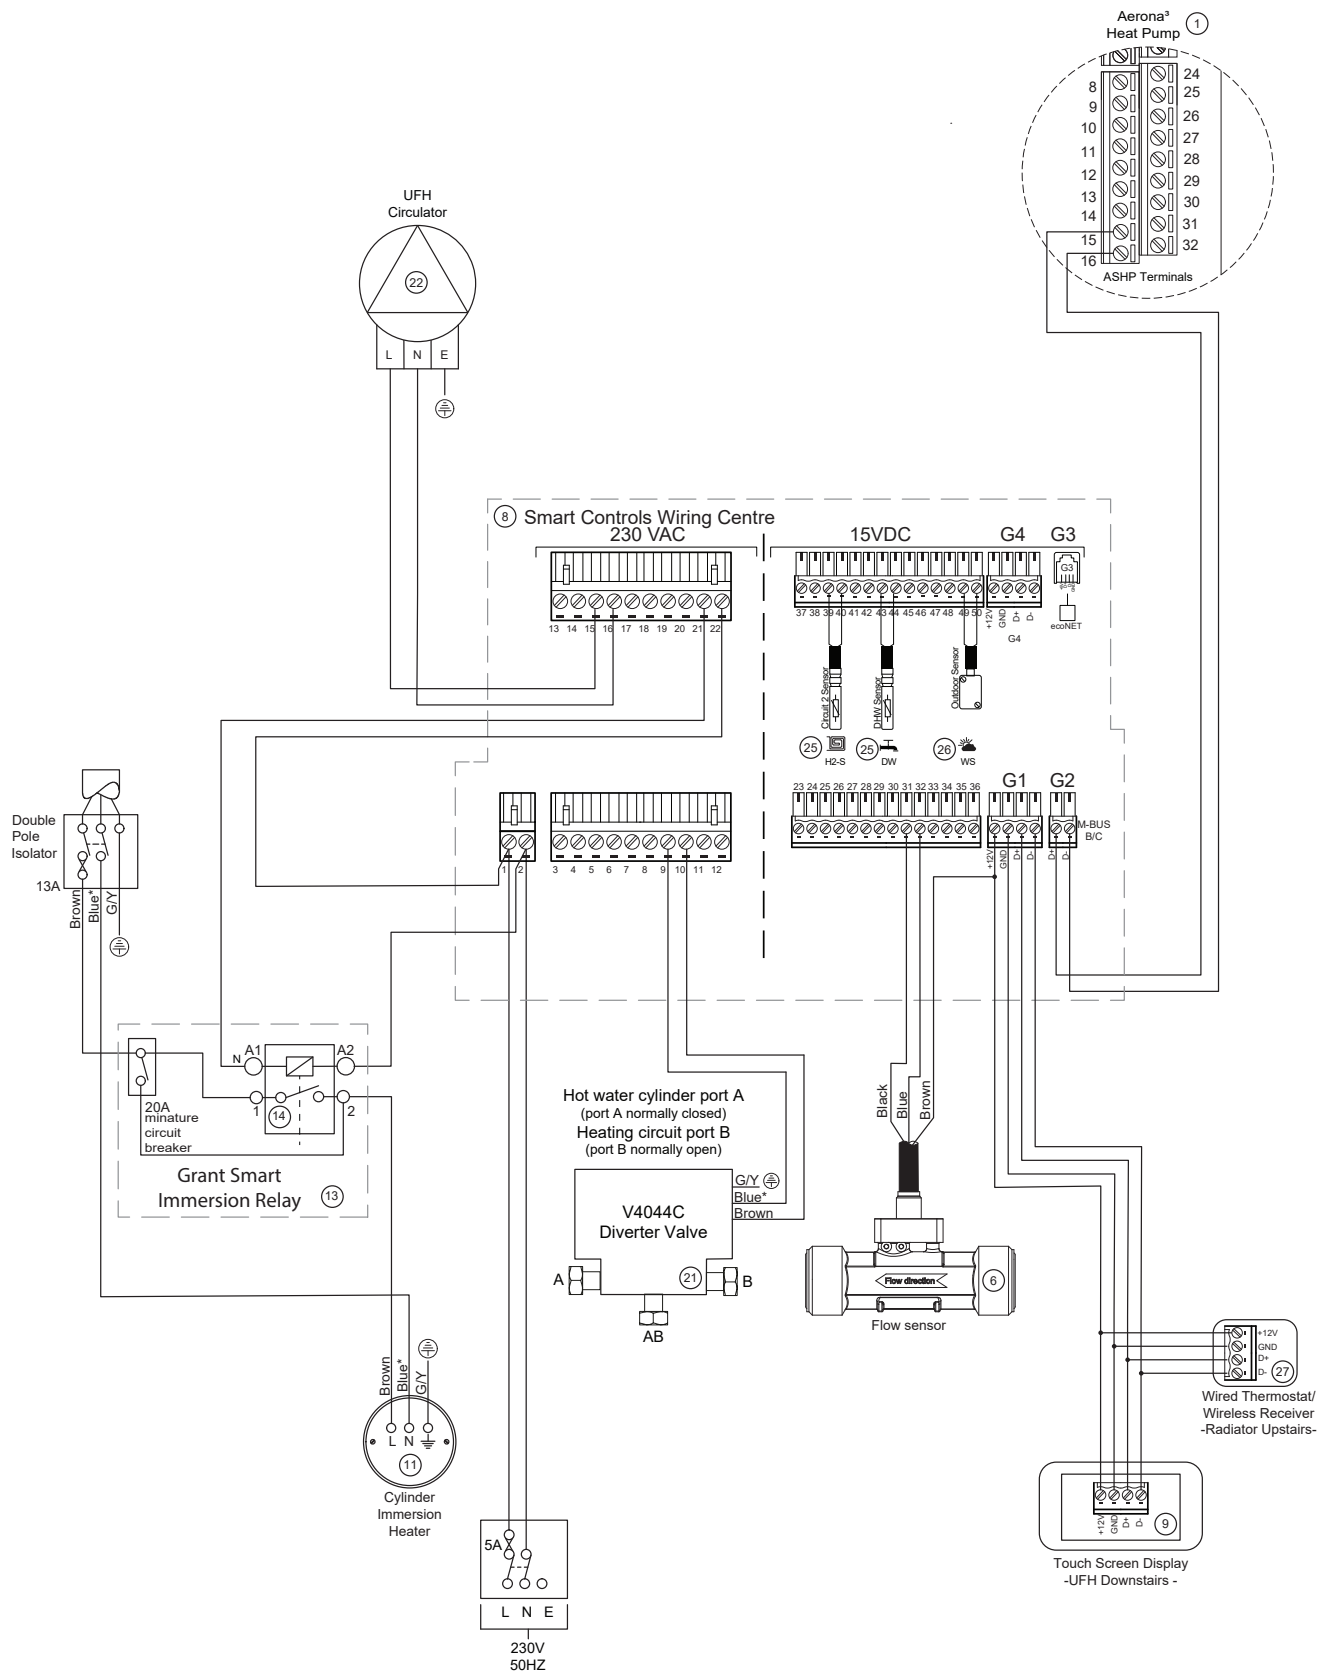

! NOTE !

*Please ensure that neutrals are derived from the same supply to prevent spurious MCB/RCD trips.


! NOTE !

This wiring diagram should be read in conjunction with the Grant Aeronas Smart Controls installation instructions and system schematic HPCS-R001S.

5.8 ADDITIONAL DRAWINGS

Grant UK Drawing Number: HPCS-P002E - Standard Pack P with UH8 Wiring Centre.

Notes: Some Neutral and Earth connections have been excluded for clarity. Grant Smart Immersion relay to house multiple live connections. Ensure both are isolated prior to opening housing.

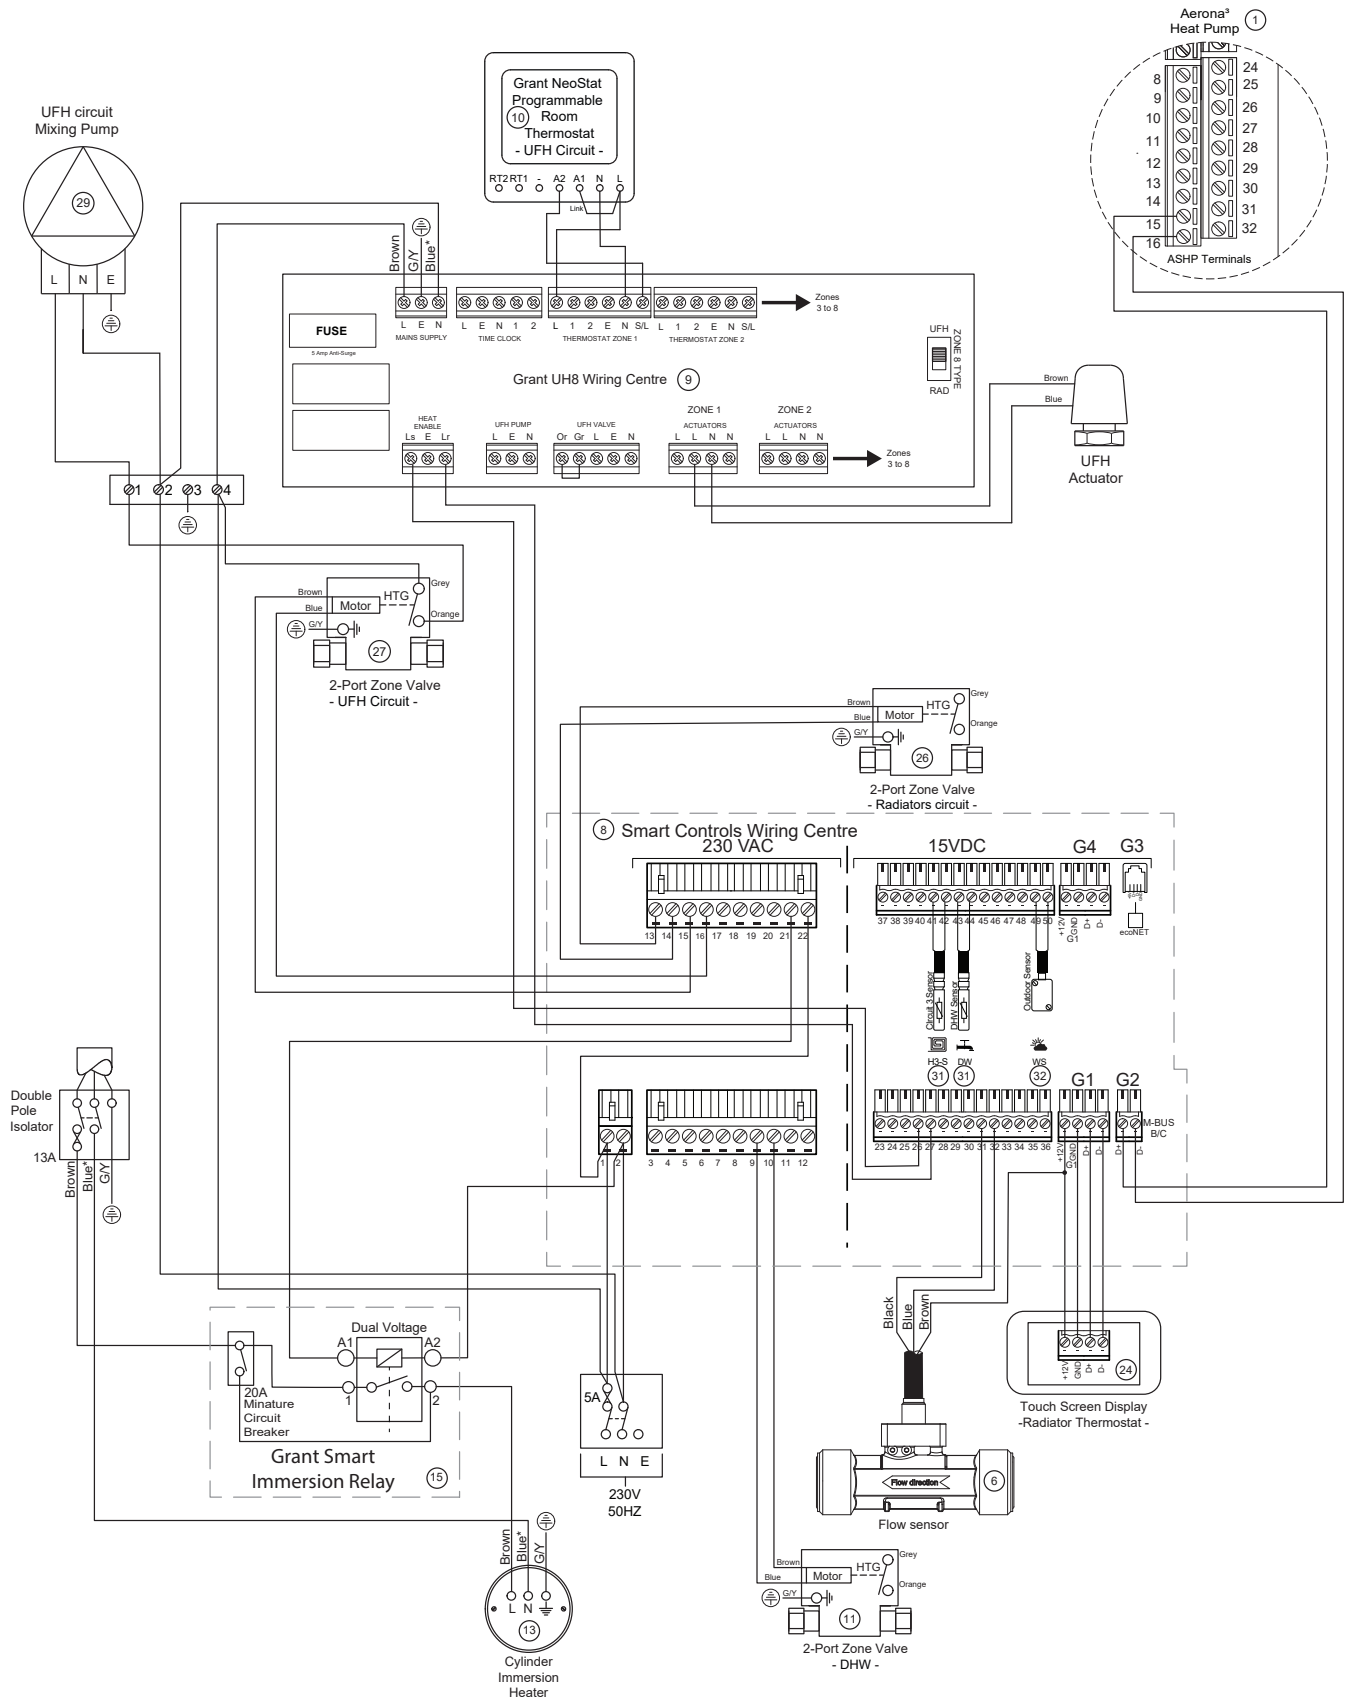

! NOTE !

*Please ensure that neutrals are derived from the same supply to prevent spurious MCB/RCD trips.

! NOTE !

This wiring diagram should be read in conjunction with the Grant Aeraona Smart Controls installation instructions and system schematic HPCS-P001S.

6 SYSTEM CONFIGURATION WITH TOUCHSCREEN DISPLAY

6.1 FIRST SWITCH-ON

With installation completed, the Grant Aeron Smart controller will need to be configured:

1. Turn on the Grant Aeron Smart controller via the wiring centre power switch (Refer to Figure 5-1) and allow the software to cycle to the language selection panel. (Refer to Figure 6-1).

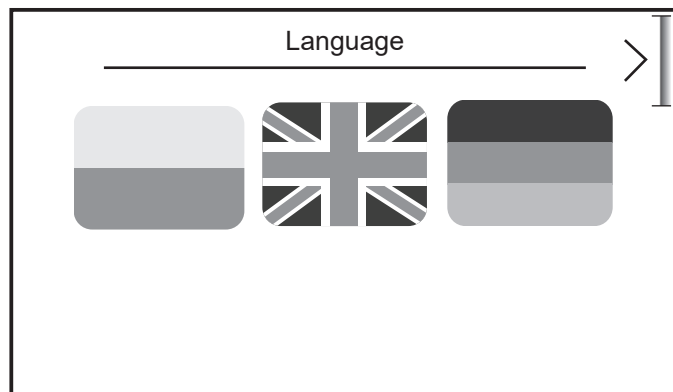


Figure 6-1: Language selection

2. Select required language preference and confirm with >.

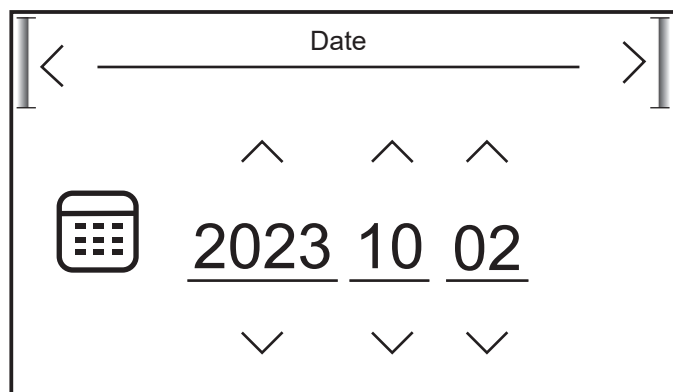


Figure 6-2: Setting date

3. Set the date. Tap the ^ & v to amend the values for year, day and month. Confirm with >. Refer to Figure 6-2.

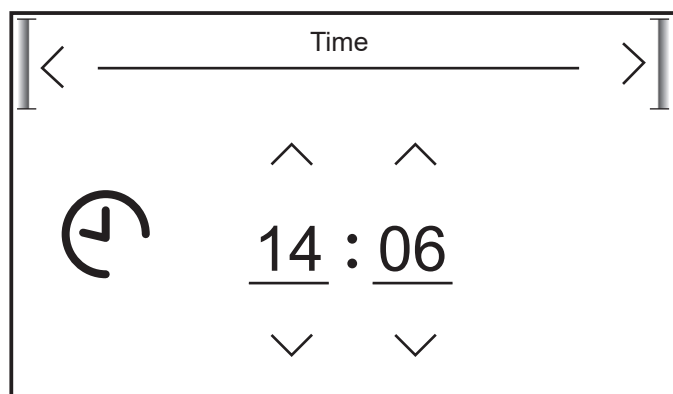


Figure 6-3: Setting time

4. Set the time. Tap the ^ & v to amend the time & confirm with >. Refer to Figure 6-3.
5. The touchscreen will progress to ask if you wish to start a configuration. Tap ✓ to start the configuration creator. Refer to Figure 6-4 and Section 6.2.

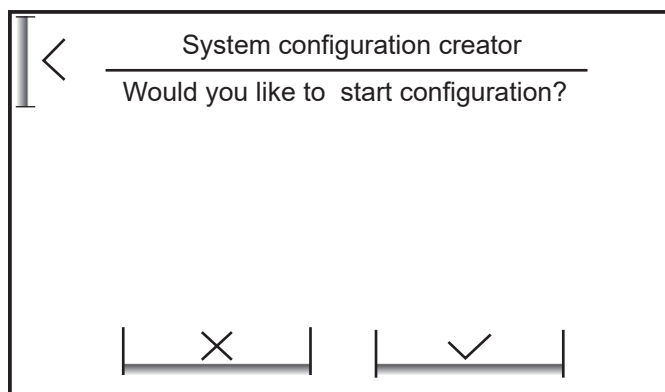


Figure 6-4: Configuration creator

6. If you tap 'X' the controller will take you to the home screen and display "No circuits defined". Refer to Figure 6-5.

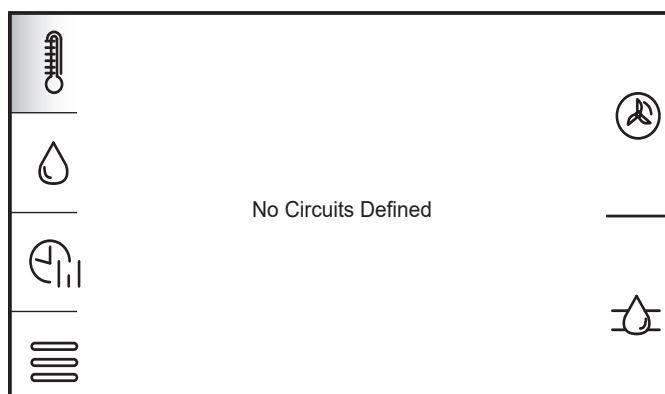


Figure 6-5: No circuits defined

7. To access the system configuration creator you need to access the settings menu / service settings menu. See Section 7 Table 7-1. The service settings password is 0000.


6.2 SYSTEM CONFIGURATION CREATOR

The Grant Aeron Smart Controller integrated system configuration creator will aid with the setup of the space heating and DHW system within the software of the touchscreen display. The steps in the configuration creator should reflect the system you have designed and electrically connected to the wiring centre. You must only configure components you have connected (Refer to Section 5 Figure 5-3 for wiring centre layout).

! NOTE !

Ensure you pay close attention to the devices you connect to the wiring centre and confirm for correct operation.

Using the system you have planned you can follow the system configuration creator steps to configure it within the Grant Aeron Smart controller. (Refer to Figure 6-6 for System configuration map).

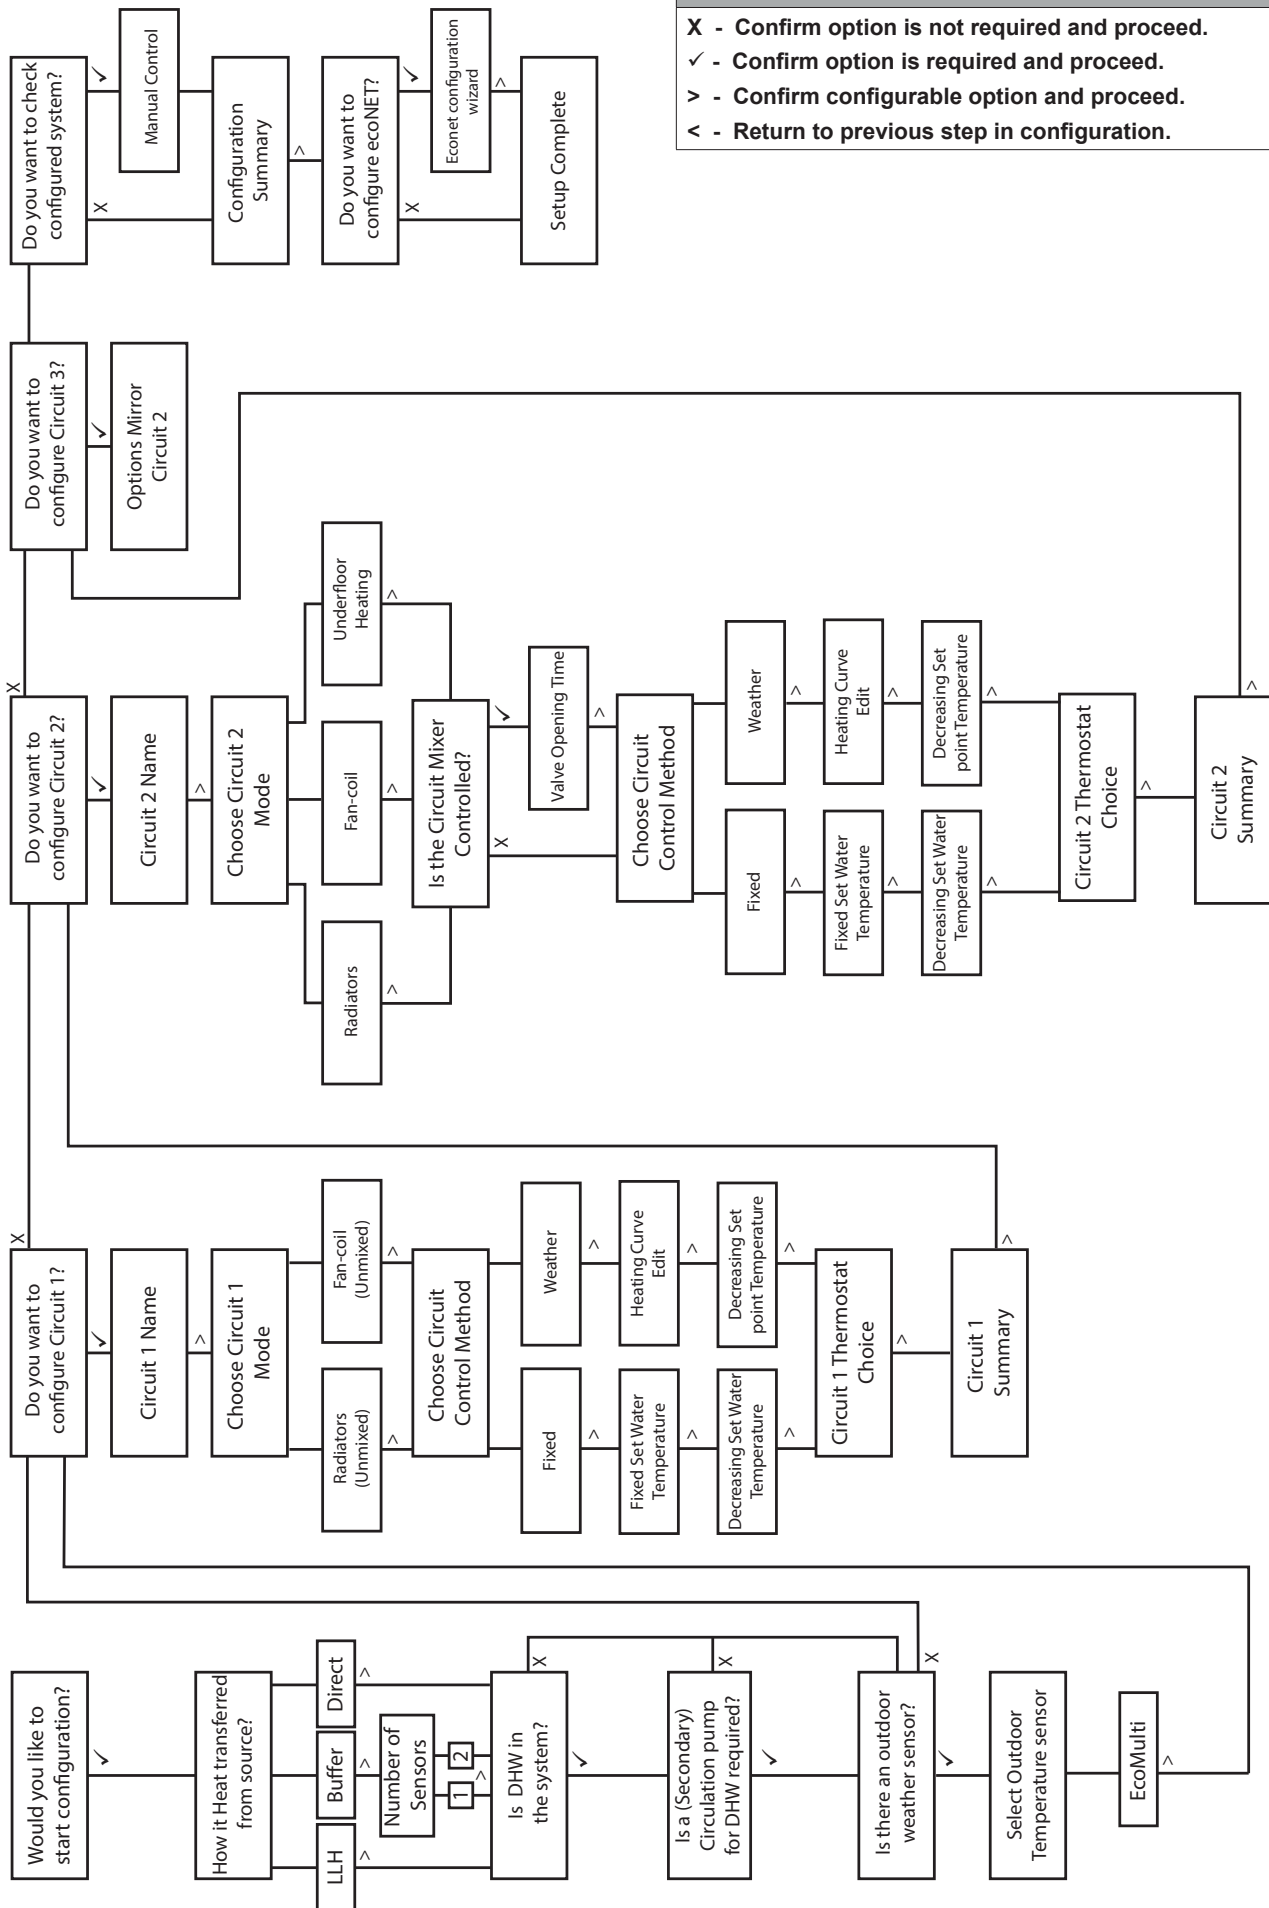

! NOTE !

- X** - Confirm option is not required and proceed.
- ✓** - Confirm option is required and proceed.
- ✓** - Confirm configurable option and proceed.
- ^** - Return to previous step in configuration.

Figure 6-6: System Configuration Map

- **Would you like to start configuration?**
If a system has already been configured you will be prompted to confirm you wish to overwrite the previous setup.
- **How is heat transferred from the source?**
Confirm if you are using a buffer/volumiser, low loss header that the Grant Aeron Smart controller will manage or if heat is transferred directly to the primary circuit.
- **Is DHW in the system?**
The Grant Aeron Smart controller will manage the DHW cylinder as well as prioritise DHW on a demand.
- **Is Circulation pump for DHW in system?**
This would be enabled if you require the Grant Aeron Smart controller to manage a secondary circulation pump.
- **Is Outdoor temperature sensor in the system?**
This will enable the weather control features of the Grant Aeron Smart controller.
- **Source of Outdoor temperature sensor**
Assign an Outdoor temperature sensor. The 'ecoMULTI' is the outdoor weather sensor supplied with your Grant Aeron Smart Controller kit and should be the only option you choose. Refer to Section 3.4.1.
- **Do you want to Configure circuit 1, 2 or 3?**
Configuration of Heating circuits. Circuit 1 is non-adjustable and this is indicated with a note that Circuit 1 cannot have a mixer.
- **Circuit Name**
To amend the name of a circuit e.g., "Ground Floor" tap the change name button which will open a qwerty keyboard. To finish tap the enter key.
- **Choose circuit mode**
Assign the heating emitter type for the circuit. This could be 'RADIATORS' or 'UNDERFLOOR HEATING'.
- **Choose circuit control method**
Assign a control method from either 'FIXED' or 'WEATHER' control. Individual circuits can be assigned differing methods and can be amended later via the Circuit settings within the system settings menu.
- **Fixed Set point water temperature (Fixed Control)**
The circuit will operate on a fixed flow temperature. This is the default day flow temperature.
- **Decreasing set point water temperature (Fixed Control)**
This is the drop in system flow temperature during scheduled night/unattended periods.
- **Heating curve edit (Weather Control)**
Configure the heating curve for the calculative weather control adjustments for set-point temperatures. Refer to 6.4 for further information on editing the heating curve.
- **Decreasing set point temperature (Weather Control)**
This is the drop in system flow temperature during scheduled night/unattended periods.
- **Will circuit be controlled with a Mixer?**
Confirm if the circuit will be controlled by a motorised mixing valve. (Not applicable to Circuit 1)
- **Mixing valve opening time**
Enter the valve opening time to allow the controller to calculate the opening times for correct temperature mixing. (Refer to Appendix C for further information on the mixing valve).
- **Circuit thermostat choice**
If required, configure a thermostat to a circuit. A circuit could be uncontrolled, use the touchscreen display or a wired/ wireless thermostat. If either a wired or wireless thermostat is chosen, the touchscreen display will begin the pairing wizard to be followed to pair the individual thermostat to this circuit. Refer to Section 7.3.1.4. . If appropriate, at least one circuit can be controlled by the touchscreen display supplied in the Smart Controller kit.

! NOTE !

If more than one wireless thermostat is to be used, you **MUST** ensure you configure the thermostat addresses prior to starting the system configuration creator to avoid conflicts. Refer to Appendix B.4.

- **Circuit Summary**
The circuit summary displays the parameters you have defined. The circuit structure displays as a pump but is a 230V switched live output (labelled on the wiring centre as H1-P, H2-P & H3-P. This could be connected to a 2-Port motorised valve as is common in the UK. (Refer to Section 5, Figure 5-3).
- **Do you want to check configured system?**
Confirming will activate the manual control function (Refer to Section 8 and Figure 8-2) on the touchscreen display. The components that you have configured via the creator will be shown on the screen. There will be both an icon on the operational button area and the terminal block numbers to which they should be wired to on. Refer to Section 5 for the terminal blocks and associated devices that they control. Tapping the icon will switch the internal relay and send a relevant voltage to activate.
- **Do you wish to configure ecoNET? (On first install only)**
If you wish to configure ecoNET services tap to confirm and follow the steps in the 'ECONET CONFIGURATION WIZARD' to connect the Wi-Fi hub to the wiring centre and/ or pair with the household wireless network. Refer to Section 10 for further details on this process.

6.3 WEATHER COMPENSATION

6.3.1 HEATING CURVE

Weather compensation can be enabled if an Outdoor Weather sensor is connected. The Outdoor Weather sensor should be enabled and select Regulation method as 'WEATHER'.

The circuit water target temperature is calculated based on the ambient temperature outside the building. The colder it is outside, the higher the water temperature in the circuit will be.

The heating curve is configured per circuit either during system configuration or via the service menu of the controller.

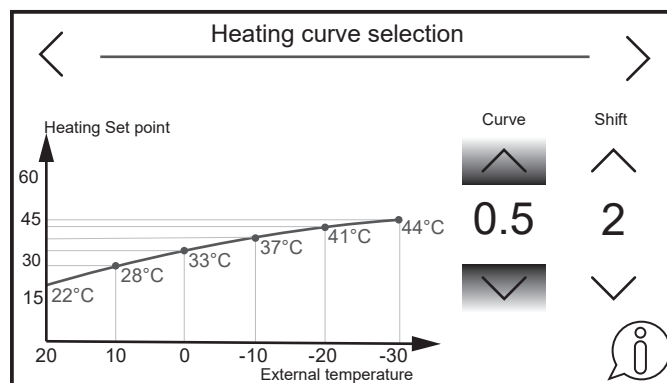


Figure 6-7: Heating curve adjustment

The heating curve selection will provide the line graph representing required target water temperature against outdoor air temperature (Refer to Figure 6-7).

1. Tap ▲ or ▼ of 'CURVE' to align the curve to set a 45°C at -3°C 'External temperature' as a starting point. Refer to Table 6-1 for recommended heating curve settings.
2. To further adjust should the temperature points not be satisfactory, Tap ▲ or ▼ of 'Shift' to move the set curve up or down.

Table 6-1: Recommended Heating Curve

Heat Emitter	Initial Curve Setting
Fan-Coil	1.2 - 1.6
Radiators	1.2 - 1.6
Underfloor	0.2 - 0.6

Refer to Section 6.3.2 for advice on how to further alter the heating curve.

The Grant Aerona Smart Controller can increase or decrease the Heat pump target flow temperature, calculated in accordance with the heating curve, if it exceeds the temperature range for the given circuit set in controller service menu.

6.3.2 HEATING CURVE ADJUSTMENT

The heating curve is adjustable and should be reviewed to ensure both comfort and economy.

The heating curve is set as part of the initial system configuration when configuring 'WEATHER' control but can be edited after the system configuration has been completed. Refer to Section 7.3.1.3 to access the heating curve setting adjustment, Figure 6-7 and Online resources for a QR code link to a 'how-to' video on adjusting the circuit heating curve.

Guidelines for adjusting a heating curve

- If the outdoor temperature drops, and the room temperature increases, the selected heating curve value is too high.
- If the outdoor temperature drops, and the room temperature drops as well, the selected heating curve value is too low.
- If during frosty weather the room temperature is comfortable, but when it gets warmer the room is too cold, it is recommended to increase the Heating curve shift and to select a lower heating curve.
- If during frosty weather the room temperature is too cold, and when it gets warmer the room is too hot, it is recommended to decrease the Heating curve shift and to select a higher heating curve.

Poorly insulated buildings or the use of traditional steel radiators require setting higher heating curves. Well insulated buildings and/or low temperature heat emitters e.g. Underfloor heating, heating curves will have a lower value.

6.4 CIRCUIT CONTROL SETTINGS

6.4.1 FIXED CIRCUIT CONTROL (Not weather compensated)

If the heat emitter size is known, set the required water temperature in the circuit using parameter 'FIXED PRESET WATER TEMPERATURE', e.g., at a value of 50 °C. The value should allow the room to reach the required temperature.

After connecting the room thermostat, it is necessary to set a value of decrease in the 'DECREASING FIXED WATER TEMPERATURE' parameter, e.g., to 3 °C. This value should be selected by trial and error. Upon activation of the room thermostat, the target circuit temperature will be decreased, which, if proper decrease value is selected will stop rise of temperature in the heated room.

6.4.2 WEATHER COMPENSATED CIRCUITS (Not Fixed)

The Outdoor weather sensor must be installed and configured to be able to use weather control. Using Heating curve shift, set target room temperature following the formula: Preset room temperature = 20°C + heating curve shift.

In this setup, it is possible to connect a room thermostat which will equalise the inaccuracy of set heating curve, if the selected heating curve value is too high. In such case, it is necessary to set the value of parameter 'DECREASING FIXED WATER TEMPERATURE', e.g., to 2°C.

When the target temperature of the room thermostat is achieved, the Heat pump target flow temperature will be decreased, when pump blockade for that circuit is off. If pump blockade is on, the circuit pump/valve will close (if installed).

6.5 COMMON SETTINGS

After the system has been configured, check and if needed amend some common settings within the Heat pump parameters menu via the touchscreen display (Refer to Table 6-2).

To access the Heat pump parameters menu:

1. Tap the Settings menu and select 'Service settings' and enter the password: **1234**. Refer to Table 7-1 and Section 9 for full Heat pump parameters listing.

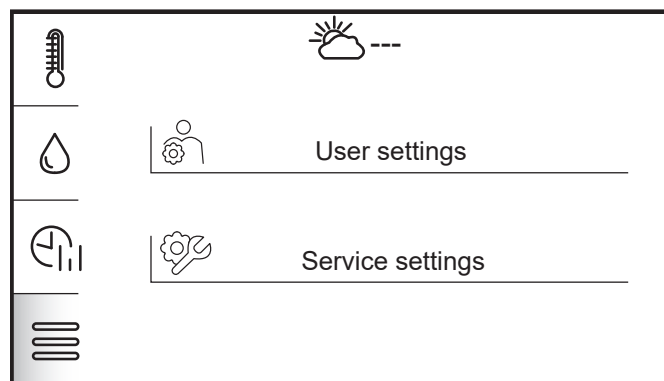


Figure 6-8: Settings menu

Table 6-2: Heat Pump parameters

Parameter No.	Parameter Title	Setting Value
Heat pump Set points		
21 00	Weather Comp	Off
Frost protection		
43 10	Frost Ambient Temp	Frost Ambient Temp on
43 11	Start Temp	4°C
43 12	Hys of Ambient Temp	3°C
43 20	Frost Flow Temp	ON
43 21	Start Temp	4°C
43 22	Hys of Flow Temp	3°C
Relay output settings		
51 07	DHW Cylinder Sensor	Off
51 09	Amb Temp Ext Sensor	Off
51 11	Buffer Temp Sensor	Off
51 15	Modbus	On

7 TOUCHSCREEN DISPLAY OPERATION AND SETTINGS

7.1 TOUCHSCREEN DISPLAY

The display is a capacitive touch screen and parameters are edited by touching the selected symbol or area on the display screen.

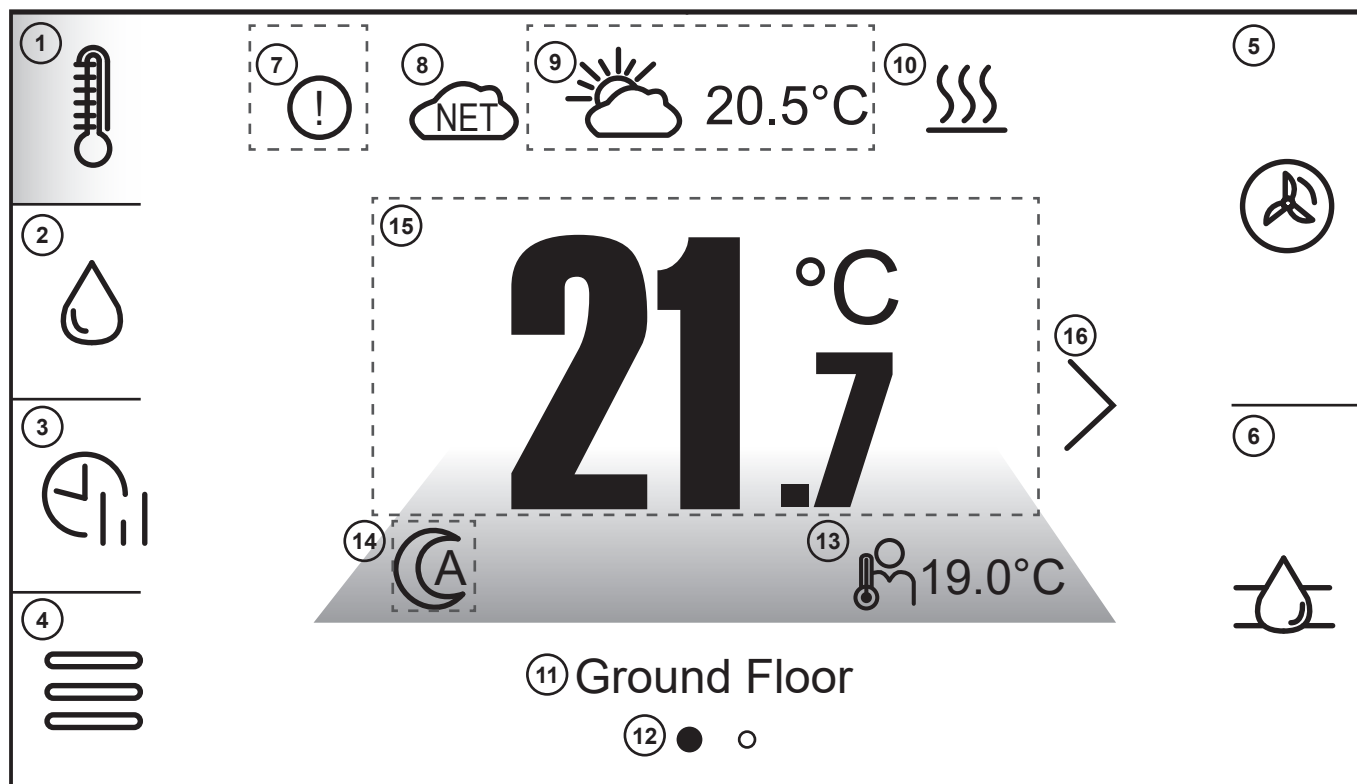


Figure 7-1: Display home screen example

Table 7-1: Touch screen

Number	Symbol	Description
1		Tap to access Heating circuit controls. Refer to Section 7.3.1.1.
2		Tap to access DHW system controls. Refer to Section 7.3.2.1.
3		Tap to access Schedule settings for Heating circuit(s), DHW cylinder and Heat Pump. Refer to Section 7.5.
4		Tap to access to Settings menu. Refer to Section 7.9.
5		Tap to view Heat pump schematic. Refer to Section 7.6.
6		Tap to access active system schematic. Refer to Section 7.7.
7		Indicates there are active alarms on the Smart controller.
8		Indicates connection status to ecoNET24 external server. (Green is connected, Red is disconnected)
9		Outdoor temperature value (If outdoor weather sensor support is enabled in the service menu). Tap to view and amend Smart Controller work mode. Refer to Section 7.3.3.
10		Indicates an active heat demand.
11	Ground Floor	Circuit title/name
12		Circuit panes available (if more than 1 installed).
13		Circuit user set value.
14		Current circuit work mode. Tap to quick access the circuit work mode screen. Refer to 7.3.1.2 & 7.3.2.2.
15	21.7°C	Current circuit temperature. Tap to access Circuit settings. Refer to 7.3.1 & 7.3.2.
16		Tap to move between multiple circuits (if installed) - The touchscreen can also be swiped to change circuits.

7.2 SMART CONTROLLER OPERATION

7.2.1 MAIN HEAT SOURCE

The Grant Aerona Smart controller manages the operation of the heat pump by activating or deactivating it according to demand for DHW or the space heating circuits.

7.2.2 HEAT CIRCUITS

The Grant Aerona Smart controller can manage the operation of one non-adjustable and up to two adjustable heat circuits. Water temperature in circuits can set as a fixed flow temperature or by weather, i.e., water temperature in the circuit is calculated in accordance with a temperature from the external temperature sensor. Despite varying outdoor temperature, a room temperature in heated rooms is kept on a set level.

- Dependent circuits – A thermostat assigned for many circuits. For example, temperature readings on a installed panel affect operation of both radiator and underfloor circuits. Commonly one Thermostat in a central location.
- Independent circuit – Connecting thermostats to measure room temperature independently and affecting assigned circuits. It is the way to obtain independency of the circuits, e.g., in case when one part of the building is used for the whole year and the second part is used periodically, e.g., for rent.

If multiple circuits are being controlled you can navigate between them with a swipe of the screen either to the left or the right.

7.2.3 DOMESTIC HOT WATER

The Smart Controller manages the operation of the Heat Pump and heating of a DHW cylinder up to a user set temperature. DHW operation can be programmed in time intervals with a minimum operation for disinfection mandatory. While the Smart Controller can also control a DHW secondary circulating pump, their use is not recommended to minimise wasted energy and running costs.

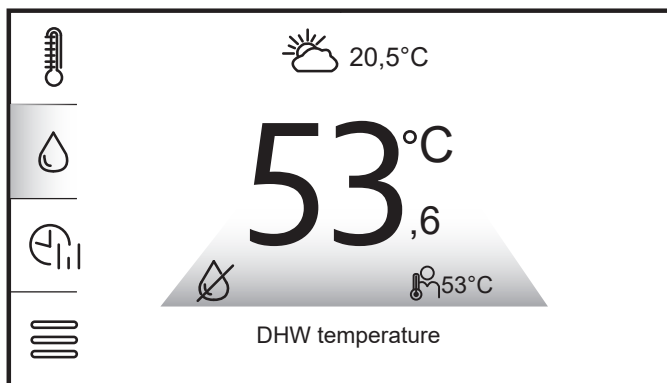


Figure 7-2: DHW temperature display example

! NOTE !

The change of the colour under the current value of the temperature of the circulation and DHW cylinder indicates whether the temperature is below (blue), above (red) or the same (green) as the target temperature. Grey indicates the DHW function is Off.

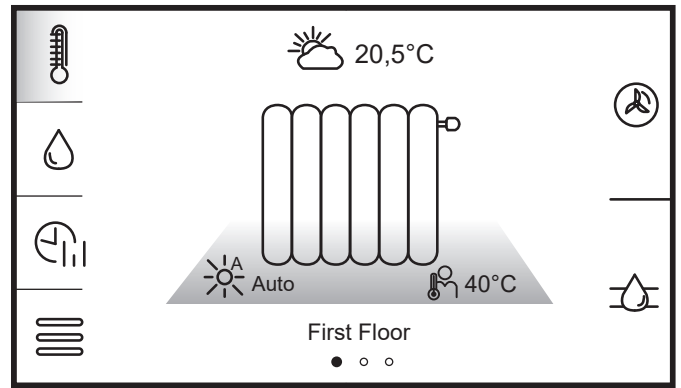


Figure 7-3: Thermostatically uncontrolled circuit display

! NOTE !

The circuit is not controlled by a thermostat if a heat emitter icon is displayed on the circuit temperature display screen.

7.3 CIRCUIT SETTINGS

Tapping the screen on the displayed information of the DHW or a heating circuit you are viewing (if more than 1 heat circuit installed) will open the circuit settings panel. This will display various options that can be edited. Refer to Figure 7-4.

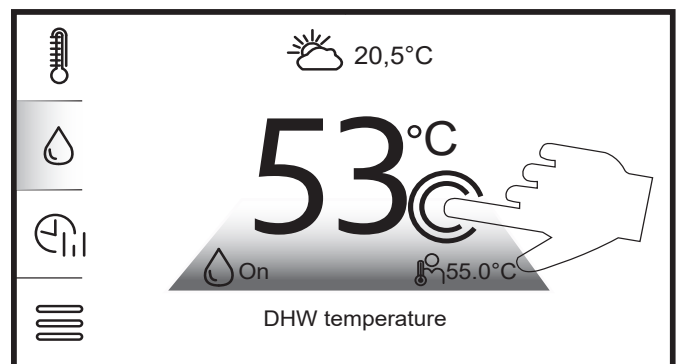


Figure 7-4: Circuit settings access on touch-screen

7.3.1.1 HEAT CIRCUIT SETTINGS

Entering Heat circuit settings will display options the used can edit for the heating circuit. Refer to Figure 7-5.

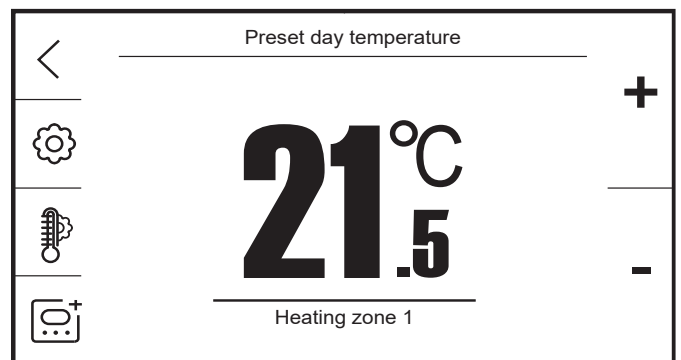








Figure 7-5: Heating circuit settings example





Table 7-2: Heating circuit settings

Button	Function description
	Navigate back to previous screen.
	Tap to amend Circuit work mode
	Tap to view & amend circuit details
	Tap to amend circuit thermostat choice
	Increase required circuit temperature
	Decrease required circuit temperature

7.3.1.2 CIRCUIT WORK MODE

The Circuit work mode sets the circuit to operate as per the consumer preference.

Table 7-3: Heating circuit work modes

Button	Function description
	Auto - Day/Night temperatures based on user schedule
	Off - Circuit will not be heated
	Day Mode - Circuit set to preset day temperature
	Night Mode - Circuit set to preset night temperature

7.3.1.3 HEATING CIRCUIT DETAILS

The heating circuit details panel will display settings of the circuit which you are viewing/editing. Refer to Figure 7-5.

- 'CIRCUIT NAME' – Name of the circuit, e.g., "Ground Floor".
- 'HYSTERESIS' – The value between when a thermostat switches off and back on. The parameter is only available when a thermostat is assigned to the circuit.
- 'PRESET DAY TEMPERATURE' – The target air temperature for when the circuit is set to/scheduled to be in day mode (occupied). The parameter is available for editing only when a thermostat is assigned to the circuit.
- 'PRESET NIGHT TEMPERATURE' (**Setback temperature**) – The target air temperature for when the circuit is set to/scheduled to be in night mode (overnight/unoccupied). The parameter is available for editing only when a thermostat is assigned to the circuit. The setback temperature should be configured to the ideal comfort level minus the temperature value shown in Table 7.4 below (based on heat emitters configured).

Table 7.4: Recommended setback air temperatures

Heat Emitter	Night mode setback value(°C)
Fan-Coil	3
Radiators	3
Underfloor Heating	1

- Heating curve – Adjust the heating curve and shift. Refer to Section 6.3.

7.3.1.4 HEATING CIRCUIT THERMOSTAT CHOICE






Circuit thermostat choice will allow a circuit thermostat to be configured to the specific circuit.

- None: No Thermostat assigned
- Control Panel: Thermostat within Touchscreen display.
- Wired Thermostat
- Wireless Thermostat
- Contact: External Volt Free Contact (Terminal T1 for Circuit 1 and T2 for Circuit 2 or 3).

7.3.2.1 DHW SETTINGS

As per Figure 7-4 when on the DHW (if installed) you will navigate to the DHW settings.






Table 7-5: DHW settings panel

Button	Function description
	Navigate back to previous screen.
	Tap to amend DHW work mode
	Tap to access DHW additional settings
	Increase required circuit temperature
	Decrease required circuit temperature

7.3.2.2 DHW WORK MODE

DHW work modes give selectable modes as per the consumer preference but also have a optional boost function should the consumer wish (in the event of an expected increase in system demand).

Table 7-6: DHW work modes

Button	Function description
	Navigate back to previous screen.
	Boost - Tap to create a temporary DHW demand. Cylinder will be raised to user set value and then stop.
	On - DHW demand on temperature fall by hysteresis (Refer to Section 7.3.2.3)
	Off - Cylinder will not be heated
	Schedule - On/Off based on User schedule

Tapping 'BOOST' will create a temporary DHW demand. The icon colour will change and remain blue until the cylinder reaches user set temperature. If you wish to stop this, Tap the boost icon again. The icon will change to grey to indicate it is off. If the cylinder is within its optimum temperature range the boost function will not activate

7.3.2.3 DHW ADDITIONAL SETTINGS

DHW additional settings provides a sub menu for the 'DHW CYLINDER HYSTERESIS' parameters & 'LEGIONELLA PROTECTION' (If additional heater is configured - Refer to Section 7.4).

'DHW HYSTERESIS' is the amount of temperature drop from the user set temperature in the cylinder before the system will demand more heat in a scheduled ON time period.

If the hysteresis setting is too low this can cause potential cycling of the heat demand in an scheduled ON period. Too high can cause the cylinder to not reach desired temperature and higher energy usage.

7.3.3 CONTROLLER WORK MODE

The Grant Aerona Smart Controller work mode of the controller is selected by tapping the currently displayed symbol on the main screen in the place where the value of the outdoor temperature is displayed. (Refer to Table 7.1).

Table 7-7: Controller work mode

Mode	Description
AUTO	Automatically switches on or off the heating-cooling mode (Cooling not available with Aerona R32 heat pump range), depending on the external temperature.
SUMMER	Adjustable circuit performs the cooling function. (Cooling not available with Aerona R32 heat pump range)
WINTER	Adjustable circuit performs the heating function.

7.4 LEGIONELLA PROTECTION

The Grant Aerona Smart controller has the function to provide protection against legionella by executing a scheduled temperature increase. This is executed on a weekly basis from within the Grant Aerona Smart controller settings.

For protection against legionella the DHW cylinder needs to be periodically raised to a minimum of 60°C to ensure it is sterilised of any present legionella bacteria.

Care must be given to vulnerable people who may be exposed to potentially life-threatening legionella. This group of people include the elderly, pregnant women, young children and those with breathing difficulties. Where legionella disinfection is required more frequently than once a week, this must be provided by other means.

It is important that this decision is based on the welfare of the occupants and not on energy saving measures.

! WARNING !

If the hot water stored in the cylinder has not been used for a prolonged period of time (e.g., a few days) and has not been stored at 60°C, then it is important that the temperature is raised to at least 60°C for a period of one hour before using the hot water.

7.4.1 ENABLING DHW HEATER SUPPORT

'DHW heater' support must be enabled within the system settings menu of the controller for 'disinfection' to be available.

1. Tap the Settings Menu button.
2. Tap 'SERVICE SETTINGS' and input the password: '0000'. Tap 'ENTER' to confirm.
3. Tap 'Installation controller'.
4. Swipe the touchscreen to move down and tap 'HEATERS'.
5. Tap the button next to 'DHW HEATER' to enable heater support.
6. Tap and set 'DHW DELAY' to '75mins' and confirm. (To prevent the Immersion heater from operating during a scheduled DHW demand period of 1 hour).
7. Tap '<' to navigate back.

7.4.2 CONFIGURING LEGIONELLA SETTINGS

Once DHW heater support has been enabled:

1. Navigate to the DHW circuit screen.
2. Tap the displayed temperature for the cylinder to enter the DHW circuit settings.
3. Tap 'DHW ADDITIONAL SETTINGS' (Refer to Table 7-5).
4. Tap the button next to 'disinfection'. This will expand the display for the individual settings for legionella protection for configuration.
 - 'Day' - Day to execute Legionella protection.
 - 'Start Hour' - Time to start.
 - 'Preset temp' - Temperature for DHW cylinder to heat to. (Should not exceed 60°C).

! NOTE !

Legionella protection works independently of the DHW cylinder schedule and will start even if DHW cylinder is scheduled off.

7.4.3 LEGIONELLA DISINFECTION SCHEDULING

Legionella disinfection should be scheduled in a window that is a minimum of 1 hour after a DHW demand and in a setback heating demand period e.g. Overnight. This is to avoid the least amount of loss in the heating circuits.

The Legionella protection can not be run twice in a week should the schedule be changed within the settings.

7.5 TIME SCHEDULES

The Grant Aerona Smart Controller allows for programmable time schedules for the Heating Circuit(s), DHW and the Heat pump itself.

In the situation when the consumer is not at home or at night, the controller can decrease the amount of supplied heat which affects electric consumption.

Time schedules can be set separately for each day of the week or copied across multiple days. If the space is unoccupied Monday to Friday for the same time periods the user could set the hours for Monday and then apply to multiple days.

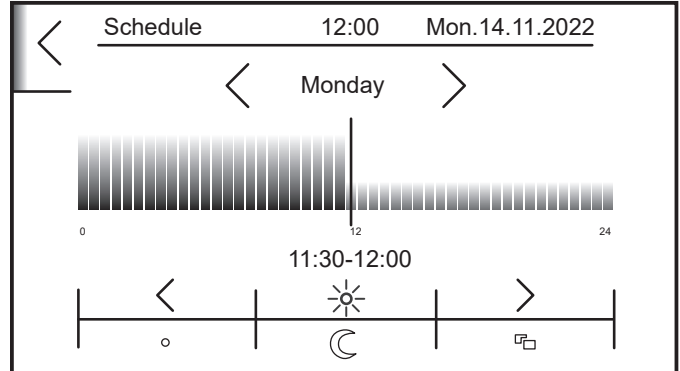


Figure 7-6: Heating time schedule interface

! NOTE !

The ON/OFF time schedule is defined separately for the heat pump and DHW cylinder.

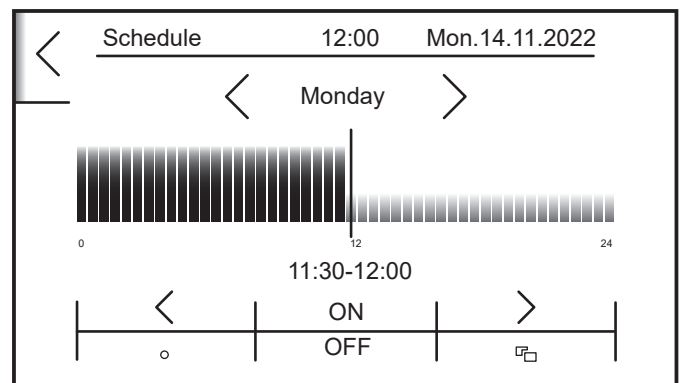


Figure 7-7: DHW/Heat pump time schedule interface

Table 7-8: Time schedule controls

Button	Function description
	Navigation Arrows - Weekday selection and time period selection. Navigate the required day or move selected time period in the specified direction.
	Copy to - Copy the currently set schedule to one or multiple days
	Preset Night mode (Setback Temperature) - Target night temperature for circuits will be applied if a thermostat is assigned to the circuit. If not, the decrease will be set to the value of the Water temperature decrease.
	Preset Day mode - Target day temperature setting for circuits will be applied, if a thermostat is assigned to the circuit.
ON	Option is Configured 'ON'
OFF	Option is Configured 'OFF'

7.5.1 HEATING CIRCUIT SCHEDULE

The schedule for the heating circuit(s) controls the specific time period at which the target day and night temperatures are applied.

To amend a heating schedule:

- 1. Tap the time schedule menu (Refer to Figure and Table 7-1). The schedule icon is available regardless of which circuit or device you are currently viewing.
- 2. Tap the heating circuit you wish to amend from the options.
- 3. Modify the day if different to current by tapping navigation arrow. Refer to Figure 7-6.
- 4. Tap the night mode function and use the navigation buttons to move to the first time period you wish to change (if more than one).
- 5. Tap day mode and use the right navigational button to alter the time periods. Switch between day and night mode for unoccupied portions of the day.
- 6. After defining the required time schedule it can be applied to multiple days. Tap 'COPY TO' and tap the days required. Refer to Table 7-8. Confirm with ✓.

7.5.2 DHW SCHEDULE

The schedule for the DHW cylinder will turn the cylinder heating function from the heat pump on or off on the selected time period. If the cylinder temperature falls below hysteresis value in an off time period the heat pump will not activate.

To amend the DHW schedule:

- 1. Tap the time schedule menu (Refer to Figure and Table 7-1). The schedule icon is available regardless of which circuit or device you are currently viewing.
- 2. Tap 'DHW'.
- 3. Modify the day if different to current by tapping navigation arrow. Refer to Figure 7-7.
- 4. Tap the 'OFF' function and use the navigation button to move to the first time period you wish to change. (if more than one).
- 5. Tap 'ON' and use the right navigational button to alter the time periods. Switch between 'ON' and 'OFF' to create multiple intervals based on end-user requirements
- 6. After defining the required time schedule it can be applied to multiple days. Tap 'COPY TO' and tap the days required. Confirm with ✓. Refer to Table 7-8.

We recommend to schedule up to 4 x 1 hour on periods in a day with a minimum gap of 1 hour between each.

7.5.3 HEAT PUMP SCHEDULE

The schedule for the heat pump will disable the heat pump from activating in the off periods

To amend the Heat pump schedule:

- 1. Tap the time schedule menu (Refer to Figure and Table 7-1). The schedule icon is available regardless of which circuit or device you are currently viewing.
- 2. Tap 'HEAT SOURCE'.
- 3. Modify the day if different to current by tapping navigation arrow. Refer to Figure 7-7.
- 4. Tap the 'OFF' function and use the navigation button to move to the first time period you wish to change. (if more than one).
- 5. Tap 'ON' and use the right navigational button to alter the time periods. Switch between 'ON' and 'OFF' to create multiple intervals based on end-user requirements
- 6. After defining the required time schedule it can be applied to multiple days. Tap 'COPY TO' and tap the days required. Confirm with ✓. Refer to Table 7-8.

We recommend you leave the Heat pump enabled 'ON' at all times. This does not mean the heat pump will be running continually.

! NOTE !

The heat pump schedule will override all other schedules and could cause unwanted heat loss within the space heating or DHW circuits.

7.6 HEAT PUMP SCHEMATIC

The heat pump schematic gives a visual preview of the basic operating functions of the heat pump such as working status, Flow/return temperatures as well as being able to configure the operating mode of the heat pump in relation to the system installed.

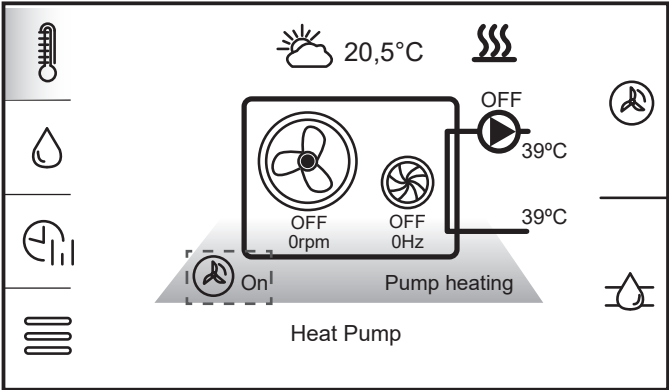


Figure 7-8: Heat pump scheme interface

The heat pump operating modes are accessed by tapping the heat pump scheme icon. Refer to Table 7-9 and Figure 7-8.

Table 7-9: Heat Pump Status

	The heat pump is turned on.
	The heat pump is turned off regardless of the conditions in the system.
	The heat pump is switched on and off according to the set time schedule for the heat pump.

7.7 SYSTEM SCHEMATIC

The system scheme display shows the scheme of the installed and configured system. Icons will change from white to green to indicate they are active such as a motorised valve or the Heat pump. Refer to Figure 7-9 for system schematic example.

Installed diverter valves will indicate via the symbol which direction it is causing the heat to travel. Mixer valves will display a % figure to show their open status.

The system schematic also displays water temperatures from installed sensors (DHW Cylinder, Buffer, Low-Loss Header, Water temperature sensors on adjustable circuits).

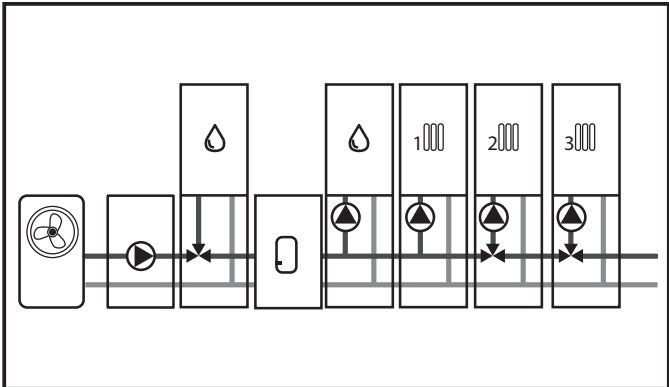


Figure 7-9: System schematic display

! NOTE !

The view of the system schematic depends on the enabled support for the individual circuits, DHW cylinder or buffer installed.

7.8 CIRCUIT CONTROL

The 3 available heating circuits in the Grant AERONA Smart controller are connected and controlled via the following terminals within the wiring centre (Refer to section 5).

Table 7-10: Circuit terminals

Heating circuit	230V Pump/Valve Terminals
1	13(L) & 14(N)
2	15(L) & 16(N)
3	17(L) & 18(N)

Each heating circuit can either have a circulation pump or motorised valve connected to it.

In a conventional system the thermostat (or sensor) will stop the pump or close valve when the actual circuit air temp reaches the target circuit air temp.

7.8.1 THERMOSTATIC PUMP BLOCKADE

If a thermostat has been installed on any heating circuit, you have the following choices in how to control that circuit:

- With pump blockade 'ON'** - Each heating circuit thermostat will control the circulating pump or motorised valve (whichever is installed) for that circuit based on the air temperature the sensor/thermostat is monitoring.
- With pump blockade 'OFF'** - The heating circuit will continue to have circulating pump or motorised valve enabled (whichever is installed) but the smart controller will drive down the flow temperature to the minimum value to maintain the target air temperature within the circuit i.e the circuit remains active. This option would be best suited for open loop room optimisation.

7.8.1.1 ENABLE THERMOSTATIC PUMP BLOCKADE

To enable Thermostatic pump blockade for a circuit:

- Tap the Settings menu and then 'SERVICE SETTINGS'. Enter the password: 0000 on the keypad provided and tap 'Enter'. Refer to Table 7-1 and Section 8 for full Service settings parameters listing.

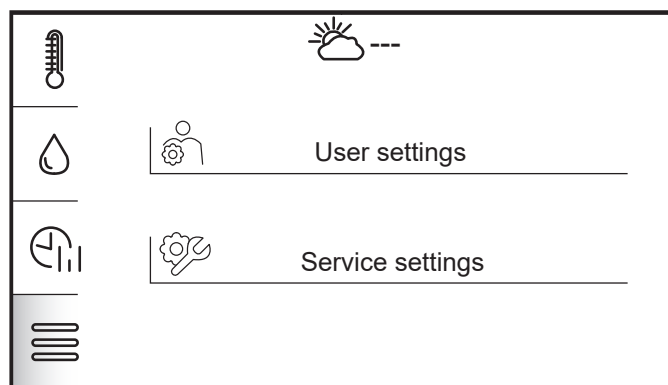


Figure 7-10: Service Settings menu

- Tap 'Installation controller'
- Swiping the Touchscreen display scroll down to the desired circuit and select by tapping. (Refer to Figure 7-11).

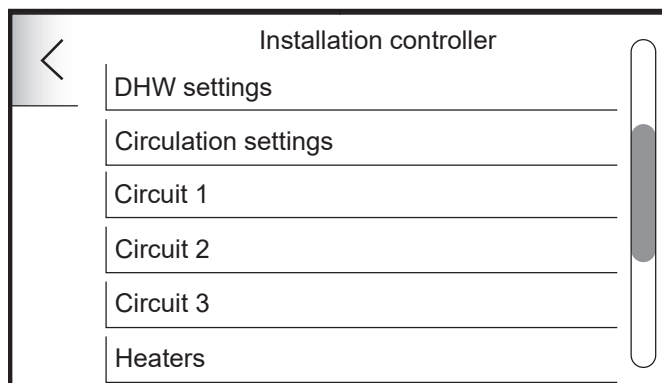


Figure 7-11: Installation controller menu

- Swiping the touchscreen display scroll down to 'Thermostatic pump blockade'. Tap the icon to switch on. (Refer to Figure 7-12)

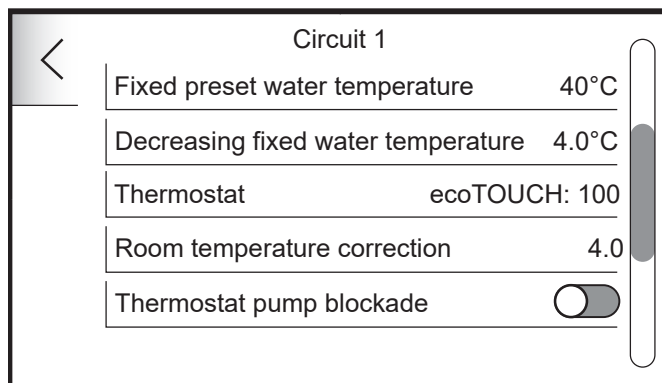


Figure 7-12: Edit Circuit 1 settings

Tap the < button to navigate backwards to the home screen.

7.8.2 CIRCUIT STOP FROM PRESET TEMP

It is possible to control Circuit 2 or 3 based on the circuit flow temperature value via the water temperature sensor that has been installed. The mixing function must also be disabled.

- With Circuit stop from preset Temp 'ON'** - The water temperature sensor will monitor the water temperature of the flow into the circuit from the heat pump and directly control the circulating pump or motorised valve closed when the target water temperature is achieved.
- With Circuit stop from preset Temp 'OFF'** - The heating circuit will continue to have circulating pump or motorised valve enabled (whichever is installed) but the smart controller will drive down the flow temperature to the minimum value to maintain the target water temperature within the circuit i.e the circuit remains active. This option would be best suited for open loop room optimization.

! NOTE !

If a mixer is installed on circuit 2 or 3, 'Circuit stop from preset temp' will not be available.

7.8.2.1 ENABLE CIRCUIT STOP FROM PRESET TEMP

To enable Circuit stop from preset temp for a circuit:

- Tap the Settings menu and then 'SERVICE SETTINGS'. Enter the password: 0000 on the keypad provided and tap 'ENTER'. Refer to Table 7-1 and Section 8 for full Service settings parameters listing.
- Tap 'INSTALLATION CONTROLLER'
- Swiping the Touchscreen display scroll down to the desired circuit and select by tapping. (Refer to Figure 7-11).

4. Swiping the touchscreen display scroll down to 'CIRCUIT STOP FROM PRESET TEMP'. Tap the icon to switch on. (Refer to Figure 7-13).

! NOTE !

'PUMP ONLY' must be enabled. Refer to Figure 7-13.

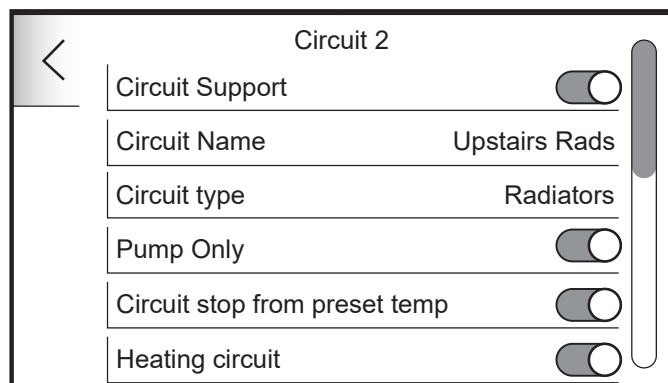


Figure 7-13: Edit Circuit 2 settings

Tap the '<' button to navigate backwards to the home screen. Irrespective of whether pipe sensors are used or not, the space heating performance can be adjusted based on user comfort levels using either the Smart controller or via ecoNET24. (Refer to Section 6.3.2 for Heating curve adjustment guidance)

7.9 USER SETTINGS MENU

User settings can be accessed via the settings menu from the touchscreen display. (Refer to Figure and Table 7-1 and Figure 7-14).

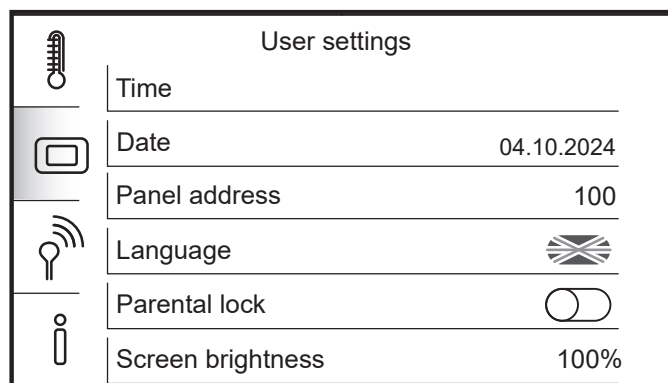


Figure 7-14: User settings menu

- Time - Time will synchronise with paired thermostats.
- Date
- Panel Address
- Language - Menu language selection.
- Parental Lock - The lock will activate after 5 minutes of inactivity. Unlocking the screen is possible after pressing down the screen for 5 seconds.
- Screen Brightness
- Screen saver - Choose screen saver display: None, Empty, Time, Time and Temps.
- Time to screen saver on
- Brightness in screen saver.
- Alarm sound - Enable/Disable Alarm sounds.
- Key sound - Enable/Disable Key sounds.
- Panel temperature correction.

! NOTE !

The temperature in the room should be measured with an additional temperature sensor and the difference between this measurement and the temperature value displayed by the Touchscreen display should be entered into the value of this parameter.

Tapping the radio icon symbol (Refer to Figure 7-14):

- Econet configuration wizard - Wizard configuration of the Wi-Fi Hub.
- Econet status - LAN - connection status of Wi-Fi and Econet web services
- Wi-Fi settings - configuration of connection with Wi-Fi Hub. Connection of Wi-Fi and its configuration is described in this manual. Parameters that should be set by the user: SSID, Security type and network access password.

Refer to Section 10 for Wi-Fi hub connection.

Tapping the **i** symbol (Refer to Figure 7-14):

- Displays diagnostic information about the operation of the controller, Alarms list, Firmware version and updating (e.g., serial number) UID and ISM .

7.10 STORED SYSTEM SETTINGS

The Grant Aeron Smart controller can store and recall a default system setting scheme within its memory.

Once the system has been installed and commissioned the applied settings (including demand schedules and Legionella protection) can be stored within the Grant Aeron Smart controller. This can be recalled if a setting is perhaps inadvertently changed causing issues with the system.

7.10.1 SAVE A SYSTEM DEFAULT

To store the currently set system as a default you will need to:

1. Tap the Settings menu and tap 'SERVICE SETTINGS'. Input the relevant password on the keypad and tap enter. (Password: 0000 - Refer to Section 8).
2. Tap 'INSTALLATION CONTROLLER'.
3. Swipe the screen to scroll down to the bottom and tap 'DEFAULT SETTINGS'.
4. Tap 'SAVE CURRENT SETTINGS AS DEFAULT'.

7.10.2 RESTORE SYSTEM DEFAULT


To restore the currently saved default to the Smart Controller:

1. Tap the Settings menu and tap 'SERVICE SETTINGS'. Input the relevant password on the keypad and tap enter. (Password: 0000 - Refer to Section 8).
2. Tap 'INSTALLATION CONTROLLER'.
3. Swipe the screen to scroll down to the bottom and tap 'DEFAULT SETTINGS'.
4. Tap 'RESTORE DEFAULT'.

! NOTE !

Any paired thermostats will need to be re-paired after a system default has been restored. The memory will clear if unpowered for an extended period of time.

8 SERVICE SETTINGS - INSTALLER

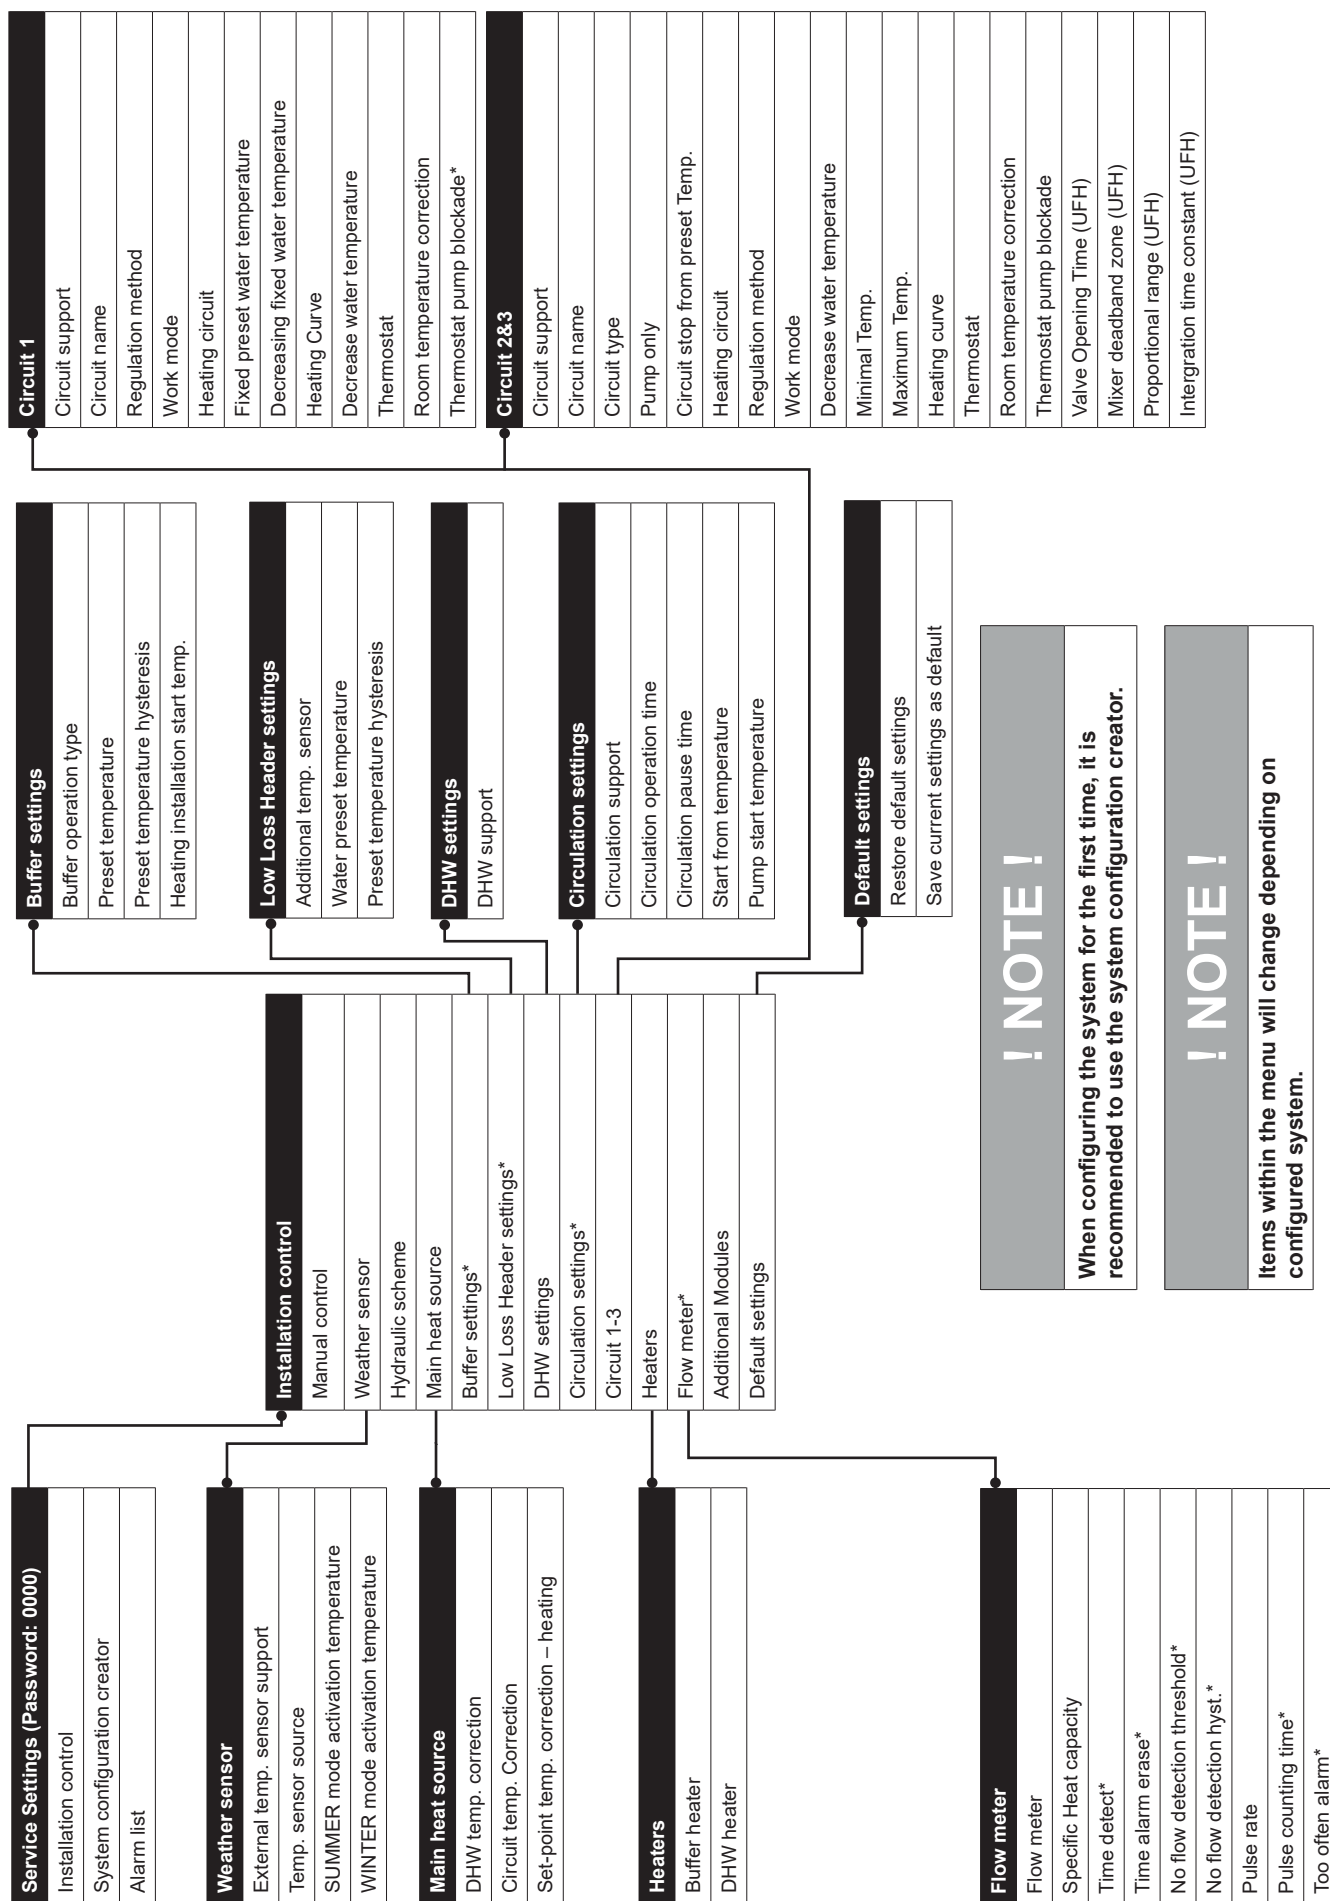

! NOTE !


When configuring the system for the first time, it is recommended to use the system configuration creator.

! NOTE !

Items within the menu will change depending on configured system.

Figure 8-1: System settings menu map

8.1 SERVICE SETTINGS

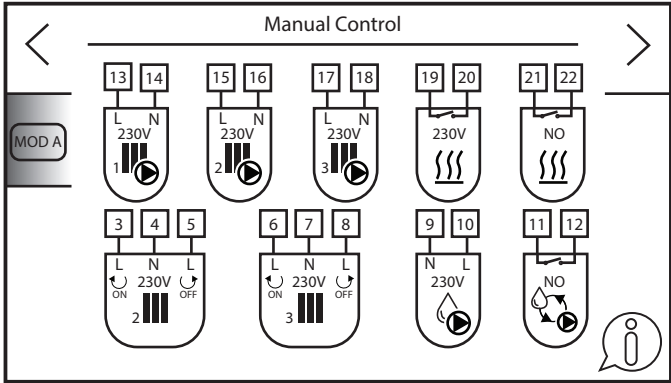Prerequisites	Parameter	Description
Service Menu - Top Level		
	Installation controller	Tap the enter System settings list.
	System configuration creator	Tap to begin System configuration creator. Refer to Section 6.
	Alarm List	Tap to view alarm list history.
Installation controller - Manual Control		
	Manual Control	<p>Tap to enter manual control menu.</p> <ul style="list-style-type: none"> It is possible to activate individual heating system components to conduct operation tests. Turning on or off a particular selected device is done by tapping the symbol on the screen. Note: the controller does not check protection logic, so this menu should be used with awareness of starting outputs in order to avoid damaging the controller and devices connected to its terminals. Long and uncontrolled operation of devices (e.g., pumps) may result in damage.  <p>The diagram shows the 'Manual Control' screen with a grid of 12 control icons. Each icon is labeled with terminal numbers and a control symbol. The icons are arranged in two rows of six. The top row includes a 'MOD A' button, three pump icons (1, 2, 3), a valve icon (4), and a sensor icon (5). The bottom row includes three pump icons (6, 7, 8), a valve icon (9), and a sensor icon (10). Each icon has a '230V' label and a 'NO' label. The screen also features a 'Manual Control' title bar and navigation arrows.</p>
Installation controller - Weather Sensor		
	External temp sensor support	Tap the toggle icon to activate or deactivate External temp sensor support. (Outdoor Weather sensor). This will be ON if it was configured during System configuration creator.
External temp sensor support: ON	Temp. sensor source	<p>Tap to configure or amend the sensor responsible for monitoring outdoor air temperature.</p> <ul style="list-style-type: none"> ecoMulti - The outdoor weather sensor supplied with the Grant Aeron Smart controller kit.. Heat pump - The air temperature sensor installed on the Grant Aeron Heat pump.
External temp sensor support: ON	Summer mode activation temperature	Tap to configure the ambient temperature at which summer mode is activated.
External temp sensor support: ON	Winter mode activation temperature	Tap to configure the ambient temperature at which summer mode is deactivated.
Installation controller - Hydraulic Scheme		
		<p>Entering this option will display available options to select. Choose and confirm with ✓.</p> <ul style="list-style-type: none"> Direct - No Hydraulic Separation present. Buffer Low Loss Header
Installation controller - Main Heat Source		
	DHW Temp correction	Tap to adjust the increase of the target DHW temperature in heating mode.
	Circuit temp correction	Tap to adjust the mixing circuits temperature correction value.
	Set-point temp correction- Heating	Tap to adjust the increase of the target heat pump temperature in heating mode.
Installation controller - Buffer settings		
Hydraulic scheme: Buffer	Buffer operation type	<p>Tap to configure the number of sensors with which the buffer will work.</p> <ul style="list-style-type: none"> One sensor - Water temperature sensor connected to BB terminal. Two sensors. - Water temperature sensors connected to BB & BT terminals.
Hydraulic scheme: Buffer	Preset temperature	Tap to configure target buffer temperature value.
Hydraulic scheme: Buffer	Preset temperature hysteresis	Tap to configure the temperature value drop from preset temperature at which the buffer is heated.
Hydraulic scheme: Buffer	Heating installation start temp	Tap to configure the temperature value at which the circuit pumps will be switched on.

Prerequisites	Parameter	Description
Installation controller - Low Loss Header		
Hydraulic scheme: Low Loss Header	Additional temp. sensor	Tap to enable or disable the water temperature sensor for the Low Loss Header. (Connected to terminal: BB). <i>If disabled, the temperature value is measured from the return temperature on the heat pump.</i>
Hydraulic scheme: Low Loss Header	Preset temperature	Tap to configure the target temperature of the water in the Low Loss Header.
Hydraulic scheme: Low Loss Header	Preset water hysteresis	Tap to configure the temperature value drop from preset temperature at which the Low Loss Header is heated.
Installation controller - DHW settings		
	DHW cylinder	Tap the toggle to enable or disable DHW cylinder support.
Installation controller - Circulation settings We do not recommend the use of Secondary DHW circulation in domestic installations.		
	Circulation support	Tap the toggle icon to activate or deactivate secondary circulation support.
Circulation support: ON	Circulation operation time	Tap to configure the DHW circulation pump operation time. It determines the working time after a break in the circulation pump operation. The DHW circulation pump operates periodically.
Circulation support: ON	Circulation pause time	Tap to configure the DHW circulation pump pause time. Defines the time interval between activations of the circulation pump. The DHW circulation pump operates periodically.
	Start from temperature	Tap the toggle to enable or disable 'PUMP START TEMPERATURE'.
Start from temperature: ON	Pump start temperature	Tap to configure target cylinder temperature threshold to activate the circulation pump. <i>It will be turned off if the temperature of the DHW cylinder is lower than the Pump start temp.</i>
Installation controller - Circuit 1 - (Non-mixing Circuit)		
	Circuit support	Tap the toggle icon to activate or deactivate the circuit support.
	Circuit name	Name of the circuit set by user. Tap to open and adjust.
	Circuit type	Configure the type of heat emitters for the circuit. Tap to open and amend. Circuit 1 is a non-mixing circuit. Radiators or Fan-Coil only.
External temp sensor support: ON	Regulation Method	Tap to configure circuit flow regulation method. <ul style="list-style-type: none"> Fixed - constant set temperature of water in the circuit is maintained. Weather - water temperature is related to Outdoor weather sensor. Outdoor weather sensor required. <i>If "EXTERNAL TEMP SENSOR SUPPORT" is not ON, the Smart controller will only allow fixed circuit flow.</i>
	Work Mode	Tap to amend Heating Circuit work mode. <ul style="list-style-type: none"> OFF Day – Circuit will use higher target circuit temperature. Night – Circuit will use lower target circuit temperature. "DECREASING FIXED WATER TEMPERATURE" or "DECREASE WATER TEMPERATURE" will be applied when the controller is in night mode. <ul style="list-style-type: none"> Schedule – Day or Night mode is set depending on the time schedule.
	Heating circuit	Tap to adjust the space Heating Circuit On or Off.
Regulation Method: Fixed	Fixed preset water temperature	Tap to adjust the fixed preset water temperature for day mode. The Heat pump heats until the fixed preset water temperature is reached.
Regulation Method: Fixed	Decreasing fixed water temperature	Tap to adjust decreasing fixed water temperature. If Regulation method is fixed, this is the value of flow temperature decrease for night mode.
Regulation Method: Weather	Heating Curve	Tap to view and adjust Heating curve for Circuit 1.
Regulation Method: Weather	Decrease water temperature	Tap to view and adjust value of flow temperature decrease when in night mode.
	Thermostat	Displays name of Thermostat currently monitoring the Circuit. Tap to configure thermostat for circuit. <ul style="list-style-type: none"> None Wired - Refer to Appendix A Wireless - Refer to Appendix B Control Panel - Thermostat within the touchscreen display. Contact - External Volt Free contact connection. T1 for circuit 1, T2 for Circuit or 3. Refer to Section 5 for Terminal connections.
Thermostat configured	Room temperature correction	Tap to view and adjust value of automatic correction of room temperature. This is carried out in accordance with the following formula: <ul style="list-style-type: none"> Target temperature with correction = Target temperature of the circuit + (Target temperature of the thermostat assigned to the circuit minus Current temperature of the thermostat assigned to the circuit) x Room temperature correction. By default, the Room temperature correction value is 4.0, and the value range is 0 - 10. It is necessary to find appropriate value of the Room temperature correction. The higher the coefficient, the greater the correction of target circuit temperature. If the setting is "0", the target circuit temperature is not corrected. Note: setting a value of the room temperature coefficient too high may cause cyclical fluctuations of the room temperature.
Thermostat configured	Thermostatic pump blockade	Tap to toggle circuit pump control status when a thermostat is active for the circuit. Refer to Section 7.8. <ul style="list-style-type: none"> ON - when the target room temperature is met, the circuit pump/valve is disabled. OFF - when the target room temperature is met, the circuit pump/valve is not disabled.

Prerequisites	Parameter	Description
Installation controller - Circuit 2 & 3 - (Mixing Circuit) All options from Circuit 1 are applicable with the below additions.		
	Circuit type	Tap the adjust the circuit heat emitters. <ul style="list-style-type: none"> Radiators Fan-coil Underfloor heating
	Pump Only	Tap the toggle icon to configure Pump only On or Off. <ul style="list-style-type: none"> ON - Mixing Disabled OFF - Mixing Enabled
Pump Only: ON	Circuit stop from Preset Temp	Tap to toggle icon to configure circuit pump control status using Water Temperature sensor on circuit flow. <ul style="list-style-type: none"> ON - when target flow temperature is met , the circuit pump/valve is disabled. OFF - when target flow temperature is met , the circuit pump/valve is not disabled.
	Minimal Temp	Tap to adjust minimum target water temperature into the circuit.
	Maximum Temp	Tap to adjust the maximum target water temperature into the circuit. <i>If the maximum temperature is greater than 60°C, the controller will take 60°C as a maximum value.</i>
Pump only: OFF	Valve Opening Time	Tap to adjust the opening time for connected motorised mixing valve. (Fully closed to fully open)
Pump only: OFF	Mixer deadband zone	Tap to adjust the temperature insensitivity of mixer adjustment.
Pump only: OFF	Proportional Range	Tap to adjust the mixer actuator proportional movement.
Pump only: OFF	Integration time constant	Tap to adjust the time for actuator reaction for temperature deviation.
Installation controller - Heaters (Refer to Appendix D)		
	Buffer heater	Tap the toggle icon to enable or disable the buffer immersion heater support. <i>Buffer heater support will activate with a Buffer or Low Loss Header configured.</i>
Buffer heater: ON	Buffer heater (delay)	Tap to adjust the delay time for activating the buffer immersion heater after a heat pump space heating demand starts.
	DHW heater	Tap the toggle icon to enable or disable the DHW Immersion heater support. <i>DHW heater support is required for Legionella protection. Refer to Section 7.4.</i>
DHW heater: ON	DHW heater (delay)	Tap to adjust the delay time for switching on the DHW immersion heater after a DHW demand starts.
Buffer heater: ON and/or DHW heater: ON	Outside temp to activate heater	Tap the toggle icon to enable or disable Outside temp to activate heater. <i>Enabling will create a new selectable box for configuration.</i>
Outside temp to activate heater: ON	Outside temp to activate heater	Tap to adjust the external temperature value beyond which the DHW heater will be activated.
Buffer heater: ON and/or DHW heater: ON	Outside temp force the heater	Tap the toggle icon to enable or disable Outside temp force the heater. <i>Enabling will create a new selectable box for configuration.</i>
Outside temp force the heater: ON	Outside temp force the heater	Tap to adjust the external temperature value at which the heater support will be permanently switched on during heat pump operation.
Installation controller - Flow meter (Refer to Appendix E)		
	Flow meter	Tap to select the flow meter required. <i>Choose from available options and confirm with ✓.</i> <ul style="list-style-type: none"> Default Pulse
Flow meter: Default	Default flow meter	Tap to configure the default flow in the circuit. When exceeded, a no-flow alarm will be reported.
	Specific Heat capacity	Tap to configure the coefficient of liquid used to transfer heat in the heating circuits.
	Time detect	Tap to configure the time after which the no-flow alarm will be reported.
	Time alarm erase	Tap to configure the time after which the no-flow alarm will be reset. <i>The controller will not report an alarm.</i>
	No flow detection threshold	Tap to configure the flow value below which the alarm "Flow error" will be reported.
	No flow detection hysteresis	Tap to configure the No Flow detection hysteresis value at which the alarm will be turned off. <i>If the actual flow rises above the value of No flow detection threshold plus No flow detection hysteresis.</i>
Flow Meter: Pulse	Pulse rate	Tap to configure the Flow sensor pulse rate to calculate flow.
Flow Meter: Pulse	Pulse counting time	Tap to configure the Flow sensor pulse count time duration.
	Too often alarm	Tap to configure the too frequent no-flow alarm detection threshold to limit the frequent reporting of the no-flow alarm.

Prerequisites	Parameter	Description
Installation controller - Default Settings (Refer to Section 7.10)		
	Restore default settings	Tap to recall and apply previously saved default settings.
	Save current settings as default	Tap to save current settings as default. This will save the current setup of the Grant Aeron Smart controller to memory.

! NOTE !

We do not recommend the use of Secondary DHW circulation in domestic installations.

! NOTE !

During the initial setup the smart controller disables support for all heating circuits, DHW cylinder, buffer, and circulation pumps. Depending on the hydraulic system used, these circuits must be turned on.

9 HEAT PUMP PARAMETERS INSTALLER

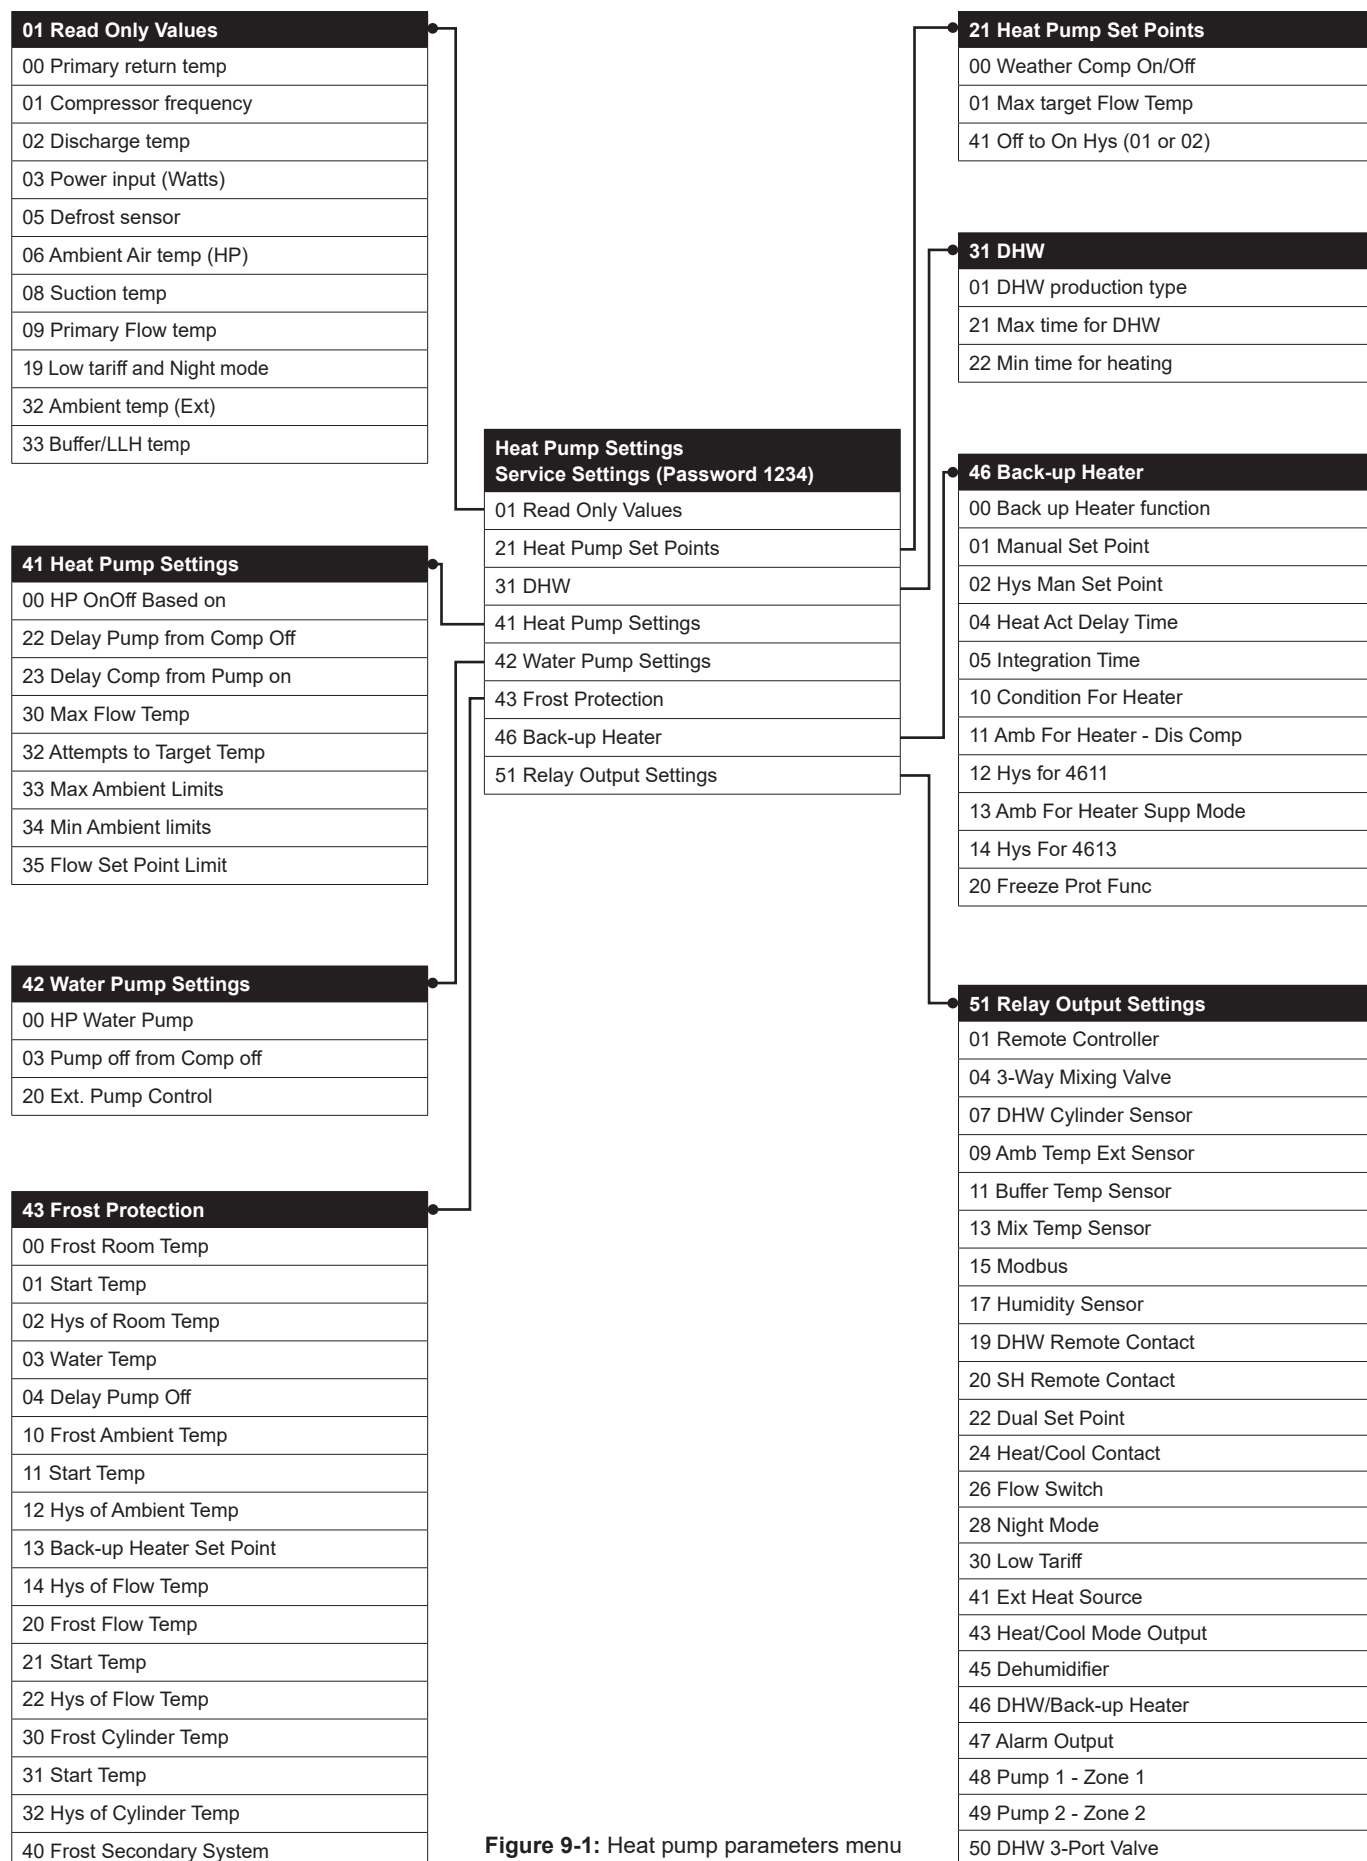


Figure 9-1: Heat pump parameters menu

Parameter	Description
01 Read only Values	Heat Pump operating conditions - Displayed information directly from the Heat pump.
21 Heat Pump Set Points	21 00 - Enable/Disable Weather Compensation on Heat Pump (Do not enable) 21 01 - Setting for the Maximum Target Flow temperature (Smart controller adjusts automatically) 21 41 - Hysteresis set point to enable the Heat pump
31 DHW	31 01 - Heat pump priority on DHW demand 31 21 - Max time the Heat pump can run for a DHW demand 31 22 - Minimum time for a Space heating demand
41 Heat Pump Settings	41 00 - Heat Pump control based on selected set point 41 22 - Delay time for Pump off after compressor off 41 23 - Delay time for Compressor on after Pump on 41 30 - Maximum Flow temperature set point for Heating and DHW 41 32 - Set the max number of attempts for Heat pump to reach target temperature 41 33 - Maximum ambient temperature at which the Heat pump will operate 41 34 - Minimum Ambient temperature at which the Heat pump will operate 41 35 - Flow set point limits
42 Water Pump Settings	42 00 - Operation settings of Water pump 42 03 - Delay time of Water pump OFF from Compressor OFF 42 20 - Operation settings for an external secondary Water pump
43 Frost Protection	43 00 - Frost Detection based on room temperature 43 01 - Start Temperature set point for frost protection based on room temperature 43 02 - Hysteresis of room temperature to activate frost protection based on room temperature 43 03 - Temperature set point of circulated water 43 04 - Time delay for water pump to be deactivated on frost protection end 43 10 - Frost detection based on ambient temperature 43 11 - Start temperature for Frost protection on Ambient Temperature 43 12 - Hysteresis of Ambient temperature 43 13 - Temperature Set point for Back-Up Heater 43 14 - Flow Temperature Hysteresis 43 20 - Enable/Disable Frost protection on Outgoing flow temperature 43 21 - Start Temperature for 43 20 43 22 - Hysteresis of 43 20 43 30 - Enable/Disable Frost protection on DHW Cylinder temperature 43 31 - Start temperature for 43 30 43 32 - Hysteresis for 43 30 43 40 - Frost Secondary System - Frost Protection for a slave heat pump connected in cascade.
46 Backup Heater	46 00 - Enable/Disable Back-up Heater 46 01 - Back-up Heater Temperature Set point 46 02 - Hysteresis for 46 01 46 04 - Delay time for Back-up Heater activation 46 05 - Integration time for starting the heater 46 10 - Power condition of Back-up Heater 46 11 - Ambient temperature for enabling Heater & Disable compressor 46 12 - Hysteresis for 46 11 46 13 - Ambient temperature to activate Heater Supplementary mode 46 14 - Hysteresis for 46-13 46 20 - Enable/Disable Freeze Protection Function
51 Relay Output settings	Enable/Disable Heat Pump terminal PCB relays as listed - Refer to Figure 9-1

10 WI-FI HUB

10.1 GENERAL

The Wi-Fi hub enables the Grant Aeron Smart Controller to be accessed and operated remotely via the Internet or app. Users can monitor the operation of the Grant Aeron Smart controller and modify some operation parameters with the use of a computer, Tablet or mobile phone. Essential features of the module include:

- Communication with econet24.com external server provides access to Smart Controller via Internet.
- Support Wi-Fi wireless network access.
- Preview of the current operation parameters of the Smart Controller in readable and clear "tiles".
- Visual diagrams indicating current operation of the installed hydraulic system.
- Preview and edit options of most user and service parameters of the controller.
- Registration of operation parameters and alarm conditions of the controller.
- E-mail notifications of alarm conditions of the main controller.

The mobile app is available from Google play or IOS store and can be downloaded using the QR codes below.



ecoNET.apk (Android)



ecoNET.app (IOS)

10.2 CONNECTION TO WIRING CENTRE

The hub has to be connected with G3 socket on the wiring centre with the use of ecoLINK interface cable. The ecoLINK interface cable and adapter are a part of the Wi-Fi hub set within your Grant Aeron Smart controller kit.

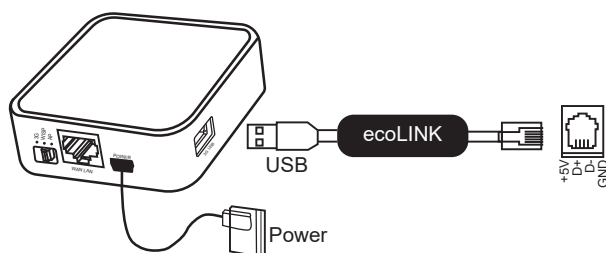


Figure 10-1: ecoLINK Cable connection

Connect the power adapter plug to the mini USB Port socket and 3G USB Port to the ecoLINK interface. A Ethernet cable will be required between the RJ45 Ethernet Port and ADSL router, switch and modem. The ethernet cable does not have to be used if connected via Wi-Fi wireless network access.

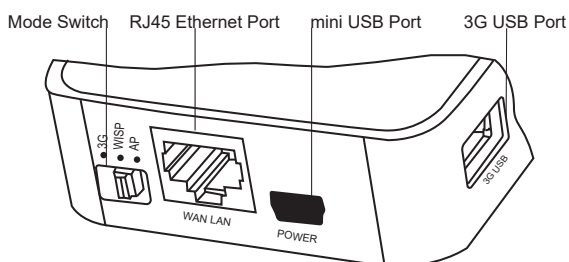


Figure 10-2: Connection ports

The Mode Switch can be set in any position.

After the power is on, hub requires approx. 1 minute in order to load the operational system. The module will then indicate its condition via the LED. In a connection between hub with a main controller is active, a "connection with controller" indicator lights up.

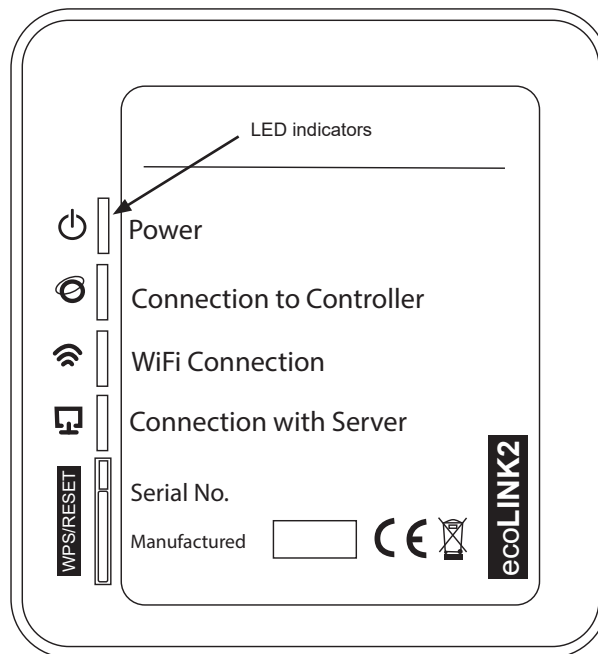


Figure 10-3: Web Module

Table 10-1: LED description

LED	ON/OFF Condition
	Status of Power.
	Active connection to the Aeron Smart Controller.
	Connection to Wireless Network
	Connection to econet24 external server

! NOTE !

The Wi-Fi hub requires active DHCP server connection (as is standard with most household routers). Manual IP assignment for the hub is not supported.

If you should experience any issues during setup or the user forgets their details for logging in the Wi-Fi hub, it is possible to restore default data with the use of the WPS/Reset button on the hub housing.

- Push and hold 'WPS/RESET' for at least 10 seconds.
- Release the 'WPS/RESET' button. LED indicator above should flash several times.
- Wait for approx. 2 minutes.
- The hub will automatically start up and connect with the Internet using default username (**admin**) and password (**admin**).

Wi-Fi access parameters will need to be entered into the touchscreen display via the User settings menu for the hub to be able to make a wireless connection. (Refer to Section 7.9 and 10.3)

10.3 CONNECTION TO INTERNET

The supplied Wi-Fi hub will need to be connected to the internet via either an Ethernet cable between a router and the hub or via Wi-Fi.

10.3.1 USE THE ECONET CONFIGURATION WIZARD

The ecoNET configuration wizard is either accessed via the System configuration creator (on first power on) or from the user settings menu (Refer to Section 7.9).

After you have begun the configuration wizard:

1. Tap '>' to confirm to proceed.
2. Follow the steps displayed to connect the Wi-Fi hub to the wiring centre (if this has not already been done) and tap '>' to confirm.
3. The touchscreen display will confirm if the Wi-Fi hub has been successfully connected. Tap '>' to proceed.
4. Select your preferred connection method:
 - Ethernet - Ethernet cable connection between router and Wi-Fi hub.
 - Wi-Fi - Wireless connection between router and Wi-Fi hub.

If ethernet selected:

5. Follow the steps displayed to connect the ethernet cable to the Wi-Fi hub (if this has not already been done) and tap '>' to confirm connection.
6. The smart controller will automatically perform a test for connection status to the ecoNET external server. The touchscreen will display confirmation connection once this has been made.

If Wi-Fi selected:

5. Fill in required information by tapping boxes to open on-screen keyboard to input.
 - SSID - Name for the Wi-Fi network the hub is required to connect to.
 - Password - Password to access the Wi-Fi network.
 - Type of Security - Wi-Fi security protocol the router uses. WPA 2 is the most commonly utilised.

! NOTE !

Take care to tap '↩' to confirm input parameters via the on-screen keyboard. To go back tap 'v'

6. Tap 'PERFORM A CONNECTION TEST' to test for connection status to the ecoNET external server. The touchscreen will display confirmation connection once this has been made.

! NOTE !

It may take time to authenticate a Wi-Fi connection. Allow time for IP address synchronisation with the router (Up to 5 minutes if first attempt to connect fails).

10.3.1.2 WI-FI MANUAL CONFIGURATION

To configure Wi-Fi access manually, navigate to the user settings menu and select the Radio Icon (Refer to Section 7.9).

1. Tap 'Wi-Fi setting'.
2. Enter the required information by tapping each box to display the on-screen keyboard to input.
 - SSID - Name for the Wi-Fi network the hub is required to connect to.
 - Password - Password to access the Wi-Fi.
 - Type of Security - Wi-Fi security protocol the router uses. WPA 2 is the most commonly utilised.

! NOTE !

The wireless router is only compatible with a 2.4GHz wireless signal.

10.3.2 HOW TO CHECK CONNECTION STATUS

Follow the steps to check the connection status with ecoNET24 services on the touchscreen display.

1. When the heating circuit control interface is shown (see Figure 7-1), tap settings menu. Refer to Table 7-1 and Figure 10-4.

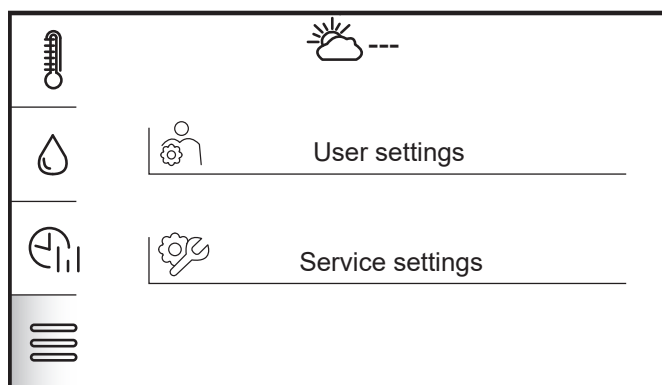


Figure 10-4: Settings selection

2. Tap 'USER SETTINGS'. Refer to Figure 10-5.

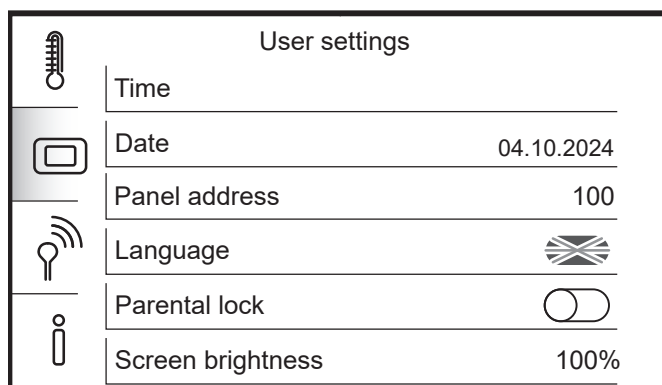


Figure 10-5: User settings menu

3. Tap the Wi-Fi icon on the left. Refer to Figure 10-6.

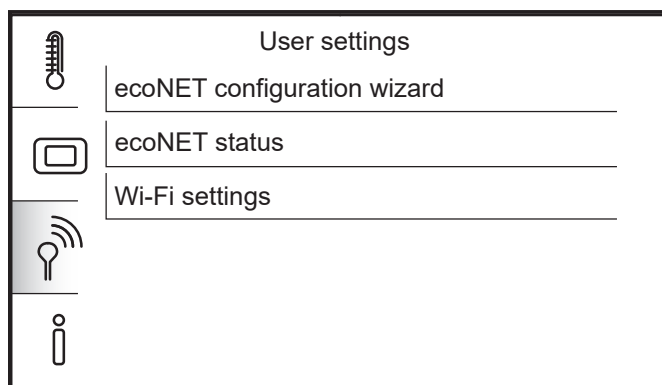


Figure 10-6: ecoNET connection options.

4. Tap 'ECONET STATUS'. Refer to Figure 10-7 for connection status display.

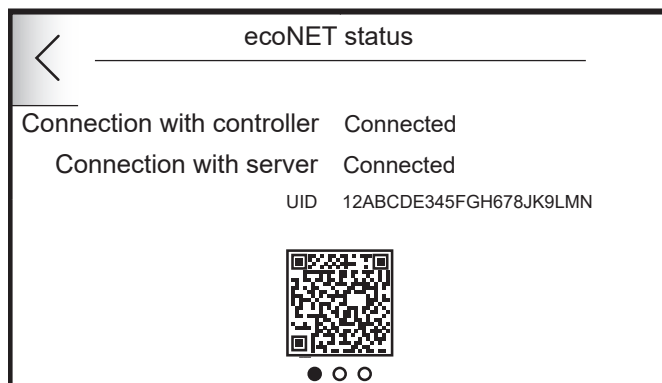


Figure 10-7: ecoNET connection status

11 SERVICING

11.1 COMPONENT REPLACEMENT

11.1.1 MAIN FUSE

The main fuse is located under the wiring centre cover, next to the terminals on the high-voltage side. This is a 250V 5 x 20mm 6.3A 'T' type AC fuse. A spare fuse is located under the cover of the wiring centre on the low-voltage terminals side.

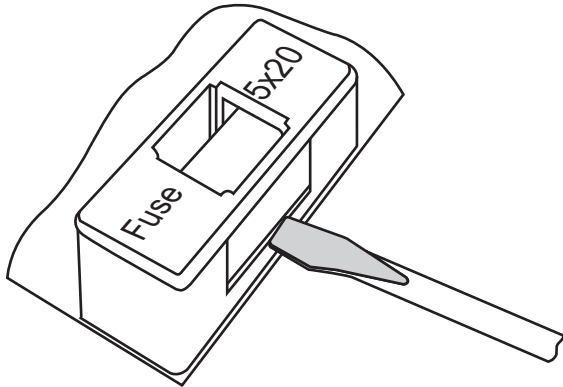


Figure 11-1 Mains fuse replacement

In order to remove fuse lift fuse holder with flat-blade screwdriver and pull out the fuse. Refer to Figure 11-1.

11.1.2 TOUCHSCREEN DISPLAY REPLACEMENT

When replacing the touchscreen display make sure that its software is compatible with software in the wiring centre. The compatibility is kept if the first number of software in the touchscreen display and wiring centre are the same.

11.1.3 WIRING CENTRE REPLACEMENT

Requirements are analogous to the control panel.

11.2 ACCESSORIES & SPARE PARTS

Grant UK offer the individual components to the Smart Controller system should the need arise.

Table 11-1: Accessories & Spare Parts List

Part Code	Item
HPIDSMARTWRTR	Wireless thermostat (with receiver)
HPIDSMARTWRT	Wireless thermostat (no receiver)
HPIDSMARTRECEIVER	Wireless thermostat receiver
HPIDSMARTHRT	Wired thermostat
HPIDSMARTSEN2	Water temperature sensor with 2m cable*
HPIDSMARTSEN4	Water temperature sensor with 4m cable*
HPIDSMARTWSEN	Outdoor Weather Sensor*
HPIDSMARTFLO	Smart Flow sensor**
HPIDSMARTIMM	Immersion Heater Relay**
HPIDSMARTHUB	Smart Controller Wi-Fi Hub*
HPID120	3-Port Diverter valve
HPID122	3-Port Valve body**
HPID123	Motorised valve actuator**

* - supplied as part of Aerona Smart controller kit

** - supplied as part of a Aerona Smart controller installation pack

12 EC DECLARATIONS OF CONFORMITY



UKCA - Safety Declaration of Conformity

This declaration is made under the sole responsibility of the following Manufacturer. The Manufacturer declares that the following product conforms to the requirements of the UK Legislation and Regulations as detailed below.

The Technical Construction Files are retained at the Manufacturer's location.

Product: Grant Smart Controls

Model: GRANTSMARTCONKIT

In accordance with the following directive(s) or Regulation(s), provided that the products are installed and used in accordance with our instructions:

S.I. 2016/1101: Electrical Equipment (Safety) Regulations 2016

S.I. 2016/1091: Electromagnetic Compatibility Regulations 2016

S.I. 2012/3032: The Restriction of the Use of Certain Hazardous Substances in Electrical
and Electronic Equipment Regulations 2012

following the provisions of:

BS EN 60730-2-9:2010

BS EN 660730-1:2016-A1:2019

BS EN 50581: 2012

Place of Issue
Date of issue

United Kingdom
13 December 2023

Technical File Compiler and
Authorised Signatory

A handwritten signature in black ink, appearing to read "Neil Sawers", written over a horizontal line.

Neil Sawers
Commercial Technical Manager

Grant Engineering (UK) Ltd

Frankland Road | Blagrove | Swindon | SN5 8YG
+44(0)1380 736920 | info@grantuk.com | www.grantuk.com

REGISTERED IN ENGLAND No: 3196757. REGISTERED OFFICE: AS ABOVE

GUK13122023 UKCA DoC GSKK

13 HEALTH AND SAFETY INFORMATION

13.1 GENERAL

The Health and Safety information given in this Section relates to the Grant Aeron smart controller only.

For details of the Health and Safety Information for the heat pump, refer to Section 14 of the Aeron³ installation and servicing instructions supplied.

For details of the Health and Safety Information for any other heating appliances being used, refer to the instructions supplied with the appliance.

Under the Consumer Protection Act 1987 and Section 6 of the Health & Safety at Work Act 1974, we are required to provide information on substances hazardous to health (COSHH Regulations 1988).

14 DISPOSAL AND RECYCLING

14.1 DIRECTIVE WEEE 2012/19/EU

Purchased product is designed and made of materials of the highest quality.

The product meets the requirements of the Directive 2012/19/EU of 4 July 2012 on waste electrical and electronic equipment (WEEE), according to which it is marked by the symbol of crossed-out wheeled bin (like below), meaning that product is subjected to separate collection.

Responsibilities after finishing a period of using product:

- Dispose of the packaging and product at the end of their period of use in an appropriate recycling facility,
- Do not dispose of the product with other unsorted waste,
- Do not burn the product.
- By complying with the above obligations of controlled disposal of waste electrical and electronic equipment, you avoid harmful impact on the natural environment and threats to human health.

15 GUARANTEE

You are now the proud owner of an Aerona Smart Controller for use with the Grant Aerona Air Source Heat Pump which has been designed to give years of reliable, trouble free operation.

Grant Engineering (UK) Limited guarantees the manufacture of the Aerona Smart Controller including all electrical and mechanical components supplied with it for a period of **twelve months from the date of installation**⁴, provided that the Smart Controller and the air source heat pump with which it is being used have been installed in full accordance with the installation and servicing instructions issued.

This will be extended to a total period of **two years** if the Smart Controller is registered with Grant Engineering (UK) Limited **within thirty days of installation**⁴, and it is checked, along with the associated valves, sensors, etc. when the heat pump is serviced at twelve monthly intervals³. See main Terms and Conditions below.

Registering the product with Grant Engineering (UK) Limited

Please register your Smart Controller with Grant Engineering UK Limited **within thirty days of installation**. To do so visit www.grantuk.com and click the 'Register Product' link in the top right-hand corner of the home page, where you can register your Smart Controller for a further **twelve months** guarantee (giving **two years** from the date of installation). This does not affect your statutory rights¹.

If a fault or defect occurs within the manufacturer's guarantee period

If your Smart Controller should fail within the guarantee period, you must contact Grant Engineering (UK) Limited, who will arrange for the repair under the terms of the guarantee, providing that the Smart Controller and the heat pump with which it is being used have been correctly installed, commissioned and serviced (if the appliance has been installed for more than twelve months) by a competent person and the fault is not due to tampering, system water contamination, misuse, trapped air or the failure of any external components not supplied by Grant Engineering (UK) Limited, e.g. pipework, etc.

This two-year guarantee only applies if the Smart Controller is registered with Grant Engineering (UK) Limited within thirty days of installation⁴ and is checked along with the associated valves, sensors, etc. when the heat pump is serviced after twelve months.

In the first instance

Contact your installer or commissioning engineer to ensure that the fault does not lie with the system components, discharged batteries in wireless thermostats, or any incorrect settings of the Smart Controller that falls outside of the manufacturer's guarantee otherwise a service charge could result. Grant Engineering (UK) Limited will not be liable for any charges arising from this process.

If a fault covered by the manufacturer's guarantee is found

Ask your installer to contact Grant Engineering (UK) Limited, Service Department on +44 (0)1380 736920 who will arrange for a competent service engineer to attend to the fault.

Remember - before you contact Grant Engineering (UK) Limited

Ensure the Smart Controller and the air source heat pump with which it is being used have been installed, commissioned and serviced by a competent person in accordance with the installation and servicing instructions.

Ensure the problem is not being caused by the heating system, discharged batteries in wireless thermostats, or any incorrect settings of the controls.

Free of charge repairs

During the **two year** guarantee period no charge for parts of labour will be made, provided that the Smart Controller and the air source heat pump with which it is being used have been installed and commissioned correctly in accordance with the manufacturer's installation and servicing instructions, it was registered with Grant Engineering (UK) Limited within thirty days of installation⁴ and, for Smart Controllers and air source heat pumps over twelve months old, details of annual service is available³.

The following documents must be made available to Grant Engineering (UK) Limited on request:

- Proof of purchase
- Commissioning Report Form
- Service documents
- System Design Criteria

Chargeable repairs

A charge may be made (if necessary following testing of parts) if the cause of the breakdown is due to any fault(s) caused by the plumbing or heating system, e.g. contamination of parts due to system contamination, sludge, scale, debris or trapped air. See 'Extent of manufacturer's guarantee' below.

Extent of manufacturer's guarantee:

The manufacturer's guarantee does NOT cover the following:

- If the Smart Controller has been installed for over two years.
- If the Smart Controller and/or the air source heat pump with which it is being used have not been installed, commissioning, or serviced by a competent person in accordance with the installation and servicing instructions.
- The serial number has been removed or made illegible.
- Fault(s) due to accidental damage, tampering, unauthorized adjustment, neglect, misuse or operating the Smart Controller and/or the air source heat pump contrary to the manufacturer's installation and servicing instructions.
- Damage due to external causes such as bad weather conditions (flood, storms, lightning), fire, explosion, accident or theft.
- Fault(s) due to incorrectly sized expansion vessel(s), incorrect vessel charge pressure or inadequate expansion on the system.
- Fault(s) caused by external electrics and external components not supplied by Grant Engineering (UK) Limited.
- Air source heat pump servicing, de-scaling or flushing.
- Checking and replenishing system pressure.
- Electrical cables and plugs, external controls not supplied by Grant Engineering (UK) Limited.
- Heating system components, such as radiators, pipes, fittings, pumps and valves not supplied by Grant Engineering (UK) Limited.
- Instances where the Smart Controller has been un-installed and re-installed in another location.
- Use of spare parts not authorised by Grant Engineering (UK) Limited.
- Consumable items including, but not limited to, batteries, antifreeze and biocide inhibitor.
- The replacement of batteries in wireless thermostat.
- The cost and provision of any specialist access equipment, or any associated costs, required to inspect, repair, service or replace any units not installed in accordance with these installation instructions, irrespective of whether the heat pump is deemed to be at fault or not.

Terms of manufacturer's guarantee

The Company shall mean Grant Engineering (UK) Limited.

The Smart Controller and the heat pump with which it is being used must be installed by a competent installer and in full accordance with the relevant Codes of Practice, Regulations and Legislation in force at the time of installation.

The Smart Controller is guaranteed for two years from the date of installation⁴, providing that after twelve months the annual service has been completed³ and the heat pump registered with the company within thirty days of the installation date⁴. Any work undertaken must be authorised by the Company and carried out by a competent service engineer.

Proof is provided that the system has been flushed or chemically cleaned where appropriate (refer to BS 7593) and that the required quantity of a suitable corrosion inhibitor added.

Proof of annual servicing (including the checking of any expansion vessels and pressure relief valves) must be provided if and when requested by the Company.

IMPORTANT Grant Engineering (UK) Limited **strongly recommends** that a Grant Mag-One in-line magnetic filter/s (or equivalent⁵) is fitted in the heating system pipework. This should be installed and regularly serviced in accordance with the filter manufacturer's instructions.

This guarantee does not cover breakdowns caused by incorrect installation, neglect, misuse, accident or failure to operate the Smart Controller and/or heat pump in accordance with the manufacturer's installation and servicing instructions.

The Smart Controller is registered with the Company within thirty days of installation. Failure to do so does not affect your statutory rights¹.

The balance of the guarantee is transferable providing the installation is serviced prior to the dwelling's new owners taking up residence. Grant Engineering (UK) Limited must be informed of the new owners's details.

The company will endeavour to provide prompt service in the unlikely event of a problem occurring but cannot be held responsible for any consequences of delay however caused.

This guarantee applies to Grant Engineering (UK) Limited Smart Controllers purchased and installed on the UK mainland, Isle of Wight, Channel Islands and Scottish Isles only². Provision of in-guarantee cover elsewhere in the UK is subject to agreement with the company.

All claims under this guarantee must be made to the Company prior to any work being undertaken. Invoices for call out/repair work by any third party will not be accepted unless previously authorised by the Company. Proof of purchase and date of installation, commissioning and service documents must be provided on request.

If a replacement Smart Controller is supplied under the guarantee (due to a manufacturing fault) the product guarantee continues from the installation date of the original Smart Controller and not from the installation date of the replacement⁴.

- The replacement of a Smart Controller under this guarantee does not include any consequential costs.

Foot notes

1. Your statutory rights entitle you to a one-year guarantee period only.
2. The UK mainland consists of England, Scotland and Wales only. Please note that for the purposes of this definition, Northern Ireland, Isle of Man and Scilly Isles are not considered part of the UK mainland.
3. We recommend that your Smart Controller and the air source heat pump with which it is installed are serviced every twelve months (even when the guarantee has expired) to prolong the lifespan and ensure it is operating safely and efficiently.
4. The guarantee period will commence from the date of installation, unless the installation date is more than six months from the date of purchase, in which case the guarantee period will commence six months from the date of purchase.
5. As measured by gauss. The Mag One magnetic filter has a Gauss measurement of 12000.

Version 1.0 - December 2023

APPENDIX A

WIRED THERMOSTAT

A.1 GENERAL

The Grant Wired thermostat is designed to provide individual circuit control via the Grant Aeron Smart Controller.

The thermostat is installed in a suitable location to monitor the circuit, e.g., Ground floor hallway, and is designed to maintain a target temperature.

The thermostat on the backlit LCD display shows information about the circuit temperature value, selected operating mode, current time with simultaneous clock synchronization with the main controller.

A.2 INSTALLATION

The thermostat is intended for installation only in a dry, habitable location and should be mounted to the wall. After choosing the place of installation, make sure that:

- The selected location is free of excessive humidity and the ambient temperature of the thermostat should be within the range of 0 to 40°C,
- The chosen location should ensure free air circulation and should be located away from heat-emitting sources, e.g., electronic equipment, fireplace, heater and direct sunlight.
- The thermostat should be mounted at a height enabling convenient operation, typically 1.5m above the floor. (Refer to Figure 3-1)

The thermostat should be screwed to the wall with mounting screws. Access to the screw holes is obtained by opening and removing the back cover of the thermostat. A flat screwdriver can be used to open the cover.

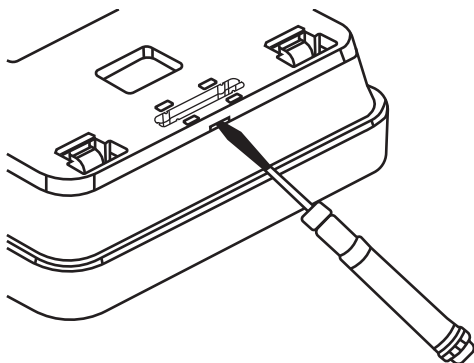


Figure A-1: Wired thermostat back access

The cover is screwed to the selected location of the wall with the appropriate position (UP), as shown in the Figure below. The hole spacing can be determined by attaching the cover to the wall.

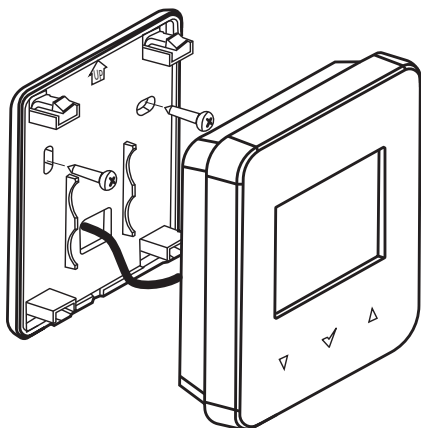


Figure A-2: Wired thermostat wall fixing

Before reattaching the cover, lead the wire connecting the thermostat with the wiring centre through the hole. The cable must be recessed into the wall. The cable can not be routed together with the electrical cables of the building. The cable should not run in the vicinity of devices emitting strong electromagnetic fields. Then attach the thermostat to the mounting frame using the clips.

The VCC, GND, D+, D- terminals of the thermostat should be connected to the transmission socket of the main controller. Refer to Figure A-3.

! NOTE !

A 4-core cable with a cross-Section of min. 0.5 mm².

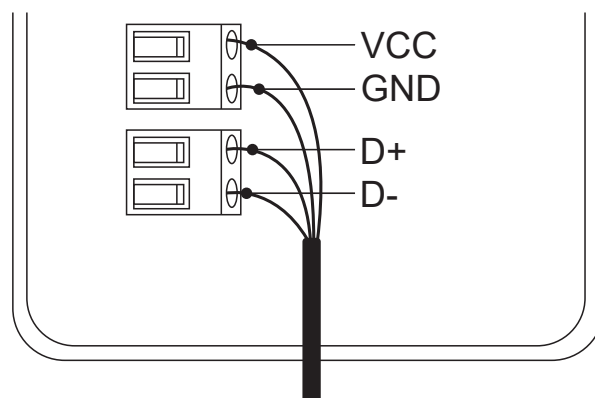


Figure A-3: Wired Thermostat Wiring

! NOTE !

Close attention must be paid to the 4 connections for Voltage, Ground and Polarity. Ensure they match to corresponding wires from touchscreen panel

A.3 THERMOSTAT PANEL

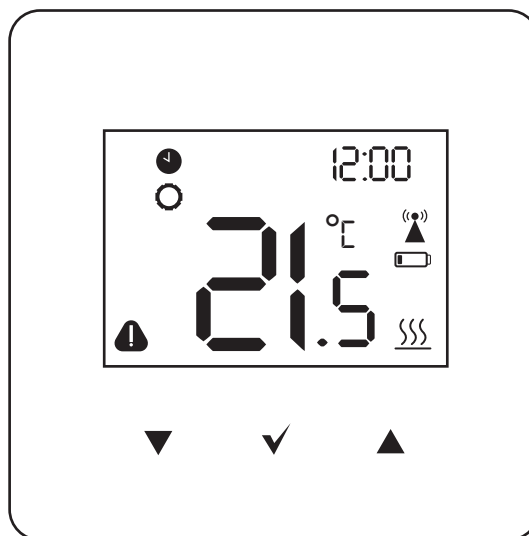











Figure A-4: Wired (& Wireless) thermostat panel LCD

Table A-1: Wired (& Wireless) thermostat LCD symbols

Symbol	Symbol description
	Alarm symbol
	Schedule - Thermostat is schedule managed
	Parameter editing
	Heat demand
	Radio signal (Wireless Thermostat only)
	Low battery indicator (Wireless Thermostat only)
	Decrease parameter
	Confirm
	Increase parameter

A.4 PAIRING

The wired thermostat should be connected as part of the Smart Controller configuration creator for the circuit that the thermostat will measure. To pair again you can follow this within the individual circuit settings to re-pair to the Grant Aeron Smart controller.

- Access the circuit you wish to pair with a wired thermostat panel from the Circuit settings within the System settings menu (Refer to Section 8) and select the Thermostat option from the menu and confirm you wish to overwrite if a thermostat is already present on the circuit.
- The pairing wizard will begin and will instruct you to set put the desired wired thermostat into pairing mode.
- Follow the on-screen prompts. Hold the up and down buttons simultaneously for 2 seconds. The screen will change to display you have entered the user menu where you then select parameter '03' in the user menu of the thermostat. 'PAR' will be displayed on the screen. When confirmed with the '✓' button, the pairing function will start (the word 'PAR' begins to flash).
- Tap '>' on the touchscreen display.
- Confirmation of the pairing will be confirmed by the message 'END' and 'Succ' on the thermostat.
- After pairing a room thermostat holding the '✓' down will return you first to the previous menu and then the back to the main screen in 2 second intervals.

A.5 CHANGING SETPOINT TEMPERATURE

Tapping the up or down arrows will prompt the thermostat into the check/editing of target temperature causing the current target saved temperature to flash.

The first tap of the arrow will trigger the edit temperature function but will not change the value. Tapping the arrow again will then change the value either up or down. Tapping the '✓' will confirm, save and exit.

Not confirming a new target with 5 seconds of inactivity will cause the thermostat to exit the editing mode without changing the target temperature.

! NOTE !

Holding the up or down arrows for more than 2 seconds will cause a fast change to the parameter.

A.6 HOTEL MODE

Hotel mode can disable the wired thermostats ability to change the Smart Controller parameters and schedules. We recommend this be activated to avoid conflicting programmed settings between the wired thermostat and the Grant Aeron Smart controller.

- To access the service menu press and hold the down arrow and the confirmation tick capacitive buttons for 2 seconds. After which you will need to enter the number sequence **1410** and confirm with the '✓'.
- To enter the password you will need to cycle each of the 4 digits with the up or down arrow and confirm that digit with the '✓'. On the confirmation of the fourth digit you will continue to the service menu.
- Navigate to parameter '2' and select Hotel mode with the '✓'. Default setting for hotel mode is off and the arrows will cycle through options. Ensure On is visible and confirm.
- Holding the '✓' for 2 seconds will save and exit the menu back to the home screen.

A.7 USER MENU

The user menu is entered by holding simultaneously the and buttons for 2 seconds. Individual parameters of the user menu are visible as consecutive indications displayed on the main screen as described in the table below.

Depending on the controller series, some operating modes and parameters in the user menu may not be visible.

The parameters are selected using the up or down buttons and the tick button is confirmed by the selection.

Table A-2: Thermostat menu

Code	Alert description
P01	Schedules
P02	Copying Schedules.
P03	Pairing
P04	Setting the clock.
P05	'Day' preset temp.
P06	'Night' preset temp.
P07	'Antifreeze' Preset temp.
P08	'Party' Preset temp.
P09	Time duration of the 'Party' mode. (hours)
P10	'Holiday' Preset temp.
P11	Time duration of the 'Holiday' mode. (days)
P12	Time duration of the 'Out of house' mode. (hours)
P13	Time duration of the 'Airing' mode. (mins)
P14	Time one time of the HUW. (hours)
P15	Activate/Deactivate Key sounds.
P16	Activate/Deactivate Alarm sounding. <i>Turning OFF will only display alarm symbol on LCD screen.</i>
P17	Activate/Deactivate Alarm sounding OFF between 22.00 and 06.00.
P18	Adjust Screen contrast. (%)
P19	Adjust LCD screen backlight. (%)
P20	Room thermostat temperature hysteresis. (°C)
P21	Activate/Deactivate parental lock.
P31	Thermostat program version.
P32	Thermostat temperature correction (°C)
P34	Restore factory settings
P35	Thermostat address.
P40	Activate/Deactivate Fuel level indicator
P41	Activate/Deactivate outdoor temperature indication.
P42	Show/Hide display on clock screen.
P50	Temperature floor sensor

A.8 ERROR CODES

The Grant Aeron Smart controller communicates alerts to the thermostat when present in the system. Refer to Table A-3 for determining the fault.

Table A-3: Thermostat alarm codes

Code	Alert description
1	Outside temperature sensor error
2	1 - No communication with the controller
3	No compatibility of programs
4	3 - Panel temperature sensor error
5	DHW sensor error
6	Upper buffer temperature sensor error
7	6 - Lower buffer temperature sensor error
8	Circuit 2 temperature sensor error
9	Circuit 3 temperature sensor error
10	Anti-freeze active
12	No communication with the thermostat
13	No communication with thermostat circuit 1
14	No communication with thermostat circuit 2
15	No communication with thermostat circuit 3
16	15 - alarm from digital input
17	No flow detected
18	Too often no flow detected
20	19 - No communication with heat pump module
21	Circuit 4 temperature sensor error (not used)
22	Circuit 5 temperature sensor error (not used)
23	Circuit 6 temperature sensor error (not used)
24	Circuit 7 temperature sensor error (not used)
25	No communication with thermostat circuit 4 (not used)
26	No communication with thermostat circuit 5 (not used)
27	No communication with thermostat circuit 6 (not used)
28	No communication with thermostat circuit 7 (not used)
98	Service alarm
100-140	Alarms from heat pump

APPENDIX B - WIRELESS THERMOSTAT AND RECEIVER

B.1 GENERAL

The Grant Wireless receiver & thermostat are designed to provide wireless circuit control via the Grant Aeron Smart controller.

The thermostat should be installed in a suitable location to monitor the circuit, e.g., First floor hallway, and is designed to maintain a target temperature. By sending a radio signal to the module connected to the wireless receiver.

The thermostat on the backlit LCD display shows information about the circuit temperature value, selected operating mode, current time with simultaneous clock synchronization with the touchscreen display.

B.2 INSTALLING WIRELESS RECEIVER

The wireless receiver should be mounted on a wall near the installation location of the wiring centre. If the radio connection is poor, try placing the wireless receiver in other places. Moving the wireless receiver even by a few centimetres can affect the quality of the connection.

! NOTE !

Placing a wireless receiver in a metal casing, e.g. a mounting box, a metal boiler casing, etc. will block the radio signal and thus interfere with the operation.

The radio module should be screwed to the wall with mounting screws. Access to holes for screws is obtained after unscrewing the cover of this module. Refer to Figure B.1.

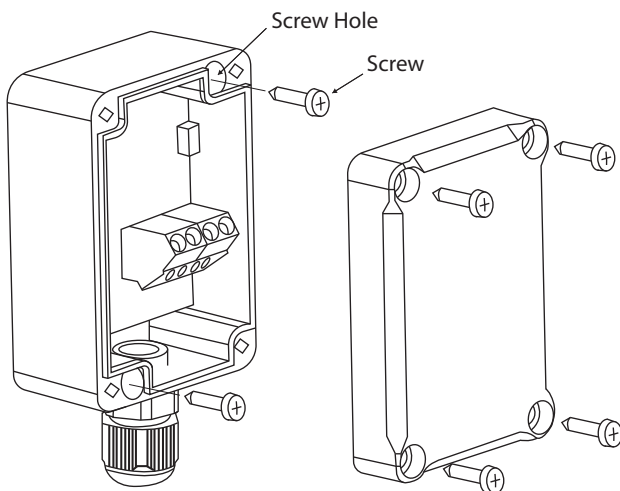


Figure B-1: Wireless receiver wall fixings

Terminals D +, D-, GND, 12VDC of the Wireless receiver should be connected to the G1 socket of the wiring centre.

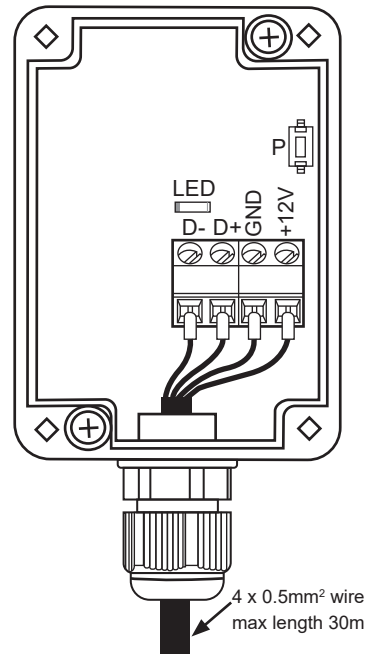


Figure B-2: Wireless receiver wiring

! NOTE !

Ensure the correct polarity of the connection of the D+, D- signals and the GND, +12V power supply between the thermostat and the wiring centre. Incorrect connection may lead to damage to the main controller or errors in its operation.

The maximum cable length depends on the cross-section of the wires. For a 0.5 mm² wire, it should not exceed 30m. The cross-section should not, however be less than 0.5 mm².

B.3 WIRELESS THERMOSTAT

The wireless thermostat is intended for installation only in a dry habitable location and should be placed on a flat surface (as a free-standing device) in a room representative for a given heating circuit. After choosing the place of installation, make sure that:

- The selected location is free of excessive humidity and the ambient temperature of the thermostat should be within the range of 5..35°C.
- The chosen location should ensure free air circulation and should be located away from heat-emitting sources, e.g., electronic equipment, fireplace, heater and direct sunlight.
- The selected place must not cause interference or a lack of radio signal.

B.3.1 INSERTING OR REPLACING THE BATTERIES

To insert or replace the battery, remove the back cover of the thermostat housing.

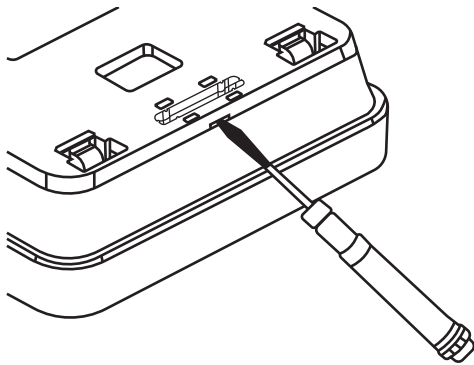


Figure B-3: Wireless Thermostat back access

When inserting the batteries, the battery poles have to be positioned correctly. Check thermostat moulding for guidance.

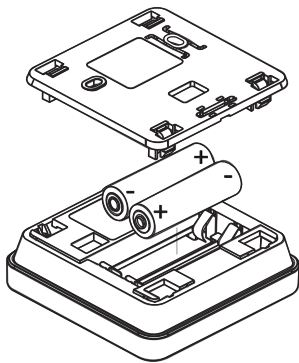


Figure B-4: Battery placement

It is recommended to use alkaline batteries to power the thermostat. The thermostat working time depends on the quality of the batteries used. Refer to Appendix A, Figure A-4 and Table A-1 for low battery indicator symbol.

B.3.2 PAIRING A WIRELESS THERMOSTAT WITH THE WIRELESS RECEIVER

A wireless thermostat will need to be paired with the wireless receiver connected to the wiring centre. Follow the steps to access the individual circuit controls and begin the pairing wizard or follow the steps when using the system configuration creator. Refer to Section A4.

- If multiple wireless thermostats are required, the radio address for a second or third will need to be changed prior to pairing to avoid pairing conflicts. Refer to Appendix B.4 for multiple thermostat support.
- Pair all required wireless thermostats in the 1st circuit pairing during system configuration or access the circuit settings of an installed circuit after the system configuration has been completed to save the thermostats to the wireless receiver memory. Refer to Section 6 for System configuration creator & Section 7.3 for heating circuit settings.
- The pairing process for the wireless thermostats is similar to the wired thermostat. Refer to Section A.4.
- After all thermostats are paired, return them to their respective home screen by holding the '✓' button down for 4 seconds.
- With multiple wireless thermostats paired, you will be given a choice based on the address of the thermostats saved to the memory of the wireless receiver. Select the thermostat you wish to assign to a specific circuit from the displayed list on the touchscreen display.
- For a second or third circuit, confirm already paired thermostats when prompted to pair to access wireless receiver memory for saved thermostat list.

! NOTE !

Allow up to 1 minute for connection of thermostats and circuit amends to take effect.

! NOTE !

Until the pairing with the wireless receiver is complete, the alarm and radio symbols are permanently displayed on the thermostat screen.

The structural elements of the building, the layout and equipment of rooms, the amount of electronic equipment, the distance between the wireless receiver and the thermostat all affect the quality of the radio signal.

Therefore when choosing a place to install the thermostat, take into account the obtained signal level in the selected location by observing the symbol on thermostat screen. If the symbol:

- is not displayed - Connection has been established
The symbol is shown only briefly during active radio communication with the wireless receiver.
- flashing - There is no connection or there is a weak signal and you should choose a different place to install the thermostat or add a signal repeater.

! NOTE !

The value of the radio signal strength can be read in parameter '30' of the thermostat user menu.

If the radio connection to the thermostat is lost, the Smart Controller will go into an operating mode without a thermostat after a few minutes.

After establishing the radio connection with the thermostat in the touchscreen display Information menu in the Software versions tab, the thermostats will be shown as a Wireless thermostat, with the version of the software displayed.

Connecting the wireless receiver to the wiring centre again does not require pairing if the thermostats have previously been paired.

B.4 MULTIPLE THERMOSTAT SUPPORT

The wireless receiver can manage up to 3 wireless thermostats. Utilising multiple thermostats with the wireless receiver will require setting an individual address for each thermostat to avoid conflicts in the heating circuits they are assigned to and must be done prior to assigning to a circuit.

To amend the address of an individual thermostat:

1. Hold the up and down buttons simultaneously for 2 seconds. The screen will change to display you have entered the user menu where you then select parameter '35'. The screen will display the currently assigned address ("Ad1" is the default assigned address).
2. Press the '✓'. The current address will flash with the parameter editing symbol. Press Up or down to amend the address and confirm with the tick.
3. Holding the '✓' button down will move you back through the user menu to the home screen.

Follow the pairing procedure for a heating circuit as per Section B.3.2 or the on-screen prompts when configuring a circuit. If successful, when you attempt to assign a wireless thermostat to a new circuit, multiple thermostats will be available to choose.

B.5 THERMOSTAT PANEL

Refer to Appendix A.3 for thermostat panel information.

B.6 USER MENU

The user menu is entered by holding simultaneously the up and down arrow buttons for 2 seconds. Individual parameters of the user menu are visible as consecutive indications displayed on the main screen as described in the table below.

Depending on the controller series, some operating modes and parameters in the user menu may not be visible.

The parameters are selected using the up or down buttons and the '✓' button is confirmed by the selection.

Table B-1: Thermostat menu

Code	Alert description
P01	Schedules
P02	Copying Schedules.
P03	Pairing
P04	Setting the clock.
P05	'Day' preset temp.
P06	'Night' preset temp.
P07	'Antifreeze' Preset temp.
P08	'Party' Preset temp.
P09	Time duration of the 'Party' mode. (hours)
P10	'Holiday' Preset temp.
P11	Time duration of the 'Holiday' mode. (days)
P12	Time duration of the 'Out of house' mode. (hours)
P13	Time duration of the 'Airing' mode. (mins)
P15	Activate/Deactivate Key sounds.
P16	Activate/Deactivate Alarm sounding. <i>Turning OFF will only display alarm symbol on LCD screen.</i>
P17	Activate/Deactivate Alarm sounding OFF between 22.00 and 06.00.
P18	Adjust Screen contrast. (%)
P19	Adjust LCD screen backlight. (%)
P20	Room thermostat temperature hysteresis. (°C)
P21	Activate/Deactivate parental lock.
P30	Display active Radio strength from the receiver. (%)
P31	Thermostat program version.
P32	Thermostat temperature correction (°C)
P34	Restore factory settings
P35	Thermostat address.
P41	Activate/Deactivate outdoor temperature indication.
P42	Show/Hide display on clock screen.

B.7 HOTEL MODE

Refer to Appendix A.6 for setting Wireless thermostat to Hotel mode.

B.8 MEMORY RESET OF THE WIRELESS RECEIVER

To perform a memory reset, hold down the **P** button in the receiver for approximately 8 seconds. The LED will blink after releasing the button confirming the action.

After performing a reset any required thermostats will need to be re-paired.

B.9 ALARMS

Refer to Appendix A.8 for error codes for wired and wireless thermostat panels.

APPENDIX C - 3-PORT MIXER VALVE

C.1 GENERAL

The Grant Aerona Smart controller can manage the temperature of an adjustable circuit with the use of a motorised rotary actuator mounted on a 3 port valve.

When configuring the system using the creator, if you choose to use a mixing valve the creator will prompt for a valve opening time. This value is the time the actuator would take to move fully from one end of its movement spectrum to the other under nominal power and is used to calculate movement for mixing.

C.2 CLOCKWISE ROTATION

C.2.1 ASSEMBLY

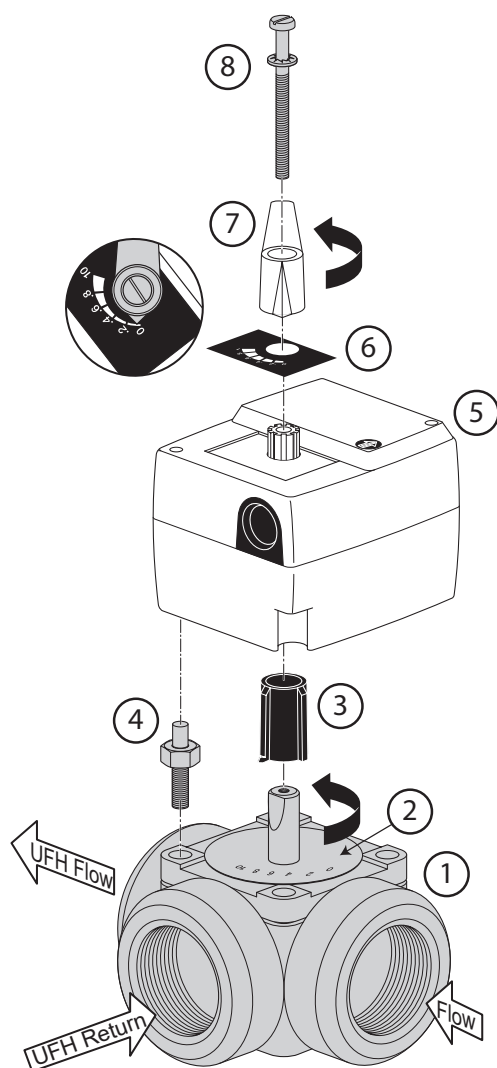


Figure C-1: Motorised Actuator and 3-Port Valve

Table C-1: Motorised Actuator and 3-Port Valve

Number	Description
1	3-Port valve
2	Body scale plate
3	Valve drive adaptor
4	Anti-rotation peg
5	Motorised actuator
6	Actuator scale plate
7	Rotary handle
8	Fixing Screw

To correctly assemble the 3-Port Mixing valve you will need to:

1. Ensure the clutch of the motorised actuator is disengaged allowing for free movement with the rotary handle. To disengage, place a screwdriver into the slot available, press down and turn clockwise. You will have disengaged when the arrow is facing the direction of the hand. Refer to Figure C-2.

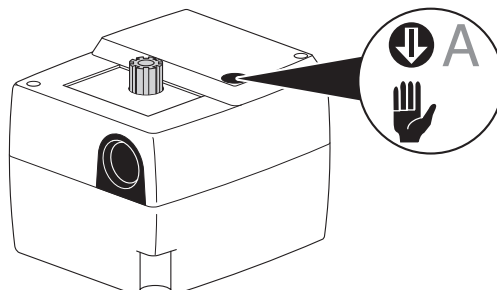


Figure C-2: Actuator gearing latch switch

2. Ensure actuator scale plate is in position and set as per Figure C-1. i.e. '0' to the left.
3. Fit the valve lever (supplied with the actuator) onto the splined shaft end. Rotate lever anticlockwise as far as possible. If necessary, remove and refit lever to point to '0' position on the scale.
4. Unscrew, remove and discard the fixing screw and blue handle attached to the supplied 3-port valve body
5. Fit the grey drive adaptor onto the 3-port valve spindle and turn until the pointer is facing the 0 position on the valve body scale plate. (The drive adaptor will only attach in one position).
6. Slot the Anti-rotation peg in place.

! NOTE !

If the Anti-rotation peg is not fitted the motorised actuator will spin in place and not turn the valve as required.

7. Place the motorised actuator onto the valve aligning the drive adaptor and ensure the Anti-rotation peg slots into the actuator body.
8. Insert the fixing screw through the rotary handle and fasten to a maximum torque pressure of 0.8Nm.
9. Reset the clutch of the actuator following step 1 to make the arrow point to A (Auto). If enabled the rotary handle will be locked in place.

C.2.2 WIRING

The electrical cable supplied with the actuator is connected as follows:

Table C-2: Electrical cable wiring

Colour	Description
Brown	230V drive to close the valve
White	230V drive to open the valve
Blue	230V neutral

The motorised actuator is connected via the 2 lives and 1 neutral connection to the wiring centre of either H2-M (Circuit 2) or H3-M (Circuit 3). The live connections power the motor in either direction to open or close the valve as required. Refer to Section 5 Figure 5-1 for wiring centre schematic.

For example for circuit 2:

- H2-M On (Terminal 3) - White
- H2-M Off (Terminal 5) - Brown

C.3 ANTI-CLOCKWISE ROTATION

C.3.1 ASSEMBLY

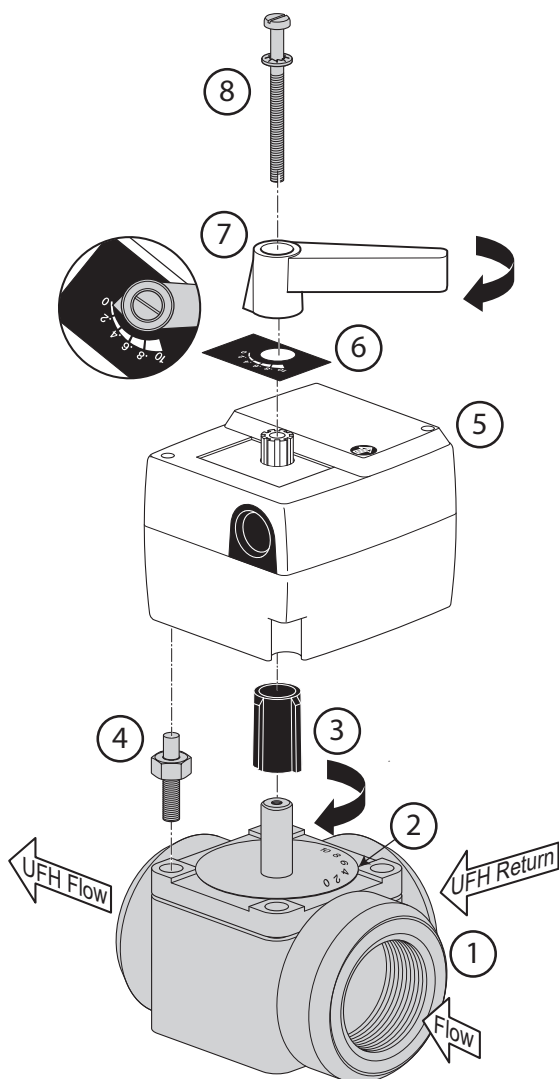


Figure C-3: Motorised Actuator and 3-Port Valve

To correctly assemble the 3-Port Mixing valve you will need to:

1. Ensure the clutch of the motorised actuator is disengaged allowing for free movement with the rotary handle. To disengage, place a screwdriver into the slot available, press down and turn clockwise. You will have disengaged when the arrow is facing the direction of the hand. Refer to Figure C-2.
2. Ensure actuator scale plate is in position and set as per Figure C-3. i.e. '0' to the right.
3. **Fit the valve lever (supplied with the actuator) onto the splined shaft end. Rotate lever clockwise as far as possible. If necessary, remove and refit lever to point to '0' position on the scale.**
4. Unscrew, remove and discard the fixing screw and blue handle attached to the supplied 3-port valve body.

! NOTE !

The body scale plate is reversible and should be checked to ensure correct orientation.

5. Remove the scale plate from the valve body. Carefully prise the circlip from the shaft. Lift the scale plate off, turn it over and refit with the '0' in the 3 O-Clock position. Refit circlip.
6. Fit the grey drive adaptor onto the 3-port valve spindle and turn until the pointer is facing the 0 position on the valve body scale plate. (The drive adaptor will only attach in one position).
7. Slot the Anti-rotation peg in place.

! NOTE !

If the Anti-rotation peg is not fitted the motorised actuator will spin in place and not turn the valve as required.

8. Place the motorised actuator onto the valve aligning the drive adaptor and ensure the Anti-rotation peg slots into the actuator body.
9. Insert the fixing screw through the rotary handle and fasten to a maximum torque pressure of 0.8Nm.

Reset the clutch of the actuator following step 1 to make the arrow point to A (Auto). When Auto is enabled the rotary handle will be locked in place.

C.3.2 WIRING

The electrical cable supplied with the actuator is connected as follows

Table C-3: Electrical cable wiring

Colour	Description
Brown	230V drive to open the valve
White	230V drive to close the valve
Blue	230V neutral

The motorised actuator is connected via the 2 lives and 1 neutral connection to the wiring centre of either H2-M (Circuit 2) or H3-M (Circuit 3). The live connections power the motor to move in either direction to open or close the valve as required. Refer to Section 4 Figure 4-1 for wiring centre schematic.

For example for circuit 3

- H3-M On (Terminal 6) - Brown
- H3-M Off (Terminal 8) - White

APPENDIX D - ANTI-LEGIONELLA & SUPPLEMENTARY HEATING

D.1 GENERAL

The Anti-Legionella & supplementary heating operation via the Grant Aerona Smart Controller provide control of immersion heater elements.

The Grant Smart immersion relay would be required to connect the Grant Aerona Smart controller to a standard immersion heater element in a DHW cylinder for Anti-Legionella protection.

The Grant External volumiser and Grant Combined volumiser/ Low-Loss header have a relay pre-installed and only need a 230V input to switch the relay. Refer to relevant installation documentation for further information.

D.2 WIRING

Supplementary heater relays are connected to H1 (Terminals 19 and 20) or H2 (Terminals 21 and 22). H1 (Buffer) is for use with an immersion heater installed in a Buffer, external volumiser or Low Loss header, while H2 (DHW) is dedicated for a DHW immersion heater connected to a Grant Smart immersion relay for Anti-Legionella protection. (Refer to Section 5 for electrical schematics).

A secondary power source, independent of the Grant Aerona Smart controller, must be provided for each relay used to activate the immersion heaters.

D.2.1 DHW CYLINDER IMMERSION HEATER

Connecting the Grant Smart Immersion relay to a DHW immersion heater will provide a legionella protection regime. Refer to Section D.3 for further guidance.

A switch (MCB) is provided to manually override the relay (only to be activated by a competent person). This will allow the cylinder to be heated by the immersion heater only should there be a failure of the heat pump and/or Grant Aerona Smart controller. Refer to

Figure D-1 for Dual voltage example with external switch.

D.2.2 SUPPLEMENTARY IMMERSION HEATER

Connecting the Grant Aerona Smart controller to a Grant external volumiser or Low Loss header can provide supplementary heating to assist in meeting a space heating demand. Refer to Figure D-1 for additional wiring requirements when connected in conjunction with a cylinder immersion.

D.3 LEGIONELLA PROTECTION

Legionella protection can be scheduled on a weekly basis to heat the DHW cylinder to 60°C. Legionella disinfection should be scheduled in a window that is a minimum of 1 hour after a DHW demand and in a setback heating demand period e.g. Overnight. This is to minimise the heat loss in the heating circuits during DHW demands.

The Legionella protection provided by the Smart Controller can only be set to run once in a seven day period. Refer to Section 7.4 for Legionella protection.

D.4 SUPPLEMENTARY HEATING

The Grant Aerona Smart controller can enable supplementary heating using an immersion heater in a Grant External volumiser or Grant Combined volumiser/Low Loss header.

The Smart Controller enables the user to configure the time delay for the immersion heater to switch on after a specific demand has begun. Refer to Section 8 - Heaters for the settings of the time delay as well as temperature activation set points.

! WARNING !

There will 2 mains supplies within the Immersion relay enclosure. Ensure both are isolated before removing the cover.

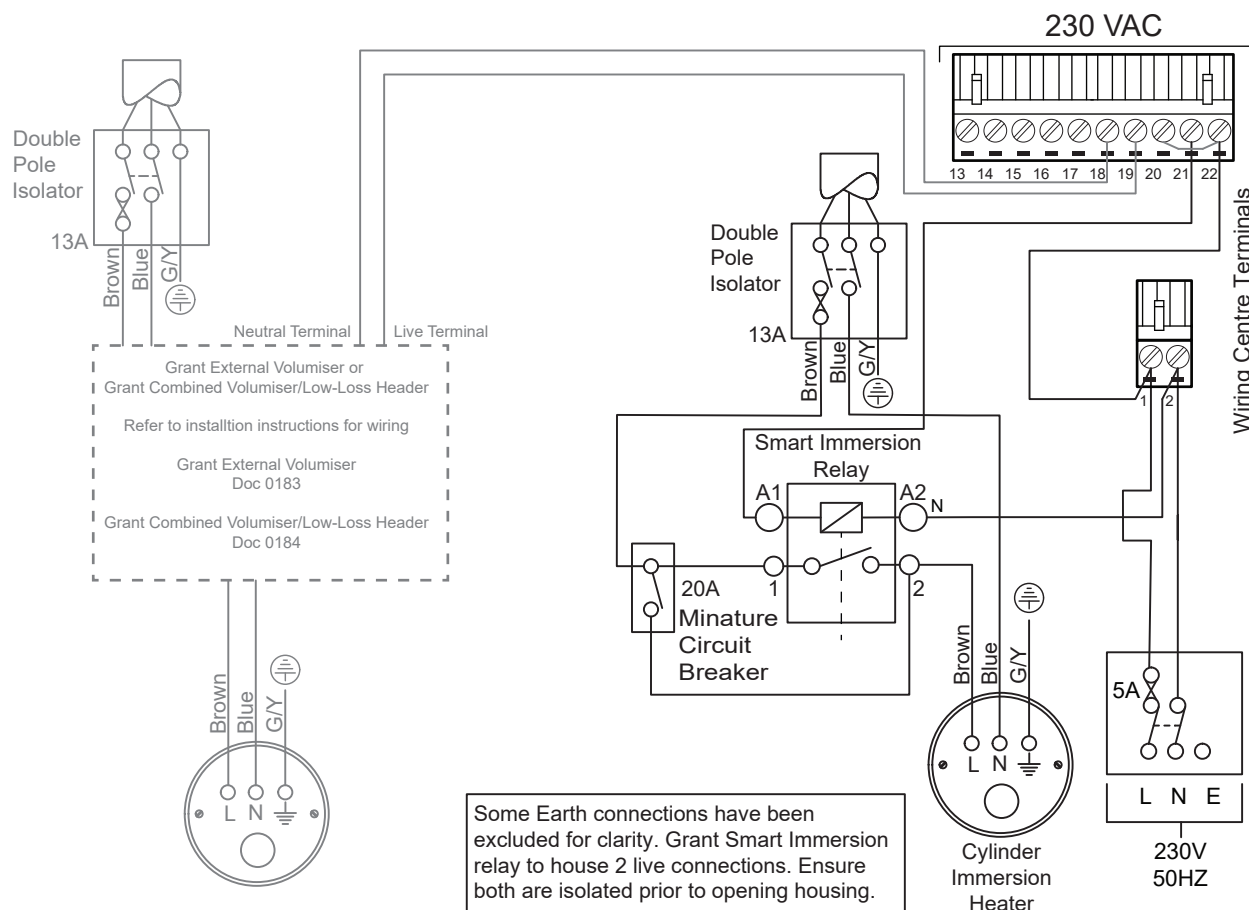


Figure D-1: Supplementary heating examples

APPENDIX E - SMART FLOW SENSOR

E.1 GENERAL

The Grant Smart Flow sensor is designed to measure the flow rate within the installed system to determine the power output and the coefficient of performance (COP). Over time the function will also show the running SCOP.

E.2 INSTALLATION

The Grant Smart Flow sensor should be installed in a location that limits any interference to the measurements given to the Grant Aerona Smart controller. We recommend the minimum system pressure to be 1.4 bar to avoid damage from bubble formation and cavitation. You must take all due care to avoid water hammers during both installation and normal operation.

! CAUTION !

The sensor in the measuring tube of the Grant Flow sensor should not be exposed to mechanical loads.

For the optimum measurement accuracy the Grant Aerona Smart Flow sensor should be installed as per A in Figure E-1. Vertically with increasing flow allows for the discharge of bubbles upwards and no danger of dirt or sediment deposits within a completely filled pipeline.

Position B would be suitable when installing horizontally but interference from vortices created by bends can occur.

Position C is unsuitable due to being the top of the circuit and misreadings from bubbles formation and possible run empty.

Position D would be unsuitable again from possible run empty and bubble discharge moving back through the flow sensor.

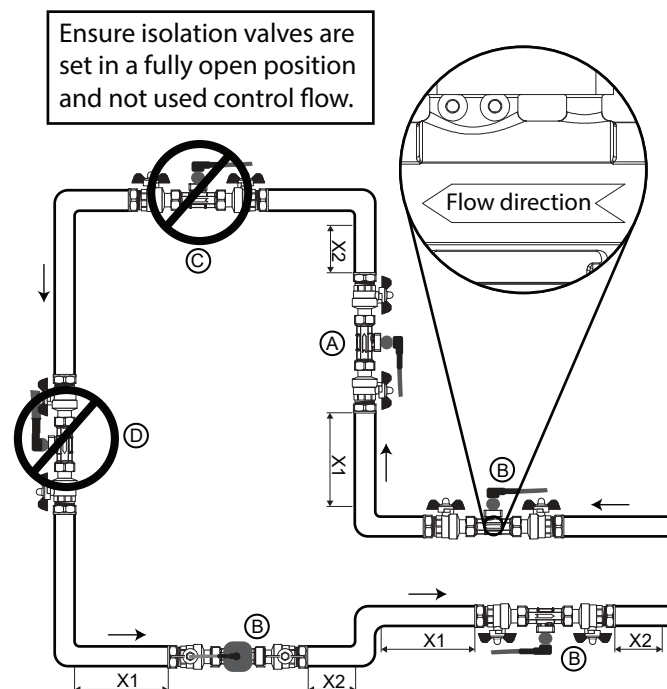


Figure E-1: Smart Flow sensor positioning

Table E-1: Calming Section measurements

Inlet Section (X1)	Outlet Section (X2)
Minimum 10x DN	Minimum 5 DN

For example, for a pipe diameter of 28mm:

10 x 28mm = 280mm straight pipe before inlet to flow sensor before any bend or fitting

5 x 28mm = 140mm straight pipe after outlet of flow sensor before any bend or fitting.

! NOTE !

Changes in pipe diameter should be treated the same as bends and have suitable calming sections.

The Smart flow sensor should be fitted on the return to the heat pump and be after the Grant Mag One filter, observing the calming section required for the inlet. When a suitable location has been determined:

1. Install suitable pipe fittings.
2. Ensure the flow sensor is correctly positioned as shown by the flow indicator on the outer body.
3. Insert the flow sensor with the O-rings as supplied.
4. Ensure the O-rings are correctly positioned on each end of the flow sensor before fitting the valve union nuts.

! CAUTION !

Avoid over tightening the union nuts and ensure to apply an equal counter force the union nut by using the hexagon of the Smart Flow sensor (Maximum torque of 15Nm). Ensure the electrical connection is pointing upwards or outwards.

E.3 ELECTRICAL

The Grant Smart Flow sensor is supplied with a pre-wired 5 core cable and connector.

- Align the connector with the flow sensor, taking note of the key.
- Insert and secure with the nut. Do not force or overtighten beyond hand tight.

Refer to Table E-2 and Section 5 pack schematics for wiring connections.

Table E-2: Smart Flow sensor wire connections

Wire Colour	Terminal Connection
Brown (Voltage)	+12V (G1 or G4)
White (Not connected)	-
Blue (Ground)	Terminal 32
Black (Signal)	Terminal 31
Grey (Not connected)	-

E.4 SENSOR CONFIGURATION

Once installed the Grant Aerona Smart controller will need to be configured to use the Smart Flow sensor. You will need to access the flow sensor settings. This is found in service settings (Refer to Section 8).

Table E-3: Smart Flow Sensor configuration settings

Parameter	
Flow Meter	Pulse
Specific Heat Capacity	4.180
Time detect(seconds)	120
Time alarm erase(seconds)	30
No flow detection threshold (M³/h)	0.1
No flow detection hysteresis (M³/h)	0.1
Pulse rate	200
Pulse counting time(seconds)	1
Too often alarm	3

APPENDIX F - COMMISSIONING CHECKLIST

After you have completed the initial setup and system configuration creator, follow and complete the points below. Some of the settings will already be set by the System Configuration creator. Ensure you have the devices required wired correctly.

[illegible]

Feature	Function Description	Manual Reference	Set Value
Circuit Hysteresis Values	Hysteresis values for installed Heat emitters. <ul style="list-style-type: none"> Radiators Underfloor Heating 	Section 7.3.1.3 Section 7.3.1.3	4°C 1°C
Installer only - Settings for all Grant Aeron Smart Controller installations.			
Flow sensor	Configure the Grant flow sensor.	Appendix E	
Common HP Parameters	Check and adjust HP parameters (Refer to Table 6-2).	Section 6.5	
Heat Pump Schedule	Configure Heat Pump work mode.	Section 7.6	ON
Smart Controller Work mode	Configure the Grant Aeron Smart controller for heating only.	Section 7.3.3	Work Mode: Winter
DHW Heater Support	Configure DHW Heater for Legionella Protection <ul style="list-style-type: none"> DHW Heater DHW Heater (delay) <i>This DHW Heater (delay) setting is based on a scheduled 1 hour DHW demand.</i>	Section 7.4 Section 8	ON 75mins
Installer & end-user - Settings for Grant Aeron Smart Controller installations.			
Wi-Fi Hub	Connect the Wi-Fi Hub to end user internet connection. (Ethernet/Wi-Fi) End user to register UID with www.econet24.com . (UID to be recorded for remote access & Grant UK registration.)	Section 10 Appendix H	
Heating circuit Day Mode temperature	Demonstrate and configure target air temperature for the heating circuit(s) for Day/Occupied times.	Section 7.3.1.2 Section 7.3.1.3	
Heating Circuit Night mode temperature (Setback)	Demonstrate and configure target air temperature for the heating circuit(s) for Night/Unoccupied times. <i>Refer to Table 7-4 for suggested subtractive values based on circuit emitters.</i>	Section 7.3.1.2 Section 7.3.1.3	
DHW Cylinder temperature	Demonstrate and configure target DHW cylinder temperature.	Section 7.3.2.1	
Heating Circuit schedules	Demonstrate and configure Heating Circuit(s) schedule for Day/Night modes.	Section 7.5	Work mode: Auto
DHW Cylinder schedules	Demonstrate and configure DHW cylinder Schedules as well as 'BOOST'.	Section 7.3.2.2	Work Mode: Auto
Legionella protection	Check/Enable 'DHW HEATER' support. Enable and demonstrate & configure 'DISINFECTION'. (Day and Time specified by Cylinder schedule).	Section 7.4.1 Section 7.4.2	ON Temp: 60°C
Thermostats (If installed)	Demonstrate use to Thermostat panels to amend circuit target temperatures. Demonstrate how to assign/pair Thermostats to individual circuits. <i>End user will need to be informed if thermostats are being used as circuit controls and the issues related to removing them.</i>	Appendix A & B Section 7.3.1.1	
System Default	Save System default to Grant Smart Controller memory. Demonstrate how to recall a saved system default.	Section 7.10	

APPENDIX G - AERONA³ RETROFIT

G.1 GENERAL

It is possible to retrofit the Grant Aerona Smart controller to an existing installed Grant Aerona³ air source heat pump, following the guidance provided.

G.2 SERIAL NUMBER

Grant Aerona³ R32 heat pumps manufactured on or after the date/serial number given in Table G-1 for that specific model can be retrofitted with the Grant Aerona Smart controller, provided the previously supplied Aerona Remote controller remains connected to the heat pump.

The Aerona Remote controller can be removed only if the heat pump control PCB is replaced with the current version. The control PCB is not supplied as part of the Grant Aerona Smart controller kit but is available to purchase from Grant Engineering UK Ltd. (Part Code: HPID885765)

All Grant Aerona³ R32 and R410 heat pumps manufactured before the date/serial number given in Table G-1 for that specific model must have the heat pump control PCB replaced with the current version to enable it to be retrofitted with the Grant Aerona Smart controller. In this case, it is not necessary for the Grant Aerona remote controller to remain connected to the heat pump.

Table G-1: Pre February 2024 Serial numbers

Aerona ³ model	Date of manufacture	Serial number
HPID6R32	05/02/2021	6002007
HPID10R32	21/01/2021	6002249
HPID613R32	19/11/2020	6001193
HPID617R32	19/11/2020	6001401

This serial number for the heat pump can be found on the heat pump data label.

The data label is located on the outside of the heat pump casing:

- on the rear of the HPID6 models.
- on the right-hand end of the HPID10, HPID13 and HPID17 models.

G.3 EXISTING CONTROLS

The existing controls will need to be disconnected from terminals 18, 19 and 20 on heat pump terminal PCB and removed as they will no longer be required. Existing space heating and hot water controls (room thermostats, cylinder thermostats, etc.) are also no longer required as these will be replaced during a Smart Controller installation. Refer to Section 3 for required components and Section 5 for Wiring.

All system & heat pump control functions including accessing and setting the heat pump operating parameters, fault codes and real time information, will be provided by the Grant Aerona Smart controller that will be connected to the heat pump via the Modbus connection (terminals 15 and 16) on the heat pump terminal PCB. Refer to Section 3 and 5 of the Smart Controller installation Instructions for further details.

If the previously installed Aerona Remote controller remains connected to the heat pump it effectively acts as an on/off switch for the heat pump and must be set to **ON** (Green LED is illuminated – Refer to figure G-1) for it to operate.

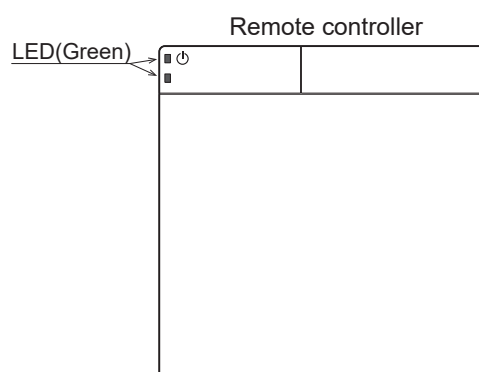


Figure G-1: Aerona Remote controller ON status

G.4 UNDERFLOOR HEATING CONTROLS

If the heating system includes underfloor heating, the underfloor heating controls (room sensors, wiring centres, etc.) will need to be retained if it is intended that they will be used with the Smart Controller.

These can be connected to the Smart Controller wiring centre, as required. Refer to the Smart Controller Installation instructions Section 5 for further details.

APPENDIX H - ECONET

H.1 ECONET24

The ecoNET24 platform provides remote access to the Aerona Smart controller for monitoring and management.

There are two levels of account access:

- **Homeowner** – ability to monitor and control a single installation. A customer's personal data is only visible at this level.
- **Installer** (Service engineer) – ability to monitor and control multiple installations. Each controller UID must be added independently to be visible on this account. Remote monitoring and access is possible if homeowner has set their system to 'PREVIEW' or 'MODIFICATION' mode. Remote monitoring and access will not be possible if homeowner has 'FORBIDDEN' access.

H.1.1 HOMEOWNER ACCOUNT REGISTRATION

The Homeowner account is designed to only monitor a single Aerona Heat Pump installation with a smart controller. This account should be set up under the homeowner's email address and can be accessed from either the ecoNET app or web-based portal. The homeowner will need to agree to the Terms of Use.

! NOTE !

To use the app you will need to first register via the website at www.econet24.com.

If you are creating a homeowner account for the first time, you will need to enter the UID as part of the registration process. The ecoNET web-portal will verify the UID is both correct and available to be assigned to an account before the homeowner can enter any further details. Refer to Section H.1.2 on how to obtain the UID from your Grant Aerona Smart controller.

A homeowner with an existing ecoNET account can assign their controller UID to their ecoNET account within the web based ecoNET portal by navigating to the top right corner, selecting the person icon and then 'MY ACCOUNT' from the drop down menu. In the left hand menu, select 'MANAGE DEVICES'. Here you'll see the 'ADD CONTROLLER' field. Enter the UID and click Submit.

When the account is registered, the Wi-Fi hub will display it is connected with the external server ('Server connection' LED indicator will be active).

H.1.2 HOW TO OBTAIN THE UID

Follow the steps to obtain the UID.

1. When the heating circuit control interface is shown (see Figure 7-1), tap settings menu. Refer to Table 7-1 and Figure H-1.

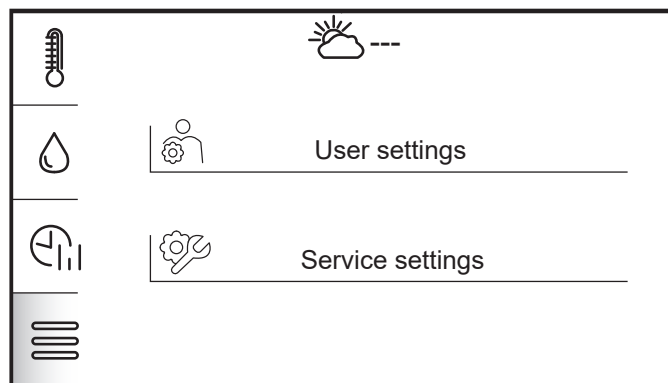


Figure H-1: Settings selection

2. Then tap the User settings. Refer to Figure H-2.

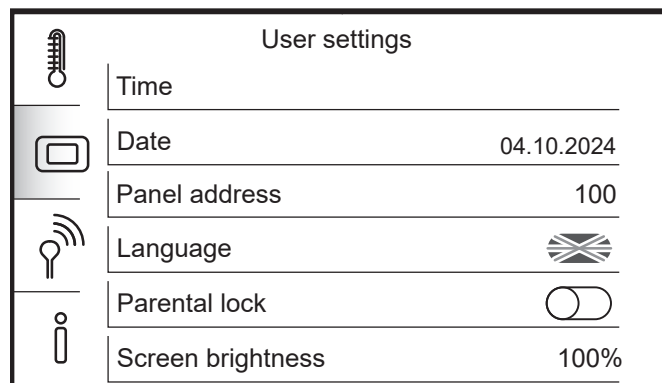


Figure H-2: User settings menu

3. Tap the information icon at the bottom. Refer to Figure H-3.

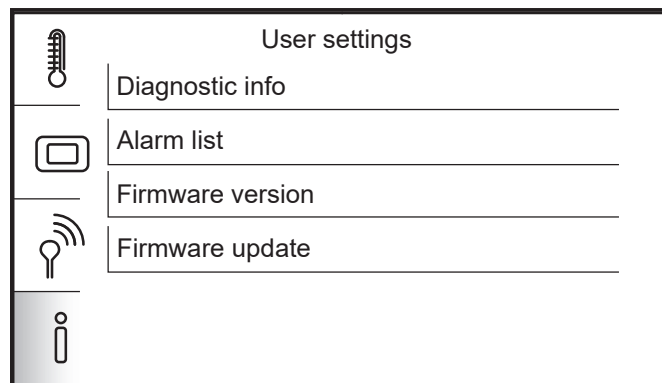


Figure H-3: Controller information options.

4. Then tap 'FIRMWARE VERSION'. Refer to Figure H-4.

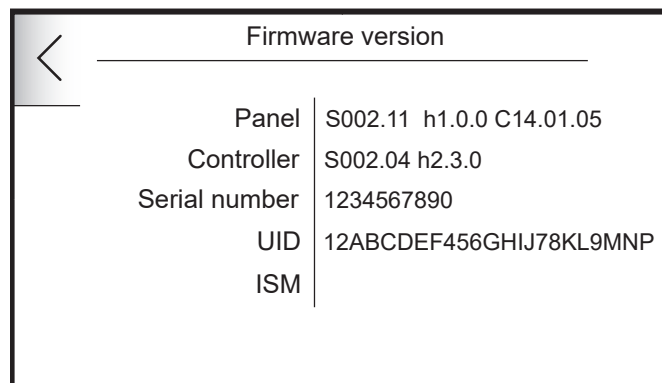


Figure H-4: Firmware version and UID

H.1.3 REMOTE ACCESS MANAGEMENT

Within the ecoNET account via the web-portal, the homeowner can also control remote external access rights to their smart controller installation. This setting applies to all available external access accounts.

- Navigate to 'DEVICE SETTINGS' on the web-portal home screen.
- Locate 'OTHER SETTINGS' at the bottom of the list on screen.
- The label given to the installation will be displayed along with a drop down that will present the 3 options available.
 - **Preview** – Read only access
 - **Modification** – Edit access
 - **Forbidden** – No access

H.1.3 TRANSFER OF OWNERSHIP

If the smart controller UID is assigned to an account, it will first need to be removed.

An existing homeowner can remove the UID from their account via the web based ecoNET portal by navigating to the top right corner, selecting the 'PERSON ICON' and then 'MY ACCOUNT' from the drop down menu. In the left-hand menu, select 'MANAGE DEVICES'. Here you'll see the 'REMOVE CONTROLLER' field with the controller UID listed. Select this and click 'SUBMIT' to remove it from the account.

To assign the UID to a different/existing account, the user should follow the same steps but use the 'ADD CONTROLLER' field to enter the UID and click 'SUBMIT'.

An incoming homeowner without an ecoNET account will need an unassigned UID to start the registration of their ecoNET24 account. (Refer to Section H.1.1).

! NOTE !

A device UID can only be registered to a single ecoNET24 homeowner account.

H.1.4 G1 REMOTE ACCESS ACCOUNT

This account level is available to G1 heat pump installers only and can only be accessed via the ecoNET web-based portal.

G1 heat pump installers can apply for this account level through their G1 Portal. In the left-hand navigation menu, click on 'ECONET24 APPLICATION' and complete the form. Following submission, this form will be sent to the software provider and a copy to the Pre-Sales Technical Team.

We recommend this account be setup in advance of their first (or next) smart controller installation. This will allow the G1 installer to both check the functionality and demonstrate it for the homeowner.


G1 heat pump installers can apply for this account level through their G1 Portal. In the left-hand navigation menu, click on 'ECONET24 APPLICATION' and complete the form.

The Grant Pre-Sales technical team will issue login details including a temporary password to the G1 heat pump installer via email within 48 hours. The installer should consider changing their password on their first log in.

For the installer to add a controller, the homeowner account must first be registered. To allow permission for remote access the homeowner must toggle the remote access rights to be either 'PREVIEW' (read only) or 'MODIFICATION'. Refer to Section H.1.3.


For more information about the G1 Installer Scheme, please visit:

Table H-1: QR Code - G1 Scheme Overview


QR Code	Link
	GrantUK G1 Scheme Overview www.grantuk.com/professional/g1-scheme/

ONLINE RESOURCES


AERONA SMART CONTROLLER - HOW TO PLAYLIST

QR CODE	DESCRIPTION
	<p>How to video guides playlist for the Grant AERONA Smart Controller.</p> <p>The playlist offers a number of helpful guides on how to set individual elements of the Grant AERONA Smart controller and is monitored and updated to ensure the best possible assistance is available.</p> <p>Can't find something specific? Email info@grantuk.com or contact your local sales representative for further assistance.</p>

ECONET24 - HOW TO PLAYLIST

QR CODE	DESCRIPTION
	<p>How to video guides playlist for the ecoNET24 web services.</p> <p>The playlist offers a number of helpful guides on how to register and administer a ecoNET24 online account and remote management of a registered Grant AERONA Smart controller.</p> <p>Can't find something specific? Email info@grantuk.com or contact your local sales representative for further assistance.</p>

SCHEMATICS

QR CODE	DESCRIPTION
	<p>Grant UK online portal for approved schematic drawings.</p> <p>The schematics provided give a generalised idea on how to hydraulically and electrically design an installation using the Grant AERONA Smart controller.</p> <p>For further information or queries please contact into@grantuk.com or your local sales representative.</p>

NOTES



GRANT ENGINEERING (UK) LIMITED

Frankland Road, Blagrove Industrial Estate, Swindon, Wiltshire, SN5 8YG

Tel: +44 (0)1380 736920 Fax: +44 (0)1380 736991

Email: info@grantuk.com www.grantuk.com